

FORWARD SENSING CAMERA (FSC) SHORT-CORD INSPECTION


id092200032000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Cover (See FORWARD SENSING CAMERA (FSC) REMOVAL/INSTALLATION.)
 - (2) Auto-dimming mirror (See AUTO-DIMMING MIRROR REMOVAL/INSTALLATION.)
 - (3) FSC short-cord (See FORWARD SENSING CAMERA (FSC) SHORT-CORD REMOVAL/INSTALLATION.)
3. Verify that the continuity between the FSC short-cord terminals is as indicated in the table.

○—○ : Continuity

Test condition	Terminal													
	Vehicle wiring harness (C27) side connector							Auto light sensor / rain sensor side connector			FSC side connector			
	A	B	C	D	E	G	H	A	B	D	A	C	E	I
Under any condition	○													○
		○								○				
			○									○		
				○				○						
					○								○	
						○					○			
							○		○					

ac5jjw00001285

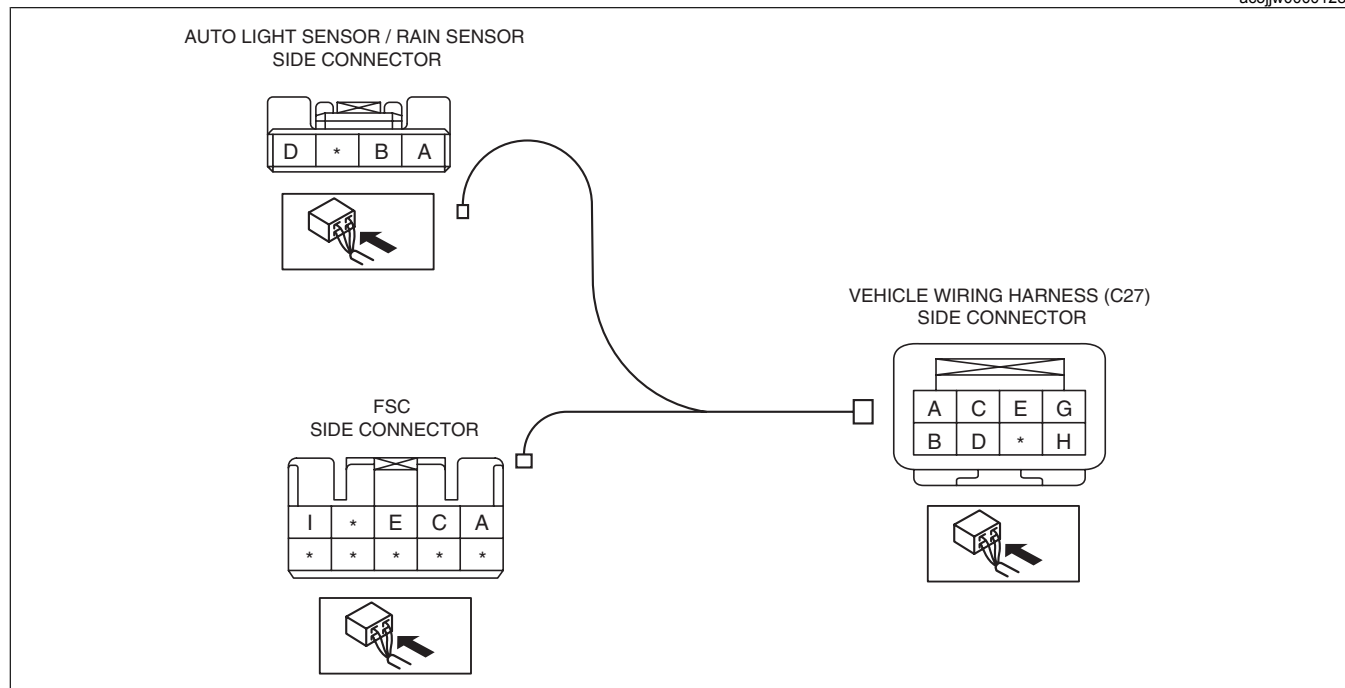

ac5jjw00001286

- If not as indicated in the table, replace the FSC short-cord.