


COWL PANEL REMOVAL/INSTALLATION

id091000802000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
 - (2) Cowl grille (See COWL GRILLE REMOVAL/INSTALLATION.)
 - (3) Windshield wiper motor (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.)
 - (4) Keyless beeper (See KEYLESS BEEPER REMOVAL/INSTALLATION.)
3. Remove clips A.

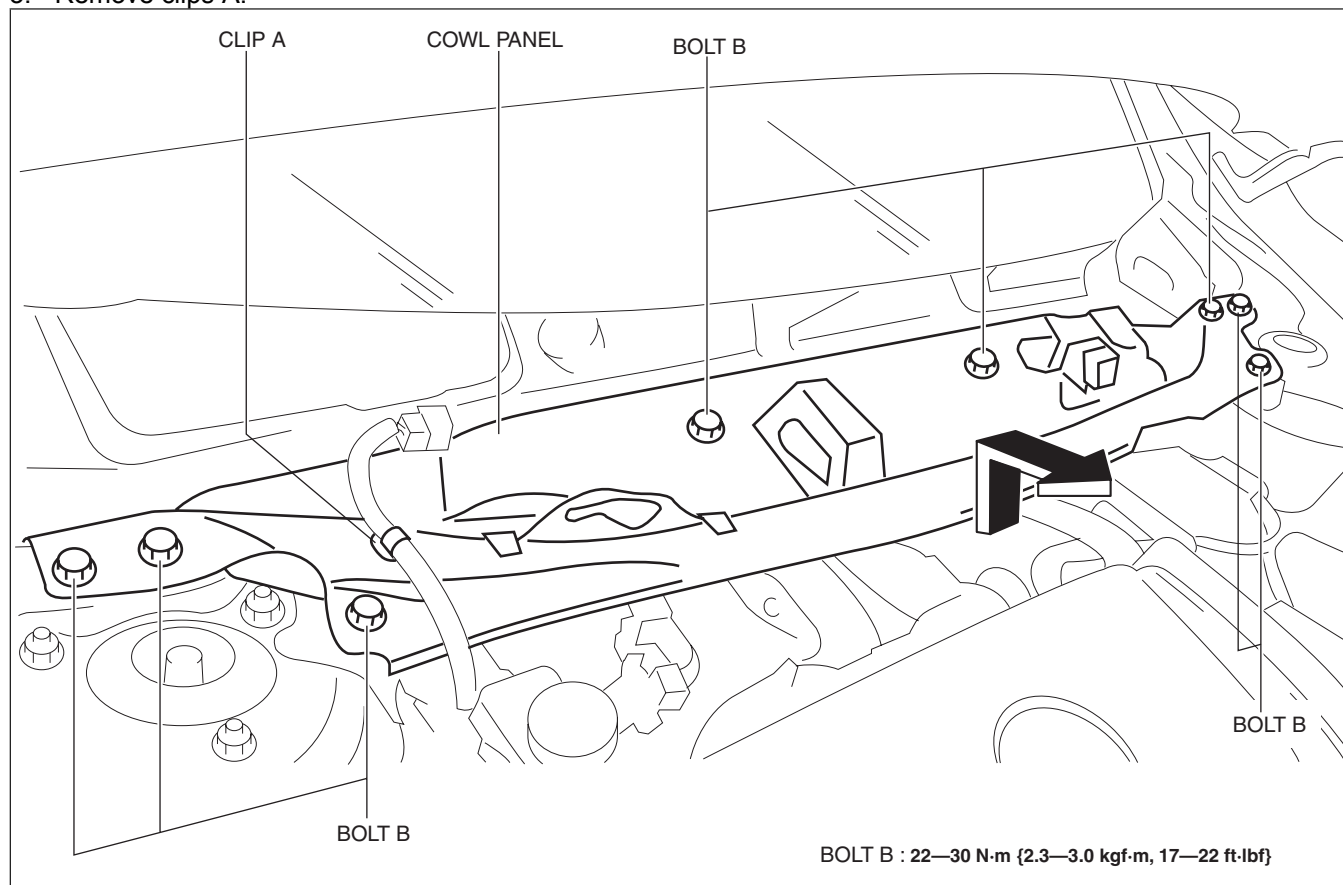

4. Remove bolts B.
5. Remove the cowl panel in the direction of the arrow shown in the figure.
6. Install in the reverse order of removal.

ac5wzw00003018