


REAR DRIVE SHAFT INSPECTION

id031300801300

1. Inspect each connecting part for looseness.
 - Tighten or replace parts if necessary.
2. Inspect the dust boot on the drive shaft for cracks, damage, leaking grease, and looseness in the boot band.
3. Inspect the drive shaft for bends, cracks, and wear in the joints or splines.
 - Repair or replace the drive shaft or boot band if necessary.

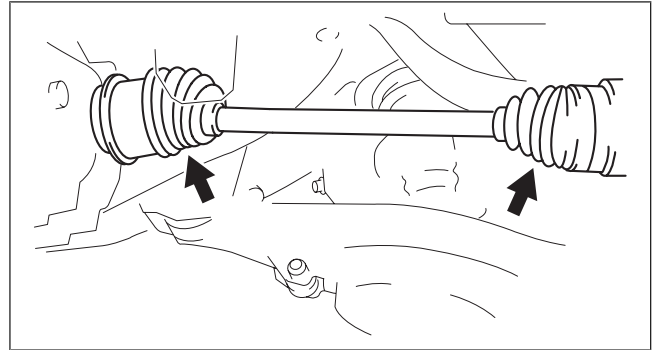

ac5uuw00000271