


## TWEETER REMOVAL/INSTALLATION


id092000808000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the side speaker grille. (See SPEAKER GRILLE REMOVAL/INSTALLATION.)
3. Remove the screws.

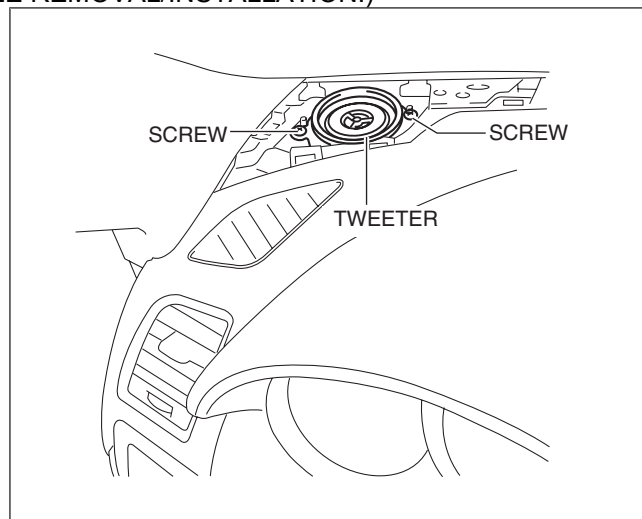

ac5jjw00000159

4. Pull out the tweeter and disconnect the connector.
5. Install in the reverse order of removal.

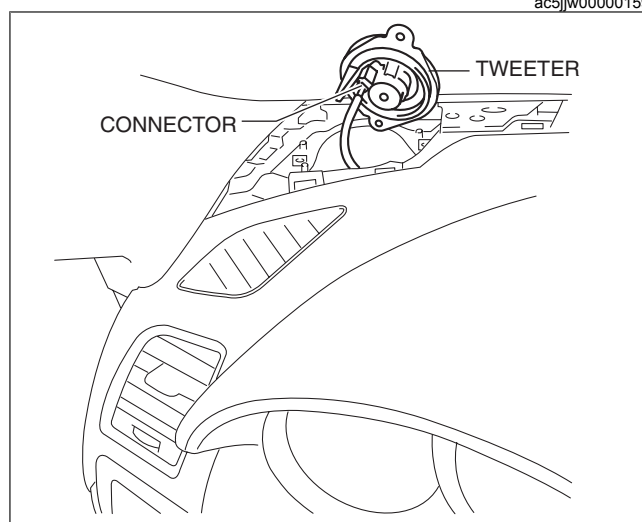

ac5jjw00000480