

PARKING SENSOR SWITCH

id092200024600

Purpose


- The parking sensor system can be optionally switched between operable and inoperable.

Function

- The switch operation signal is sent to the parking sensor control module.

Construction


- The parking sensor switch is built into the climate control unit.

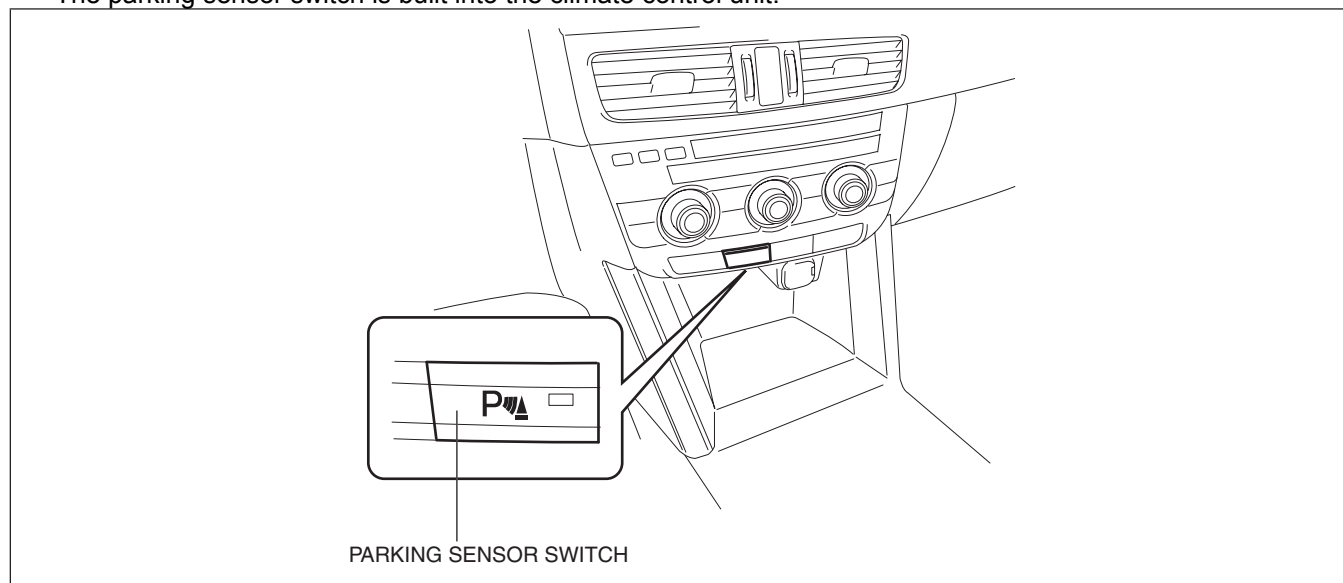

ac5ijn00001523

Operation

1. When the parking sensor switch operates, the switch operation signal is sent to the parking sensor control module.
2. When the parking sensor control module receives the parking sensor switch operation signal, it switches the parking sensor system on/off.

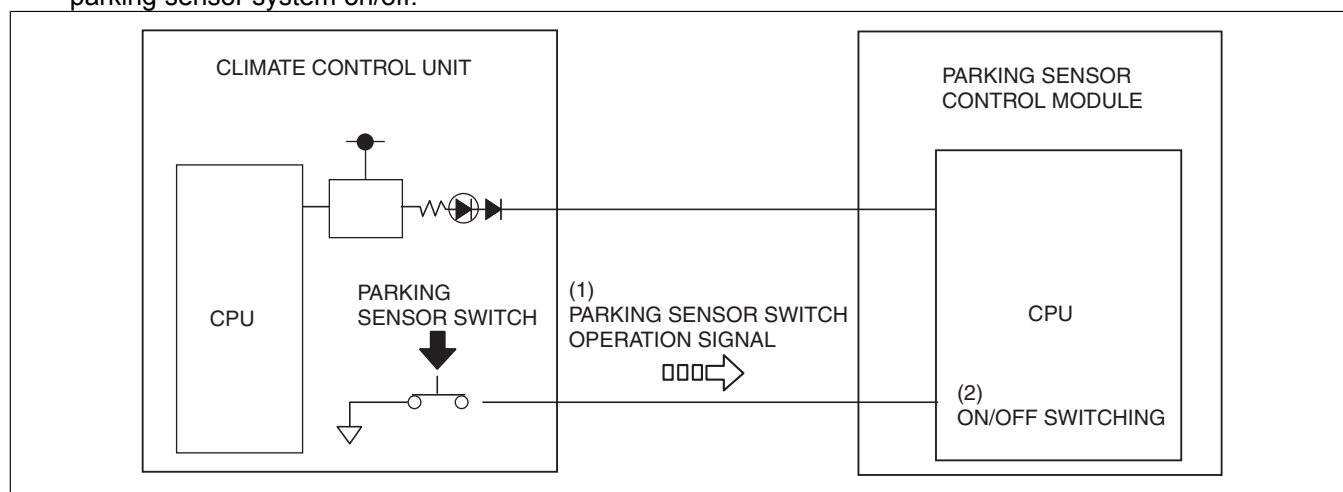

ac5ijn00001524

Fail-safe

- Function not equipped.