



i-stop CONTROL

id11110000100

i-stop Control Outline SKYACTIV-G 2.0, SKYACTIV-G 2.5 (MTX)

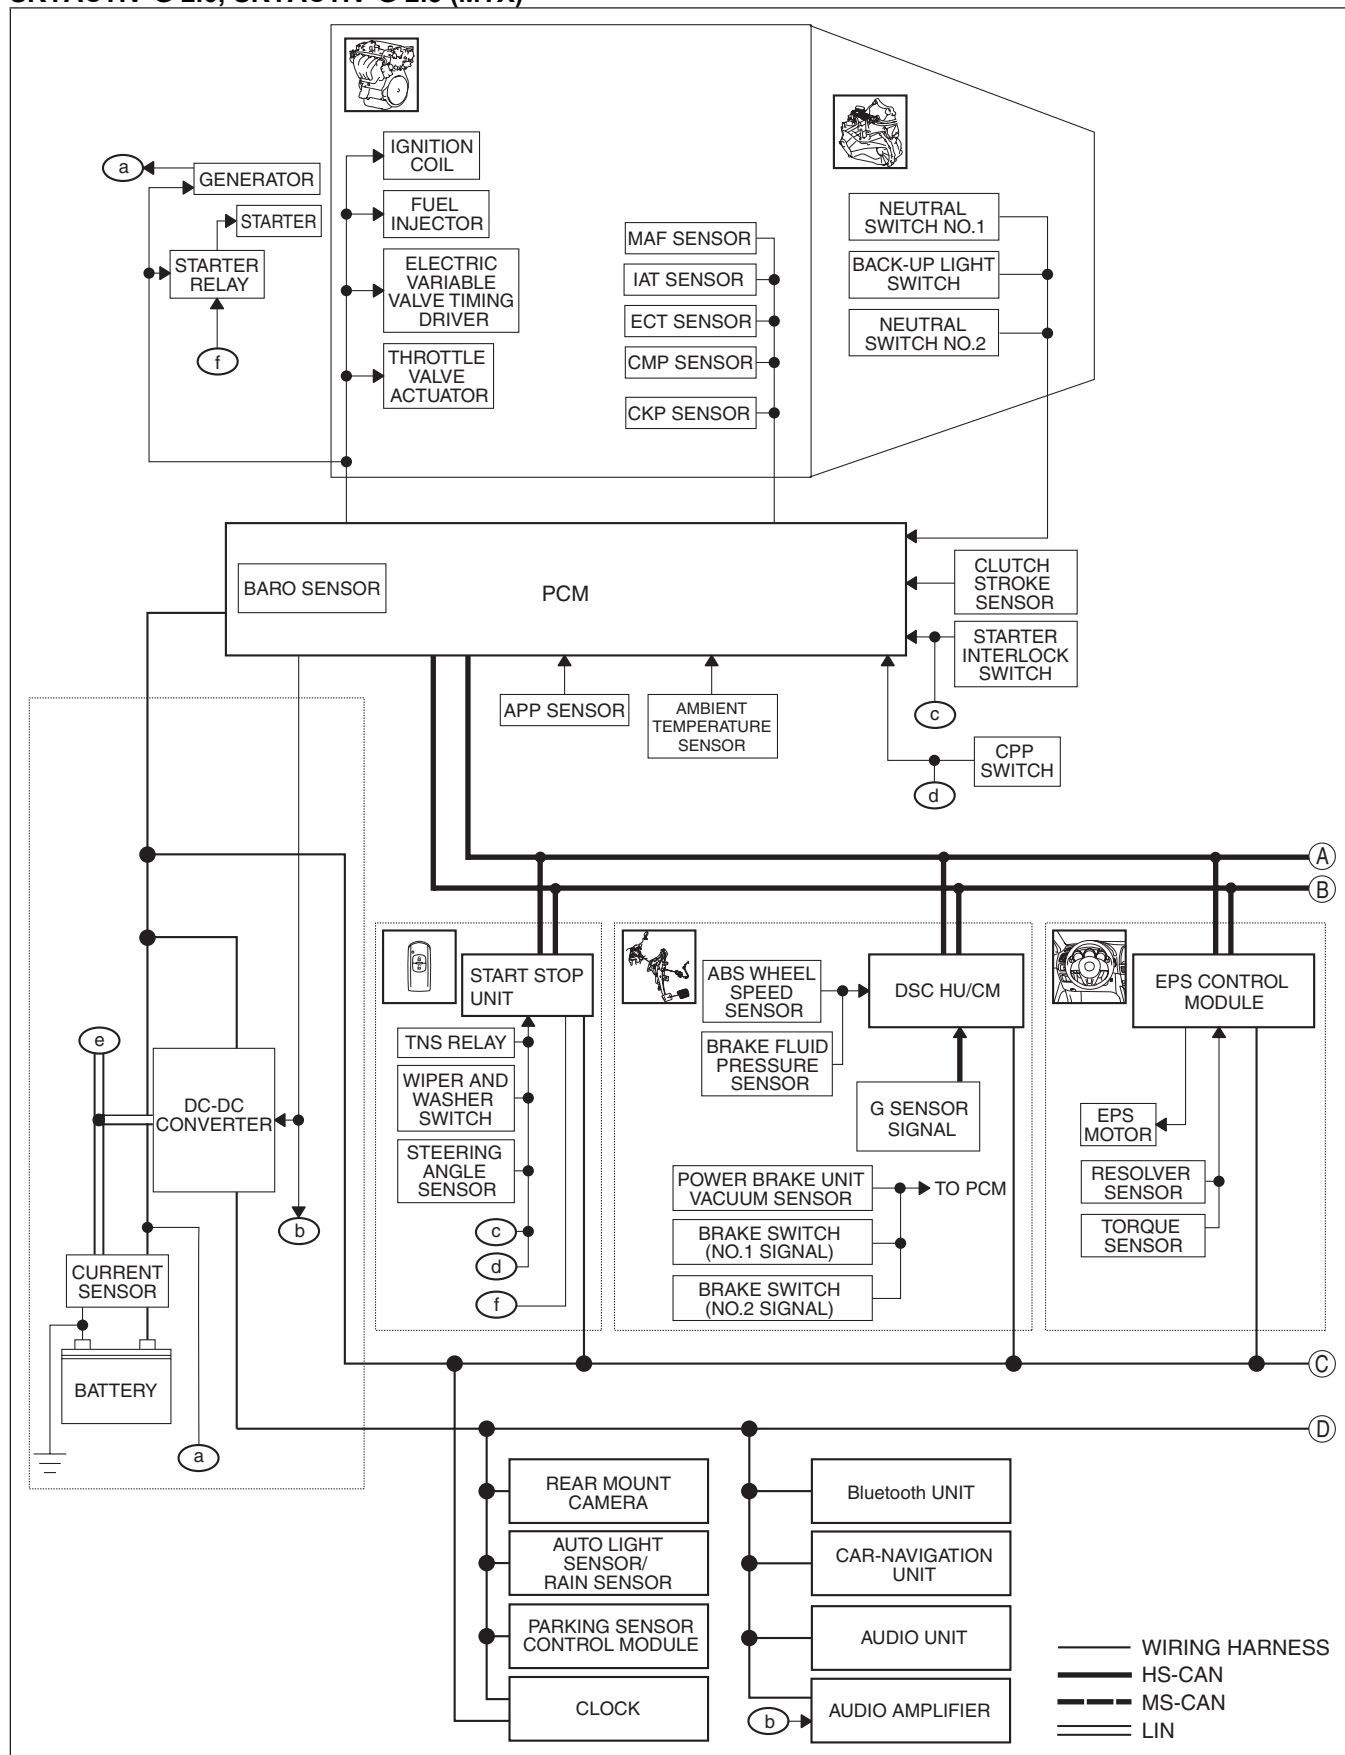



ac5wzn00001866

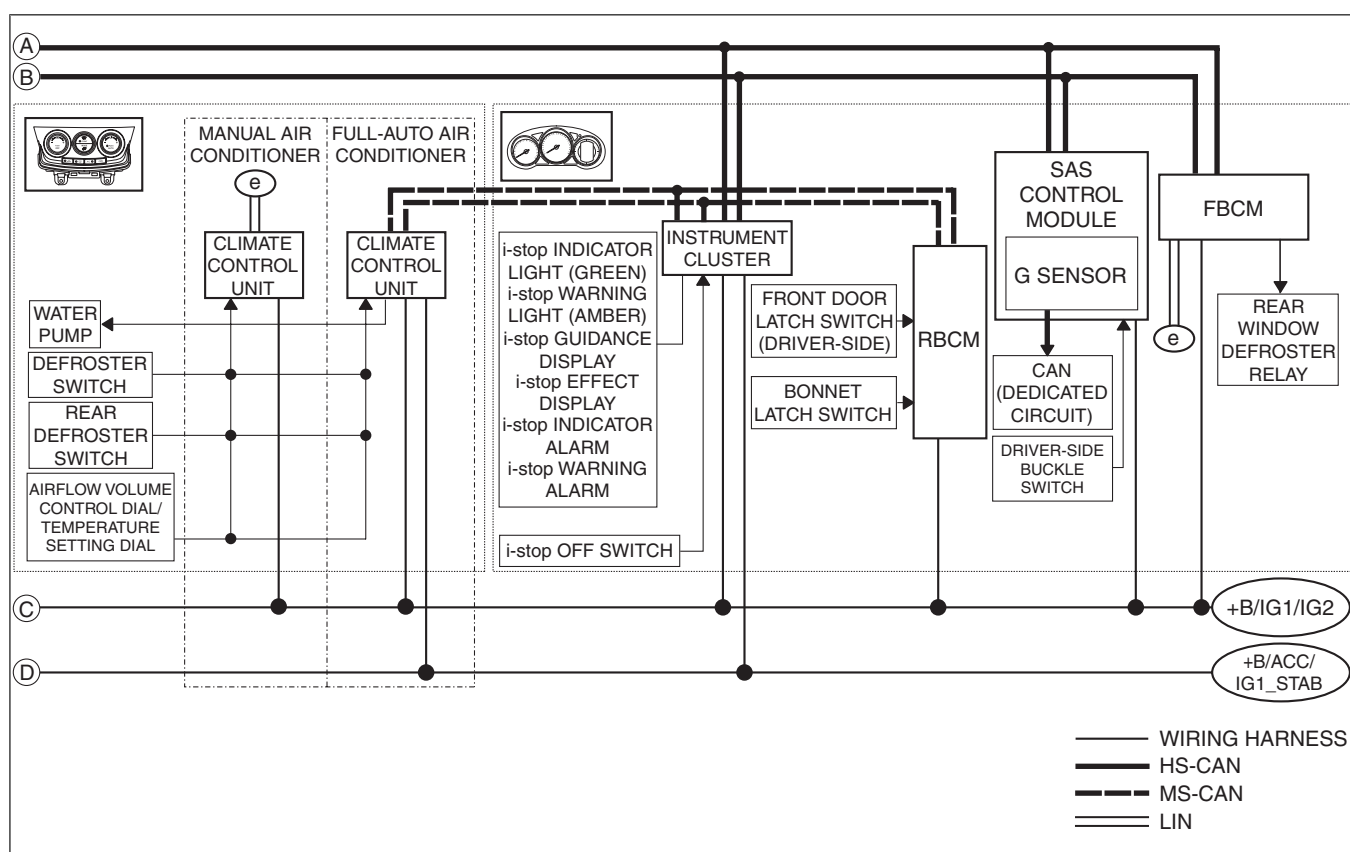

ac5wzn00002363


SKYACTIV-G 2.0, SKYACTIV-G 2.5 (ATX)

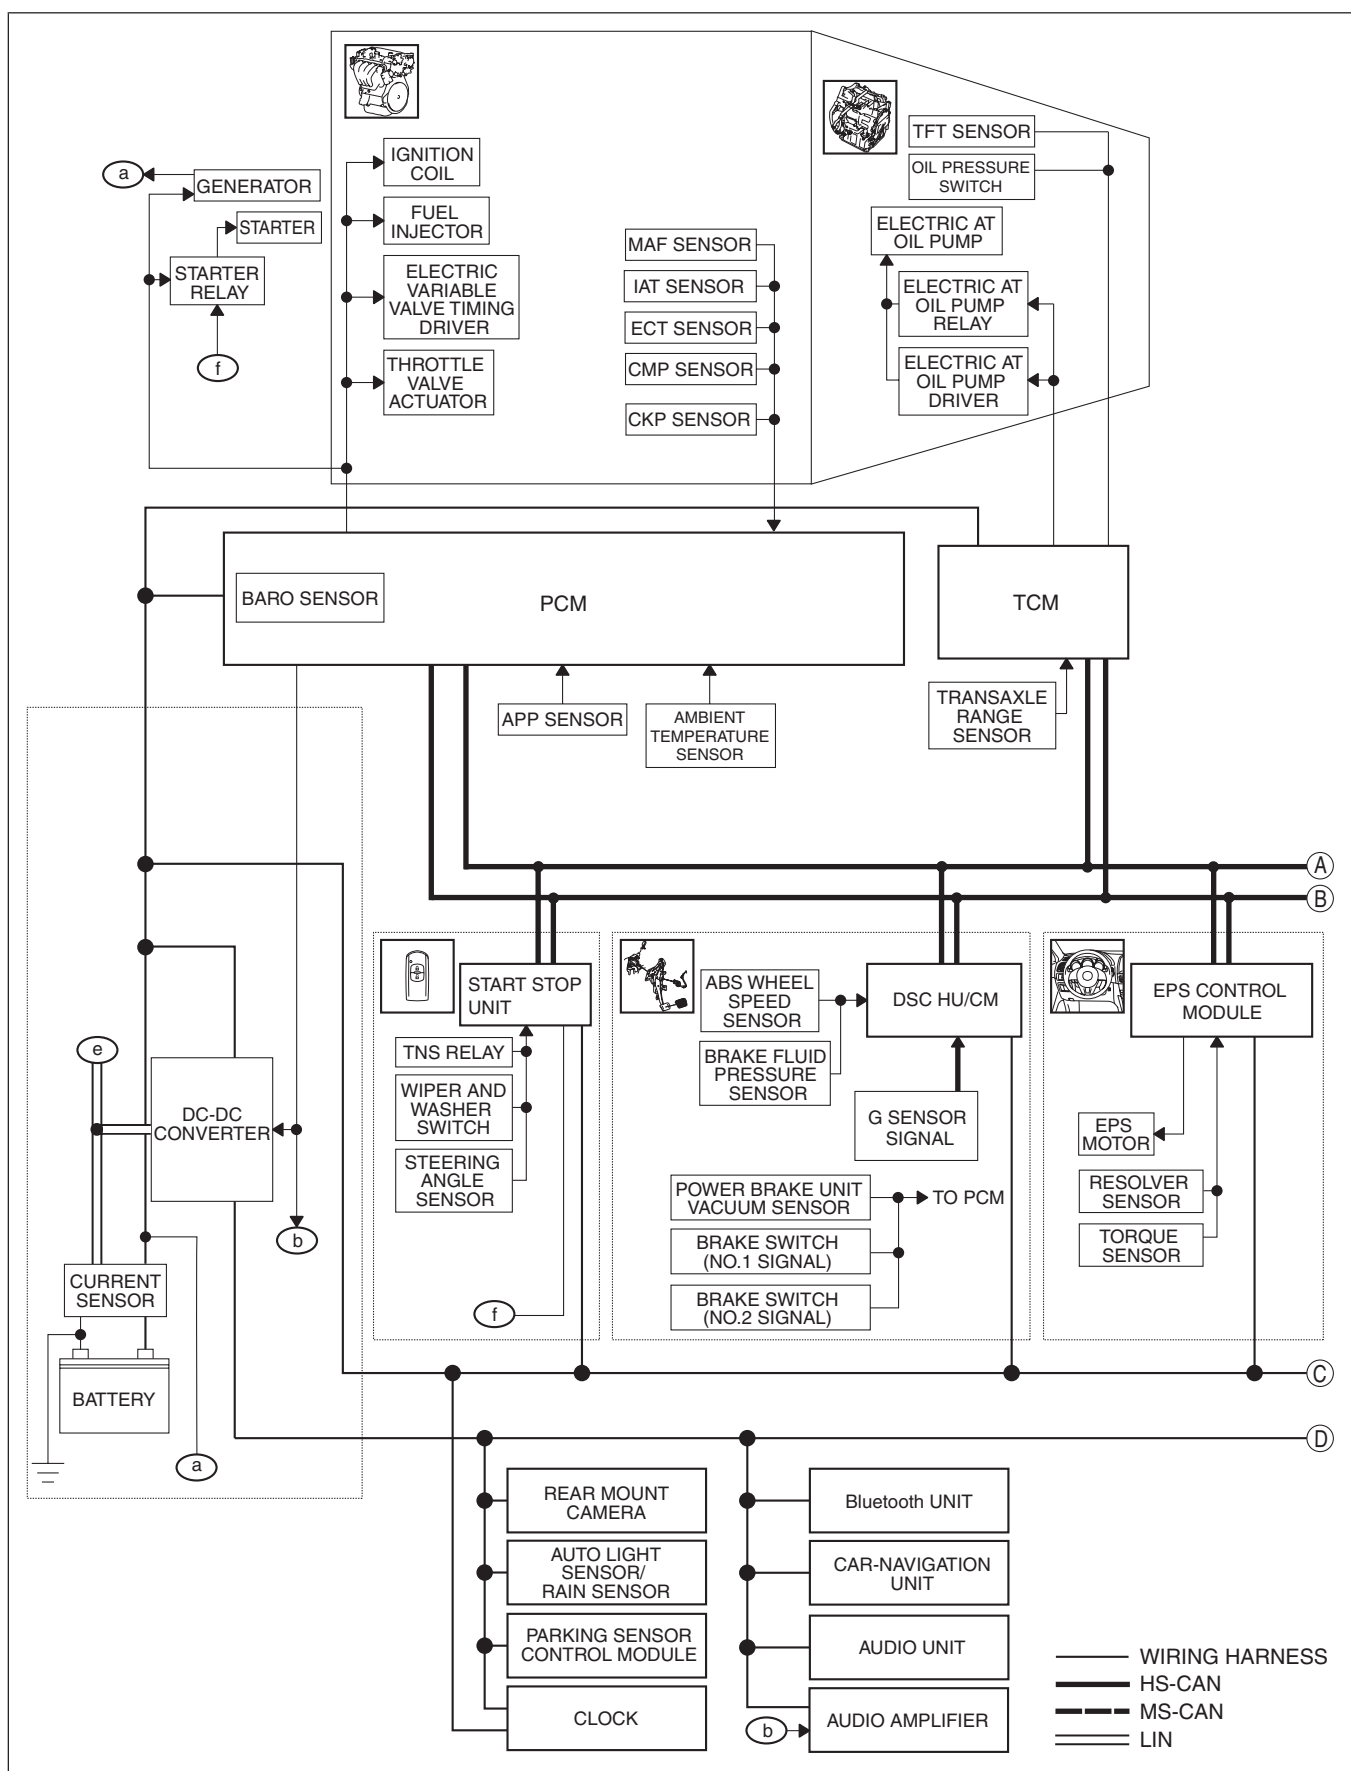


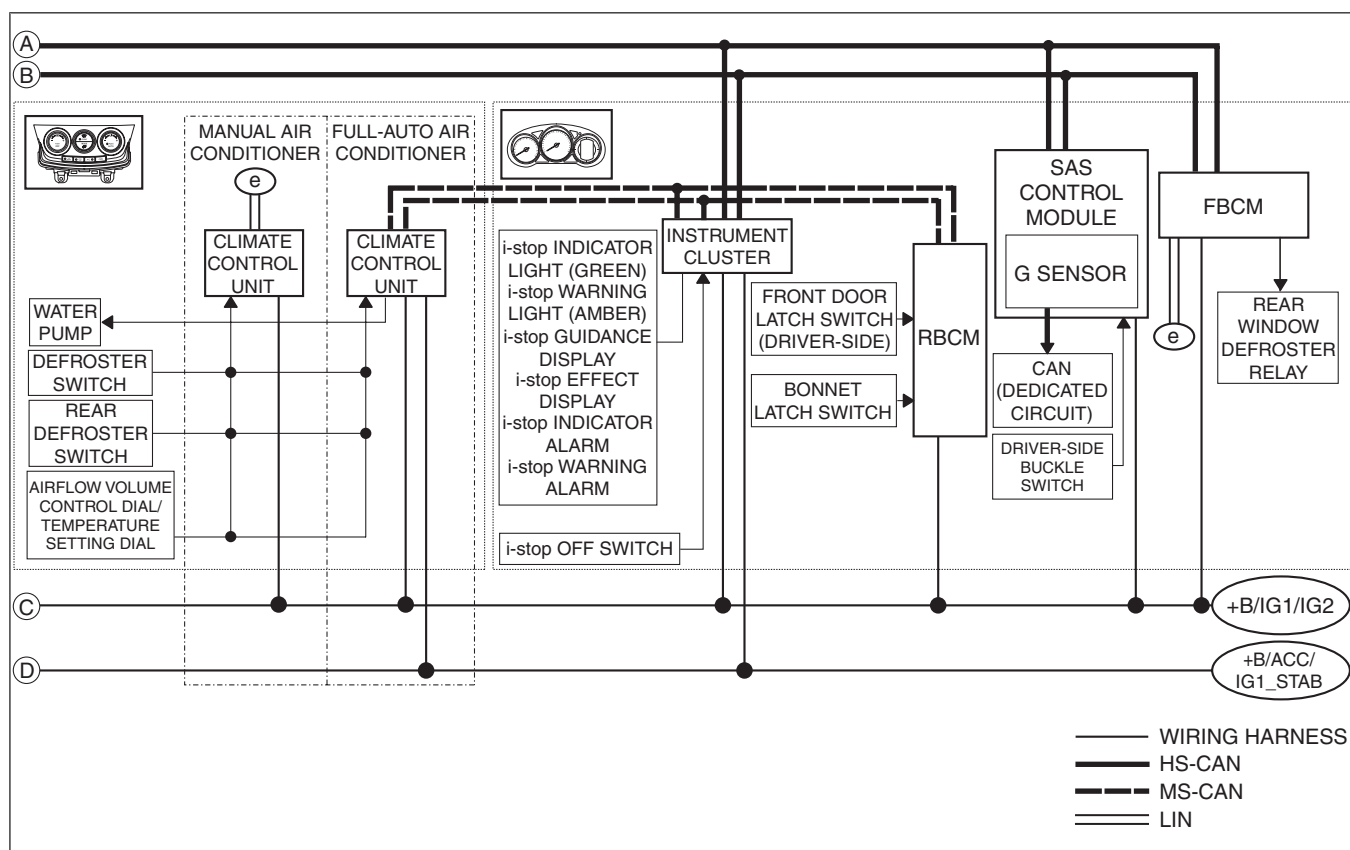

ac5wzn00002363


SKYACTIV-D 2.2 (MTX)

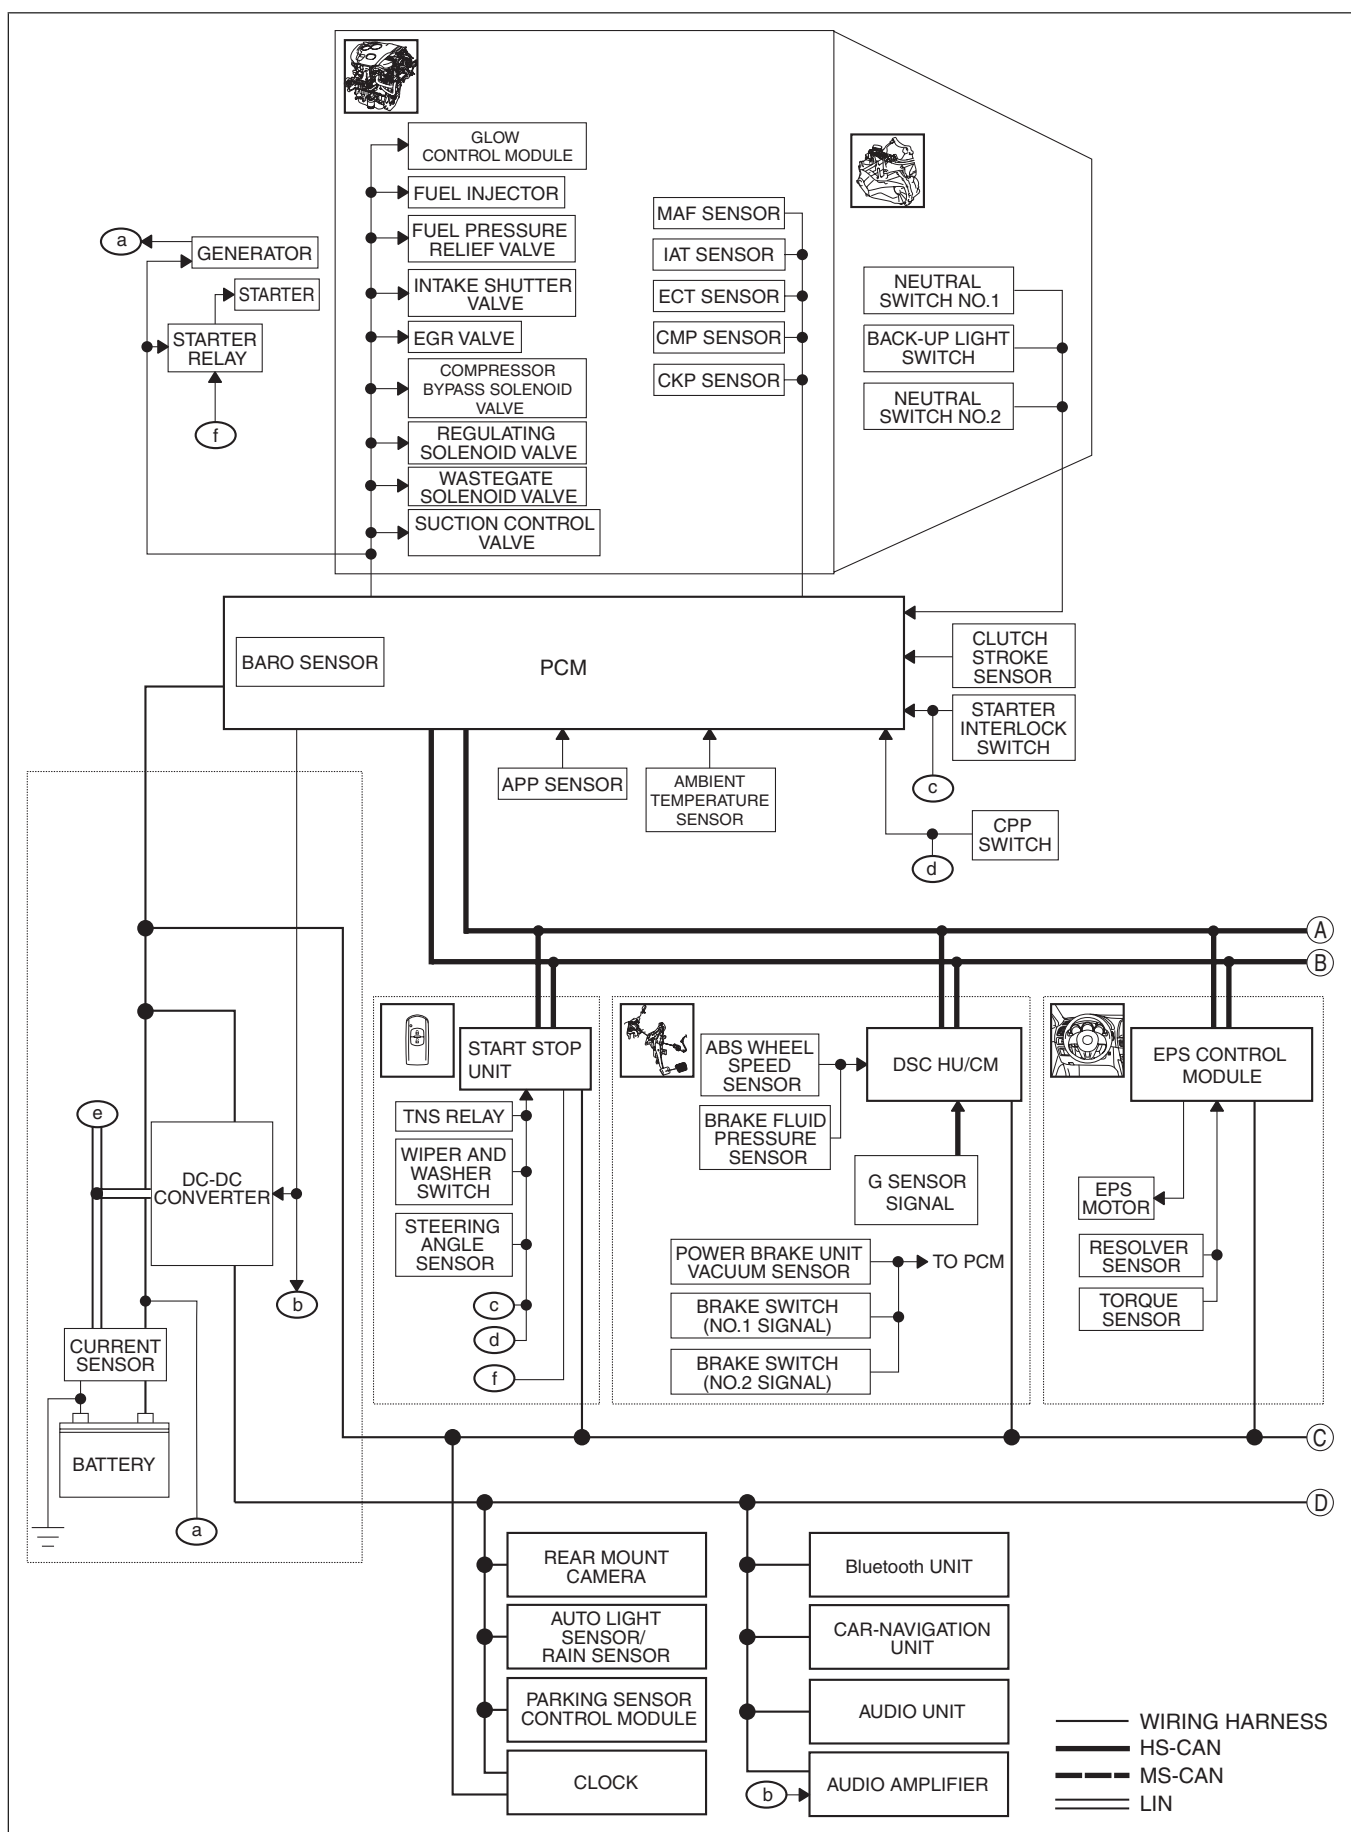


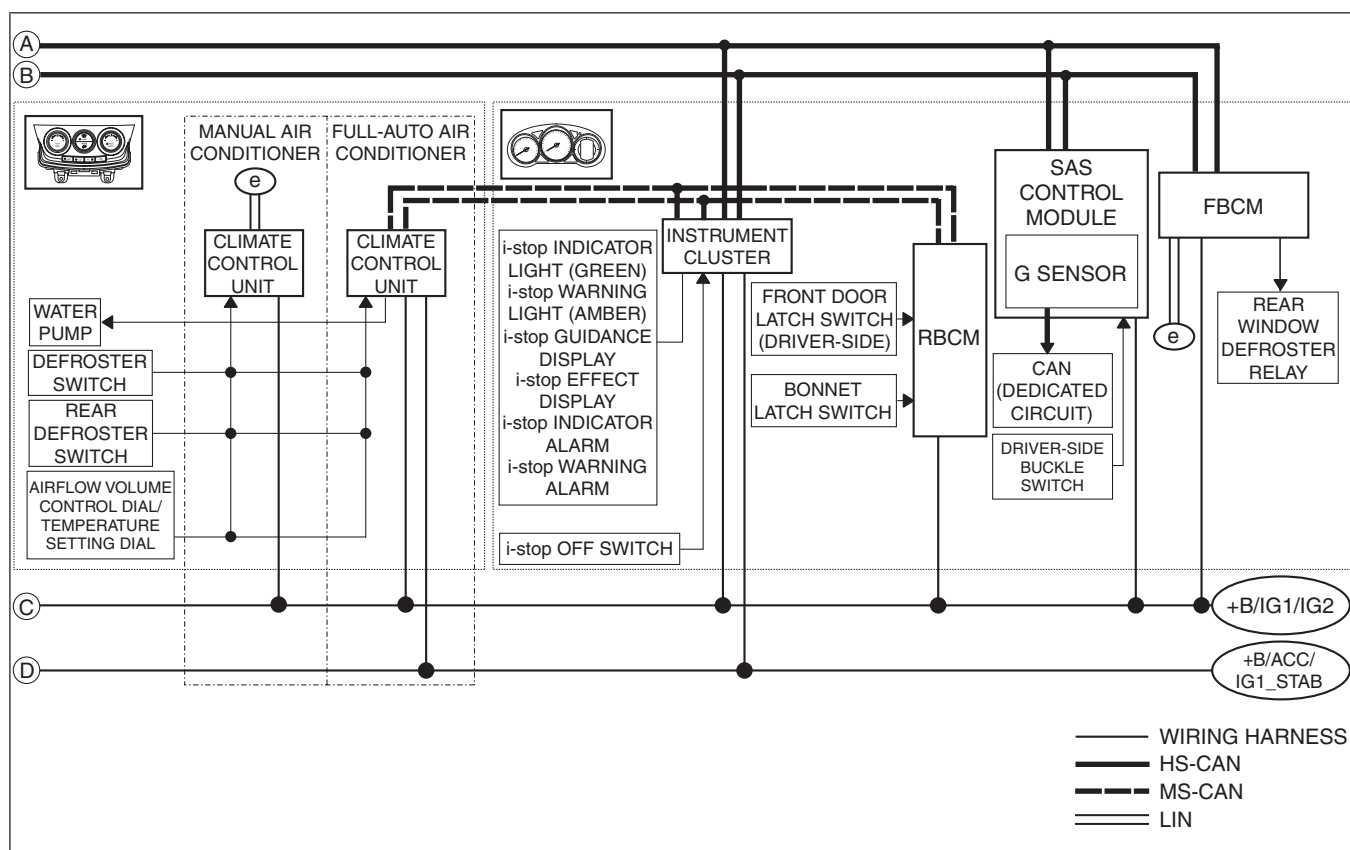

ac5wzn00002363

SKYACTIV-D 2.2 (ATX)

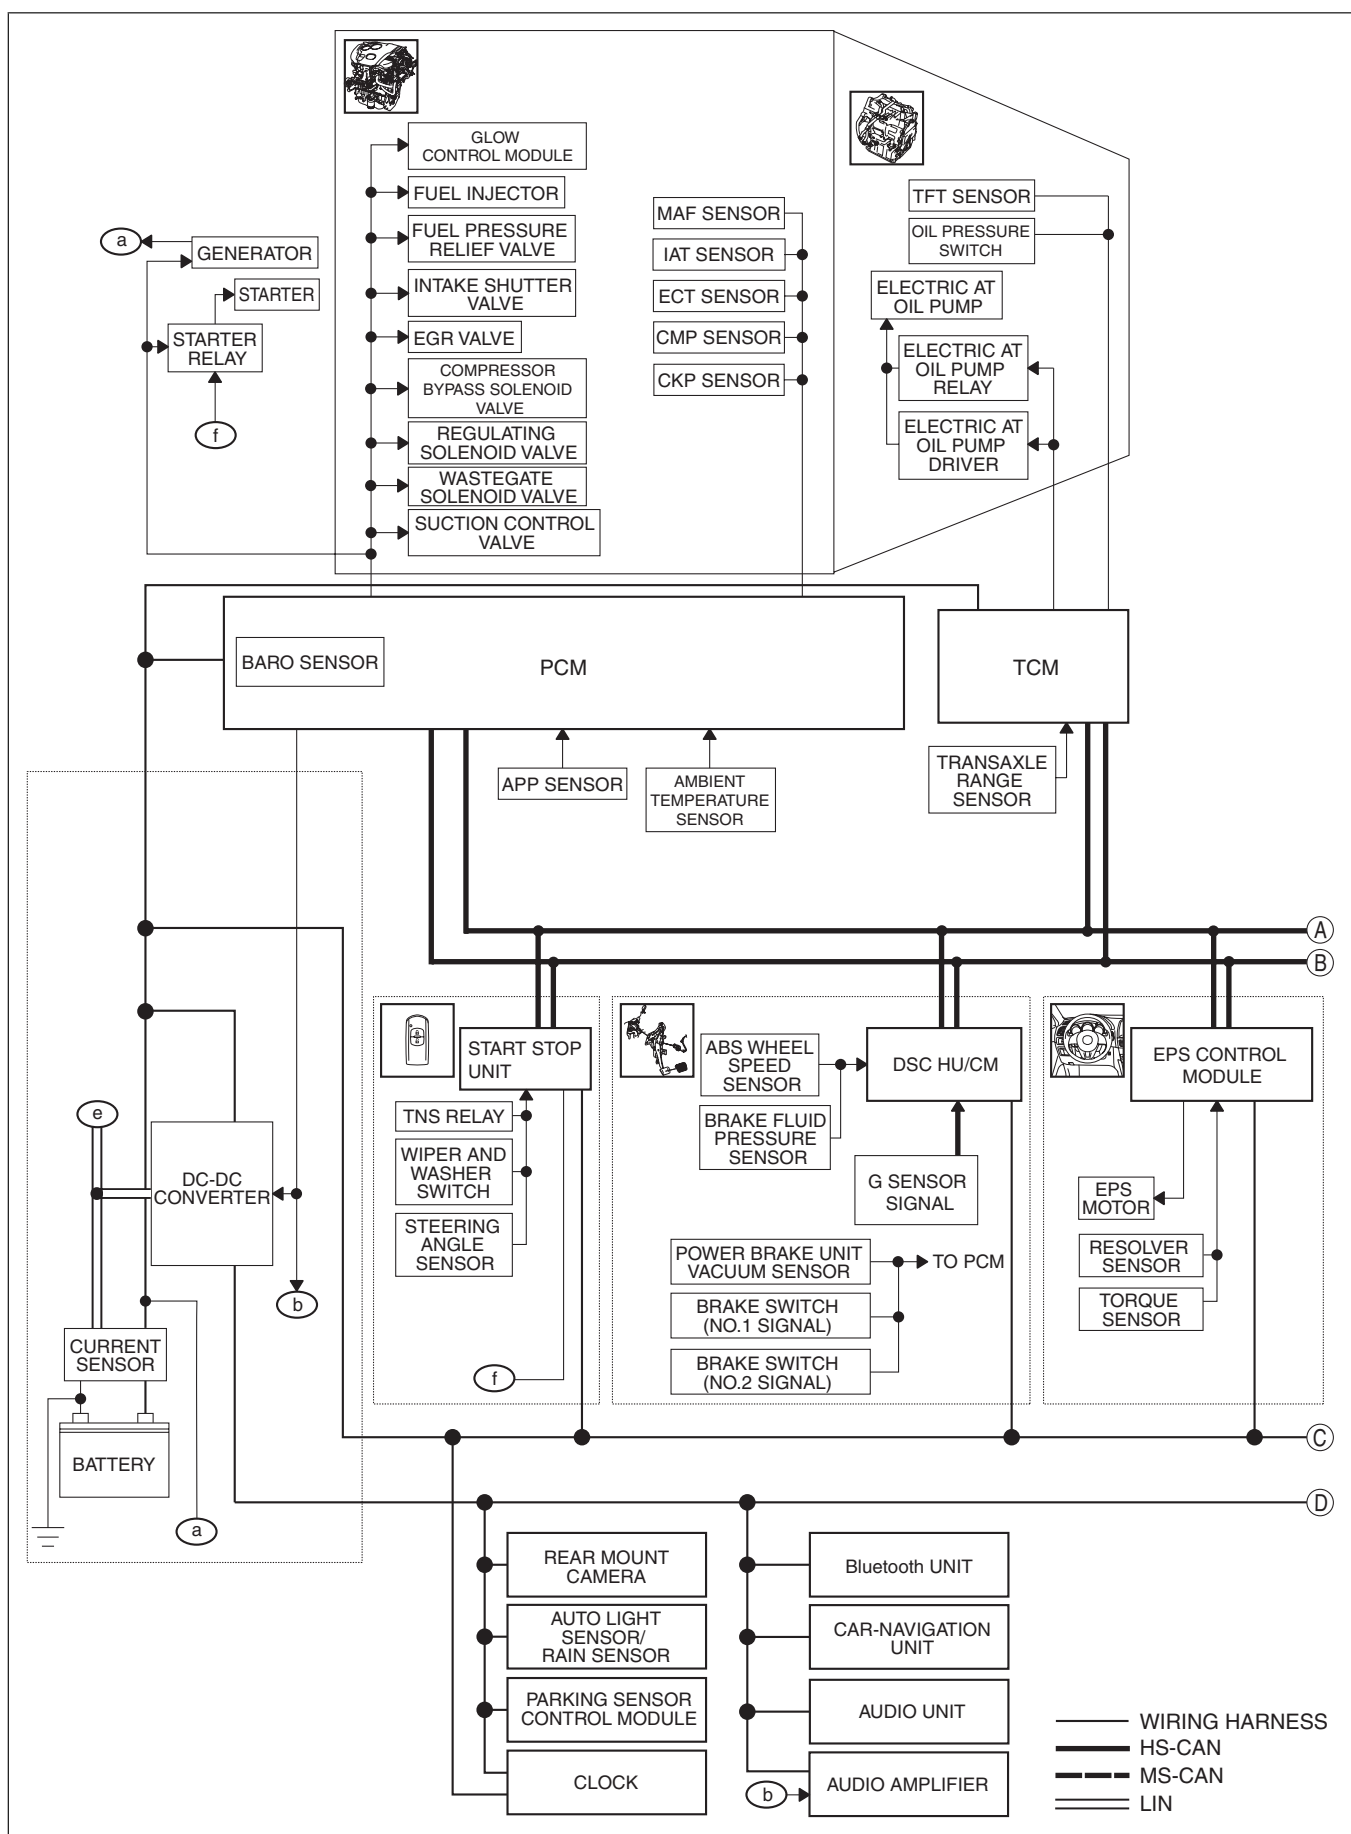

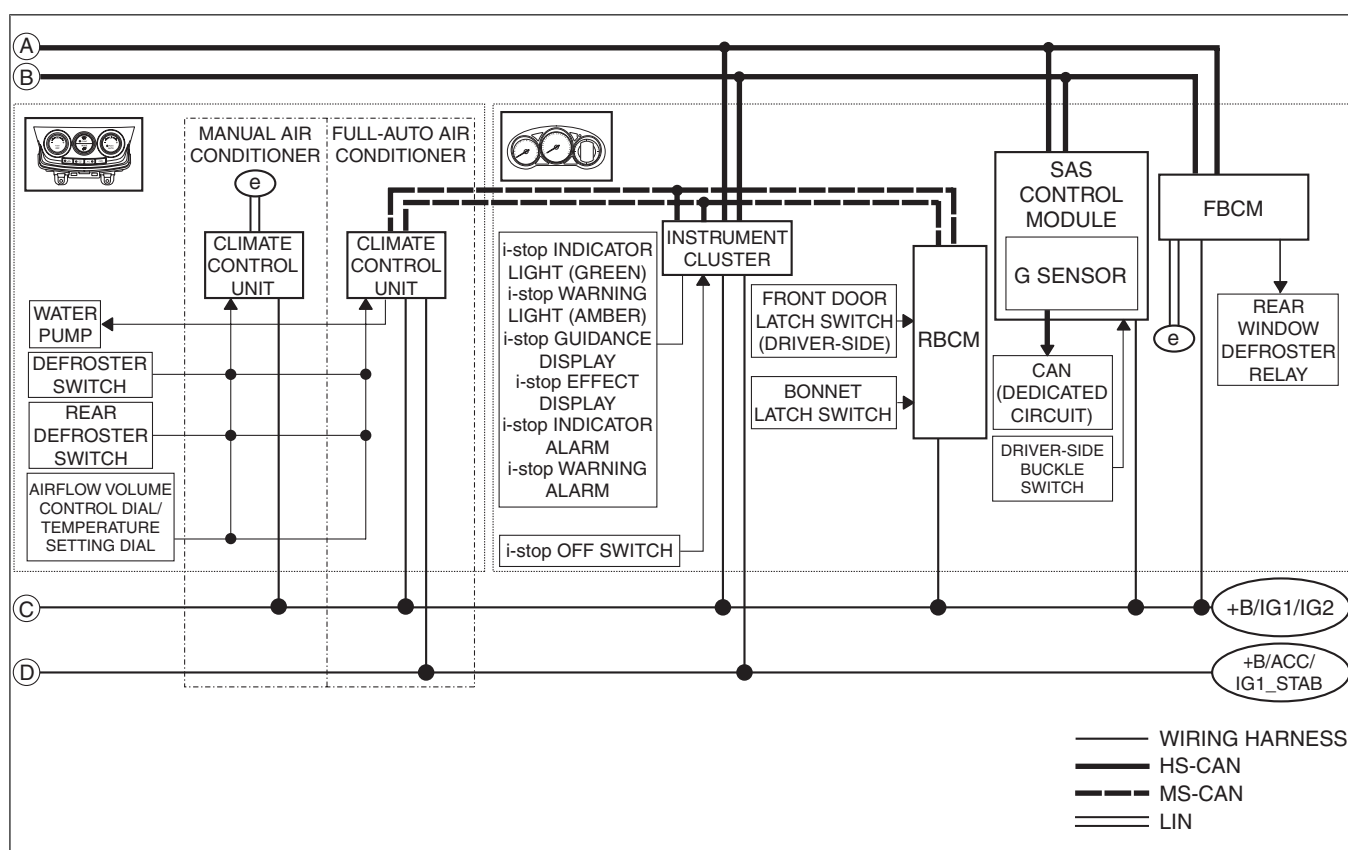

ac5wzn00002363

i-stop Control Modules

- i-stop is controlled by the following modules. For details on each of the controls, refer to the control content for each module.

Module name	Reference
PCM	SKYACTIV-G 2.0, SKYACTIV-G 2.5 (See i-stop CONTROL [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See DC-DC CONVERTER CONTROL [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See i-stop WARNING LIGHT (AMBER) [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
	SKYACTIV-D 2.2 (See i-stop CONTROL [SKYACTIV-D 2.2].) (See DC-DC CONVERTER CONTROL [SKYACTIV-D 2.2].) (See i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-D 2.2].) (See i-stop WARNING LIGHT (AMBER) [SKYACTIV-D 2.2].)
DSC HU/CM	(See HILL LAUNCH ASSIST (HLA).)
TCM (ATX)	(See ELECTRIC AT OIL PUMP [FW6A-EL, FW6AX-EL].) (See ELECTRIC AT OIL PUMP [GW6A-EL, GW6AX-EL].)
Start stop unit	(See START STOP UNIT.)
EPS control module	(See ELECTRIC POWER STEERING (EPS) CONTROL MODULE.)
Climate control unit	(See AIR CONDITIONER i-stop CONTROL [MANUAL AIR CONDITIONER].) (See AIR CONDITIONER i-stop CONTROL [FULL-AUTO AIR CONDITIONER].)
SAS control module	(See SAS CONTROL MODULE.)
Instrument cluster	(See i-stop INDICATOR ALARM.) (See i-stop WARNING ALARM.) (See i-stop GUIDANCE DISPLAY.) (See i-stop EFFECT DISPLAY.)
Front body control module (FBCM)	(See FRONT BODY CONTROL MODULE (FBCM).)
Rear body control module (RBCM)	(See REAR BODY CONTROL MODULE (RBCM).)