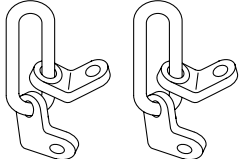


SERVICE TOOLS

id056000804300

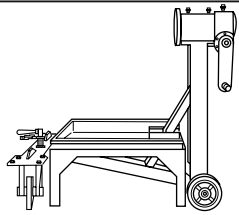
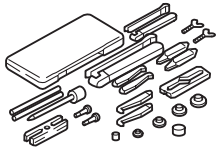
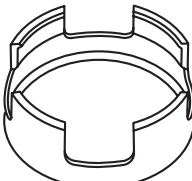
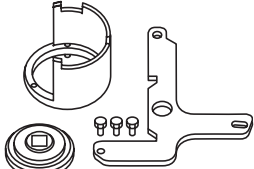
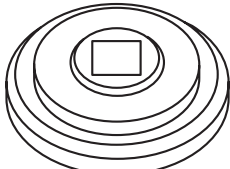
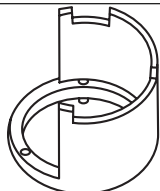
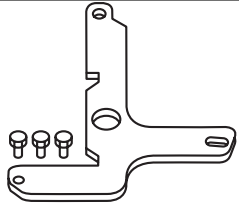
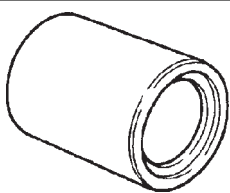
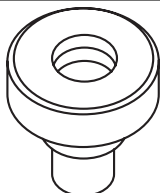

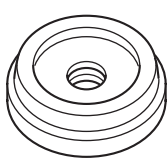
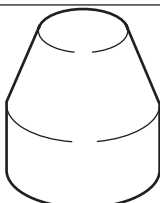
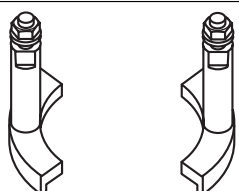
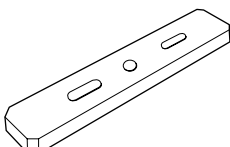
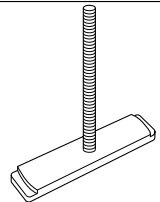
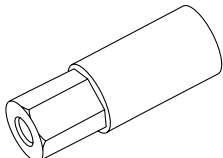
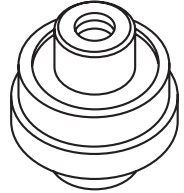
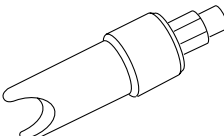

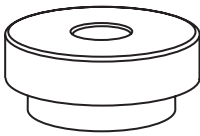
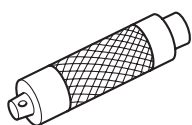
Example of description



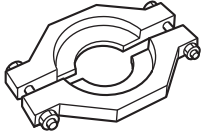
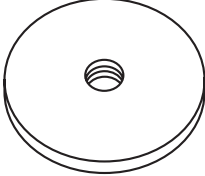
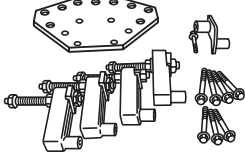
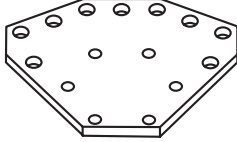
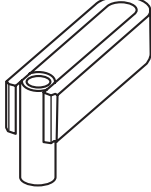
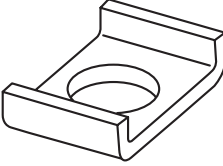
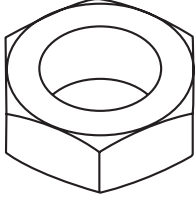
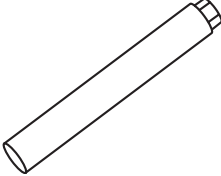
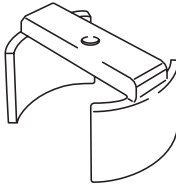
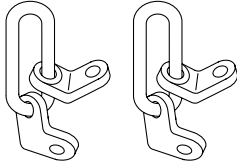
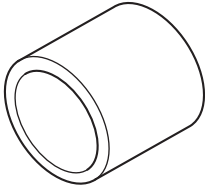
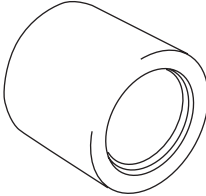
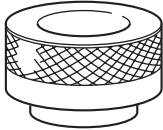

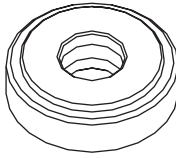
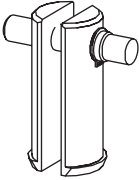
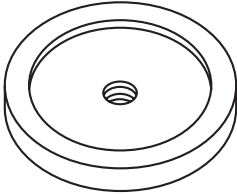
Ford manufactured **SSTs** are as follows: Mazda and Ford **SST** numbers can be referenced.

| | |
|--|---|
| 1:49 UN30 3050 2:303-050 Engine lifting bracket |  |
|--|---|

1: Mazda **SST** number

2: Ford **SST** number

| | | | | | |
|---|---|---|--|--|---|
| 1:49 0107 680A 2:- Engine stand |  | 1:49 0839 425C 2:- Bearing puller set |  | 1:49 B019 002 2:- Body |  |
| 1:49 B019 0A4 2:- Locknut wrench set |  | 1:49 B019 027 2:- Socket (component part for 49 B019 0A4) |  | 1:49 B019 028 2:- Holder (component part for 49 B019 0A4) |  |
| 1:49 B019 029 2:- Plate (component part for 49 B019 0A4) |  | 1:49 D034 201 2:- Dust boot installer |  | 1:49 F011 104 2:- Installer |  |
| 1:49 F027 005 2:- Attachment for 62 bearing (component part for 49 F027 0A1) |  | 1:49 F027 004 2:- Attachment for 80 bearing (component part for 49 F027 0A1) |  | 1:49 F034 210 2:- Clip guide |  |
| 1:49 G019 025 2:- Body B |  | 1:49 G019 026 2:- Plate |  | 1:49 G019 027 2:- Attachment A |  |
| 1:49 G019 029 2:- Nut |  | 1:49 G026 102 2:- Bearing replacer |  | 1:49 G027 007 2:- Preload adapter |  |
| 1:49 G028 201 2:- Support block |  | 1:49 G030 728 2:- Attachment B |  | 1:49 G030 797 2:- Handle |  |

| | | |
|---|---|---|
| 1:49 G032 308 2:- Oil seal installer  | 1:49 G033 102 2:- Handle  | 1:49 H027 002 2:- Bearing remover  |
| 1:49 J027 001 2:- Bearing installer  | 1:49 L010 1A0 2:- Engine hanger set  | 1:49 L010 101 2:- Plate (component part for 49 L010 1A0)  |
| 1:49 L010 102 2:- Arm (component part for 49 L010 1A0)  | 1:49 L010 103 2:- Hook (component part for 49 L010 1A0)  | 1:49 L010 104 2:- Nut (component part for 49 L010 1A0)  |
| 1:49 L010 105 2:- Bolt (component part for 49 L010 1A0)  | 1:49 T019 003 2:- Body  | 1:49 UN30 3050 2:303-050 Engine lifting bracket  |
| 1:49 U027 003 2:- Oil seal installer  | 1:49 U034 204 2:- Dust boot installer  | 1:49 V001 525 2:- Bearing installer  |
| 1:49 W032 2A0 2:- Bearing remover set  | 1:49 W032 303 2:- Oil seal installer  | 1:49 W033 102 2:- Remover (component part for 49 W033 1A1)  |
| 1:49 W033 105 2:- Oil seal installer  | — | |