

HEADLIGHT HIGH-BEAM INDICATOR LIGHT

id091800013600

Purpose


- Notifies the user that the headlights (HI) are illuminated.

Function

- Illuminates when the headlight (HI) or parking illumination conditions are met.

Construction


- Displayed in the instrument cluster.

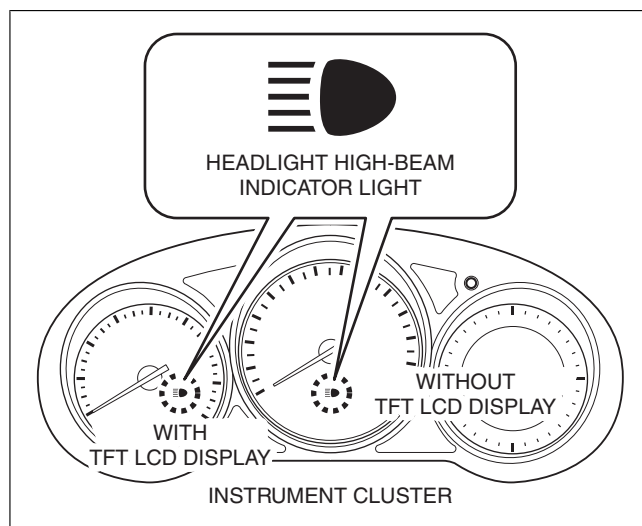

ac5uun00000686

Operation

- When the light switch is operated to the HI or parking position, a light switch HI or parking signal is input to the start stop unit.
- The start stop unit sends the light switch HI or parking signal to the front body control module (FBCM).
- The front body control module (FBCM) sends the light switch HI signal to the instrument cluster as a headlight HI illumination signal.
- When the instrument cluster receives the headlight HI illumination signal, it illuminates the headlight high-beam indicator light.

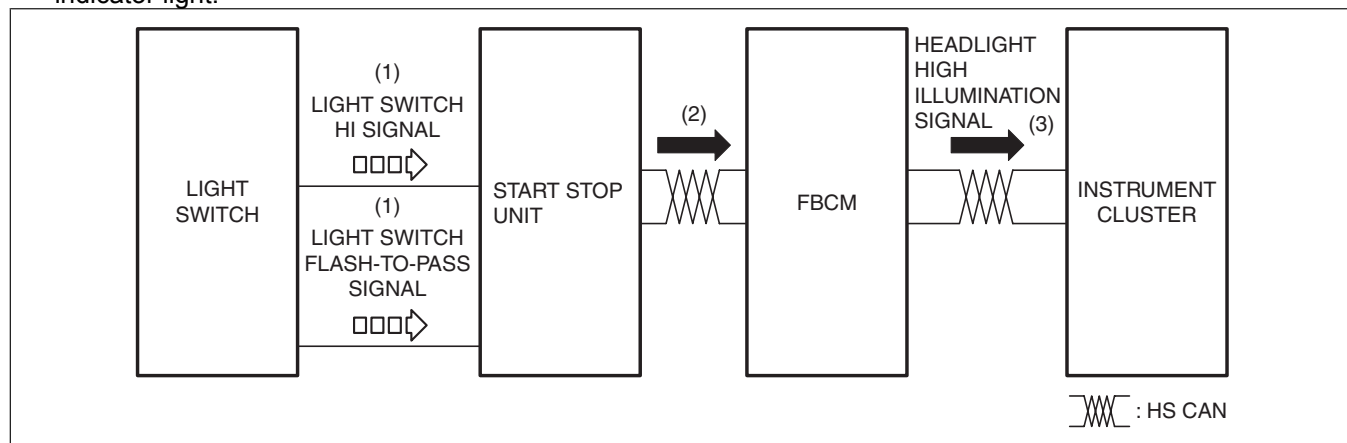

ac5uun00000687

Fail-safe

- Function not equipped.