


ONE-WAY CLUTCH INSPECTION

id051700663000

Caution

- **Do not disassemble the one-way clutch. If it has been disassembled, replace the one-way clutch with a new one.**


1. Place the one-way clutch on a workbench as shown in the figure.

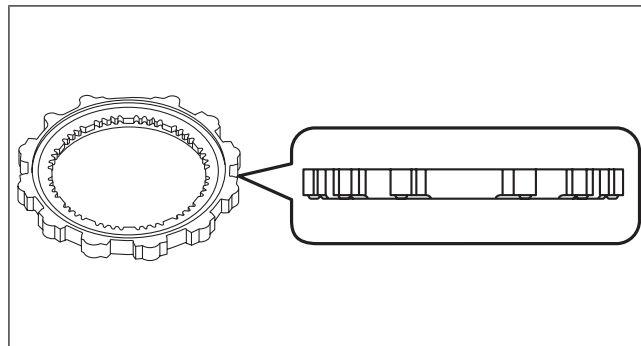

azzjw00001322

2. Secure the outer plate of the one-way clutch by hand.

A : Secure by hand

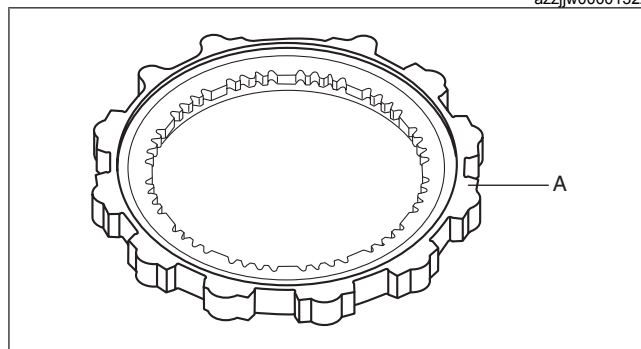


azzjw00001323

3. Rotate the inner plate of the one-way clutch by hand and verify that it rotates counterclockwise and locks, and does not rotate clockwise.

Caution

- **When the inner plate of the one-way clutch is rotated, a ratchet sound occurs because it is a mechanical diode-type one-way clutch, but this does not indicate a malfunction.**
- If there is a malfunction, replace the one-way clutch with a new one.

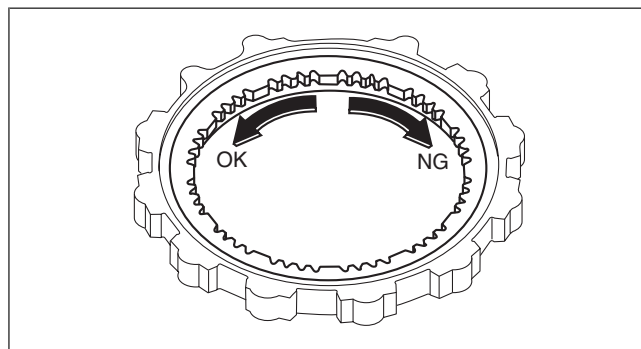

azzjw00001324