


## AIR INTAKE ACTUATOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER]

id0740a2801400

### L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Disconnect the air intake actuator connector.
4. Remove the screw, then remove the air intake actuator.
5. Install in the reverse order of removal.

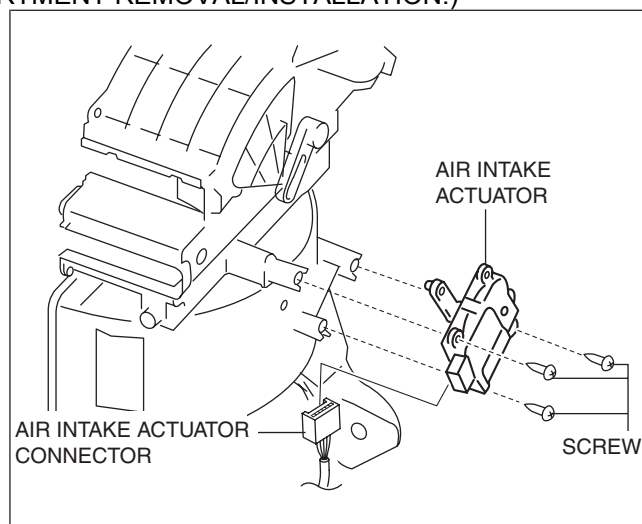

### R.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Front scuff plate (passenger-side) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
  - (2) Front side trim (passenger-side) (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
  - (3) Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)
  - (4) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
  - (5) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
  - (6) Lower panel (passenger-side) (See LOWER PANEL REMOVAL/INSTALLATION.)
  - (7) Front heat duct (passenger-side) (See FRONT HEAT DUCT REMOVAL/INSTALLATION.)
3. Remove the blower unit. (See BLOWER MOTOR REMOVAL/INSTALLATION [MANUAL AIR CONDITIONER].)
4. Remove the screw, then remove the air intake actuator.
5. Install in the reverse order of removal.

