


TRUNK END TRIM REMOVAL/INSTALLATION


id091700803400

1. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
2. Partially peel back the liftgate weather strip.
3. Remove fasteners.

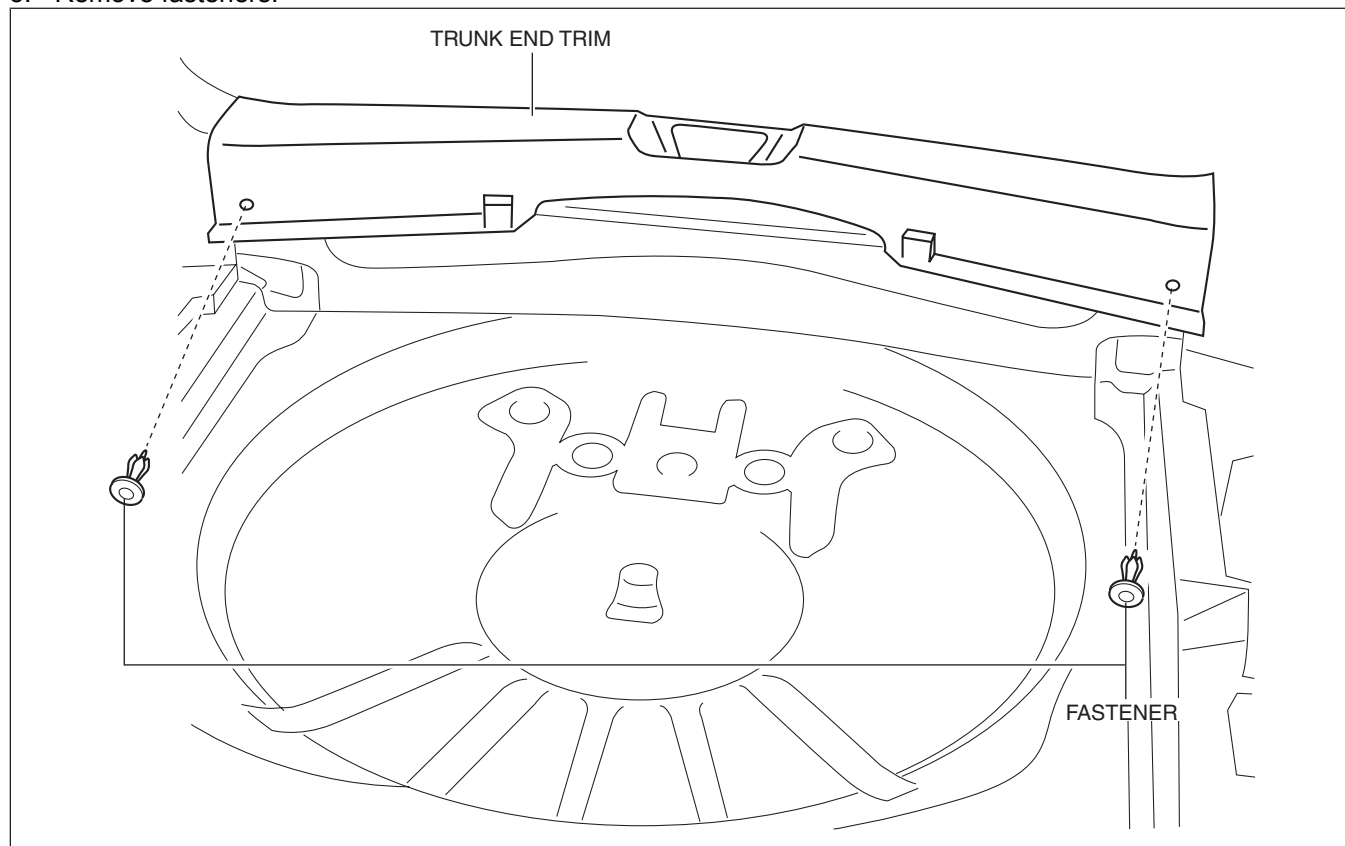


ac5wzw00005845

4. Carry the trunk end trim from the position of the arrow shown in the figure, and pull up the trunk end trim in the direction of arrow (1) shown in the figure while disengage tab A and B.

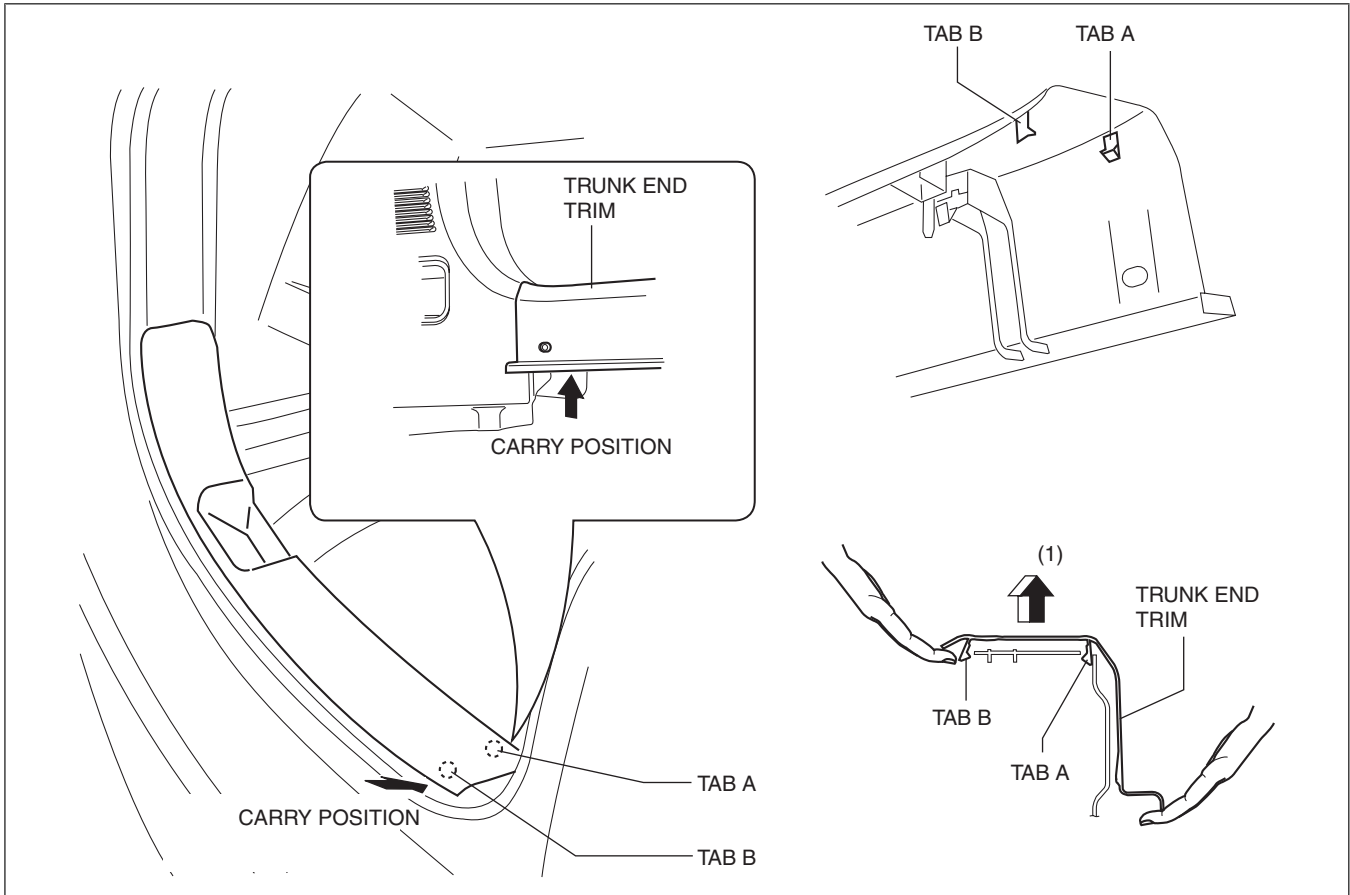


ac5wzw00005846

5. Pull up the trunk end trim in the direction of arrow (2) shown in the figure, and then remove clip C and pin D.

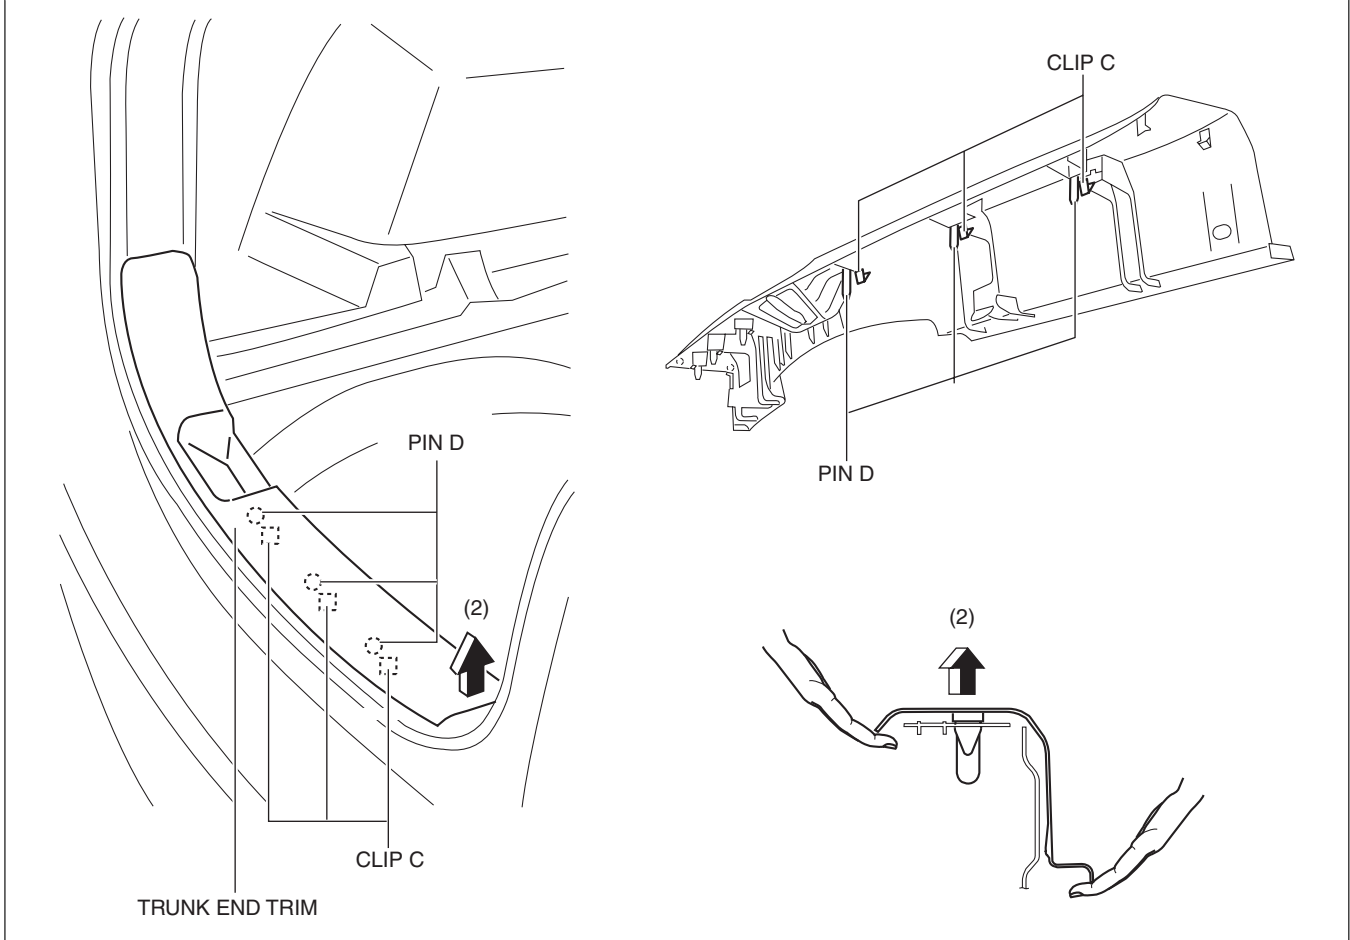


ac5wzw00005847

6. Carry the trunk end trim from the position of the arrow shown in the figure, and pull up the trunk end trim in the direction of arrow (3) shown in the figure while disengage tab E and F.

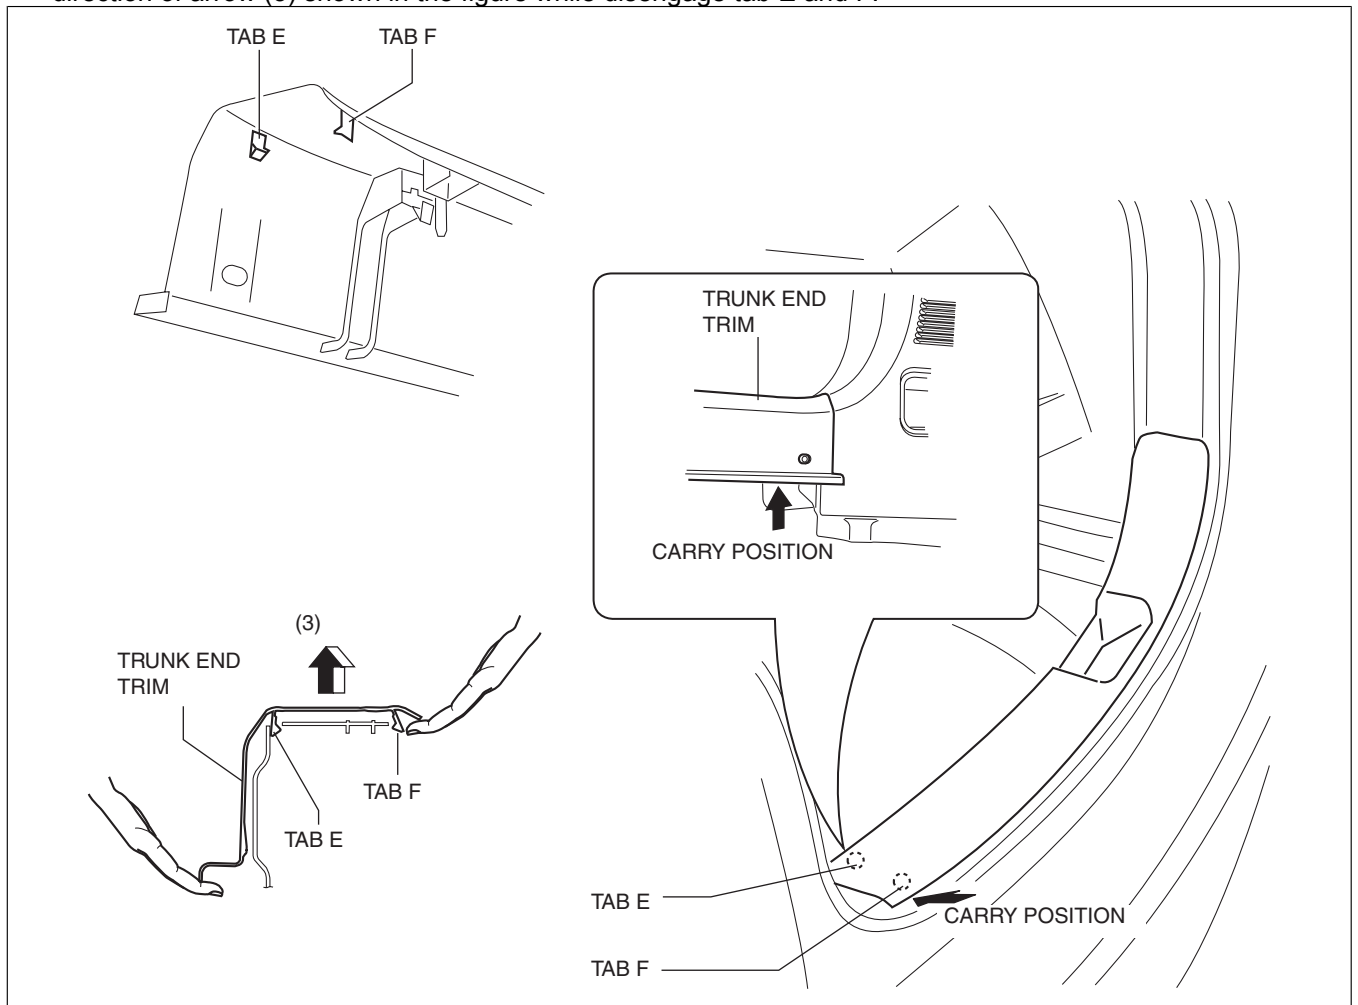

ac5wzw00005848

7. Pull up the trunk end trim in the direction of arrow (4) shown in the figure, and then remove clip G and pin H.

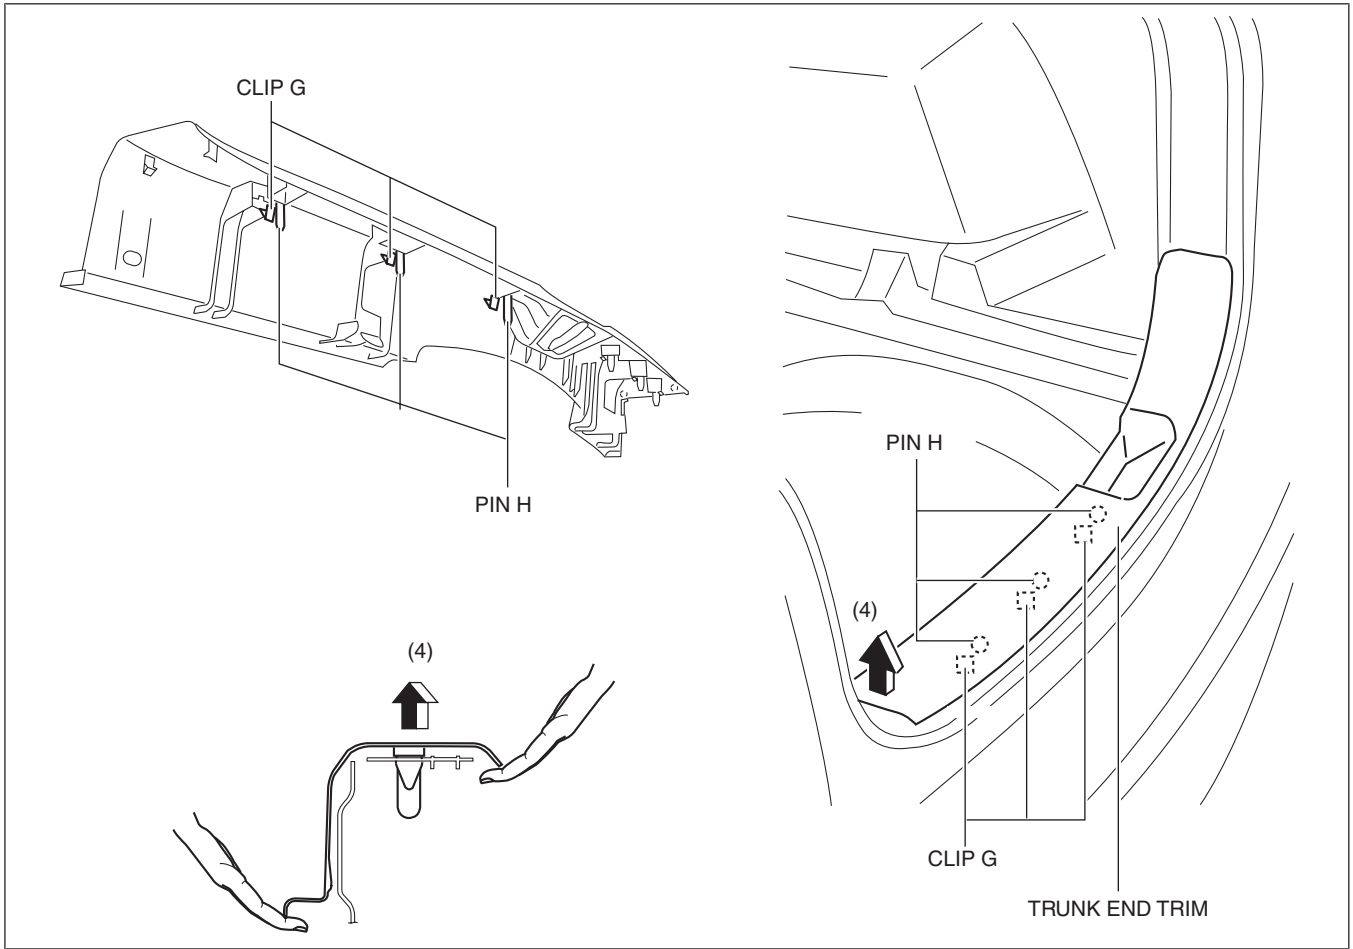

ac5wzw00005849

8. Install in the reverse order of removal.