


## MANUAL TRANSAXLE [D66M-R, D66MX-R]

id0515md283800

### Purpose, Function

- The manual transaxle converts the drive force (speed, torque, rotation direction) input from the engine according to the shift lever operation inside the vehicle.

### Construction

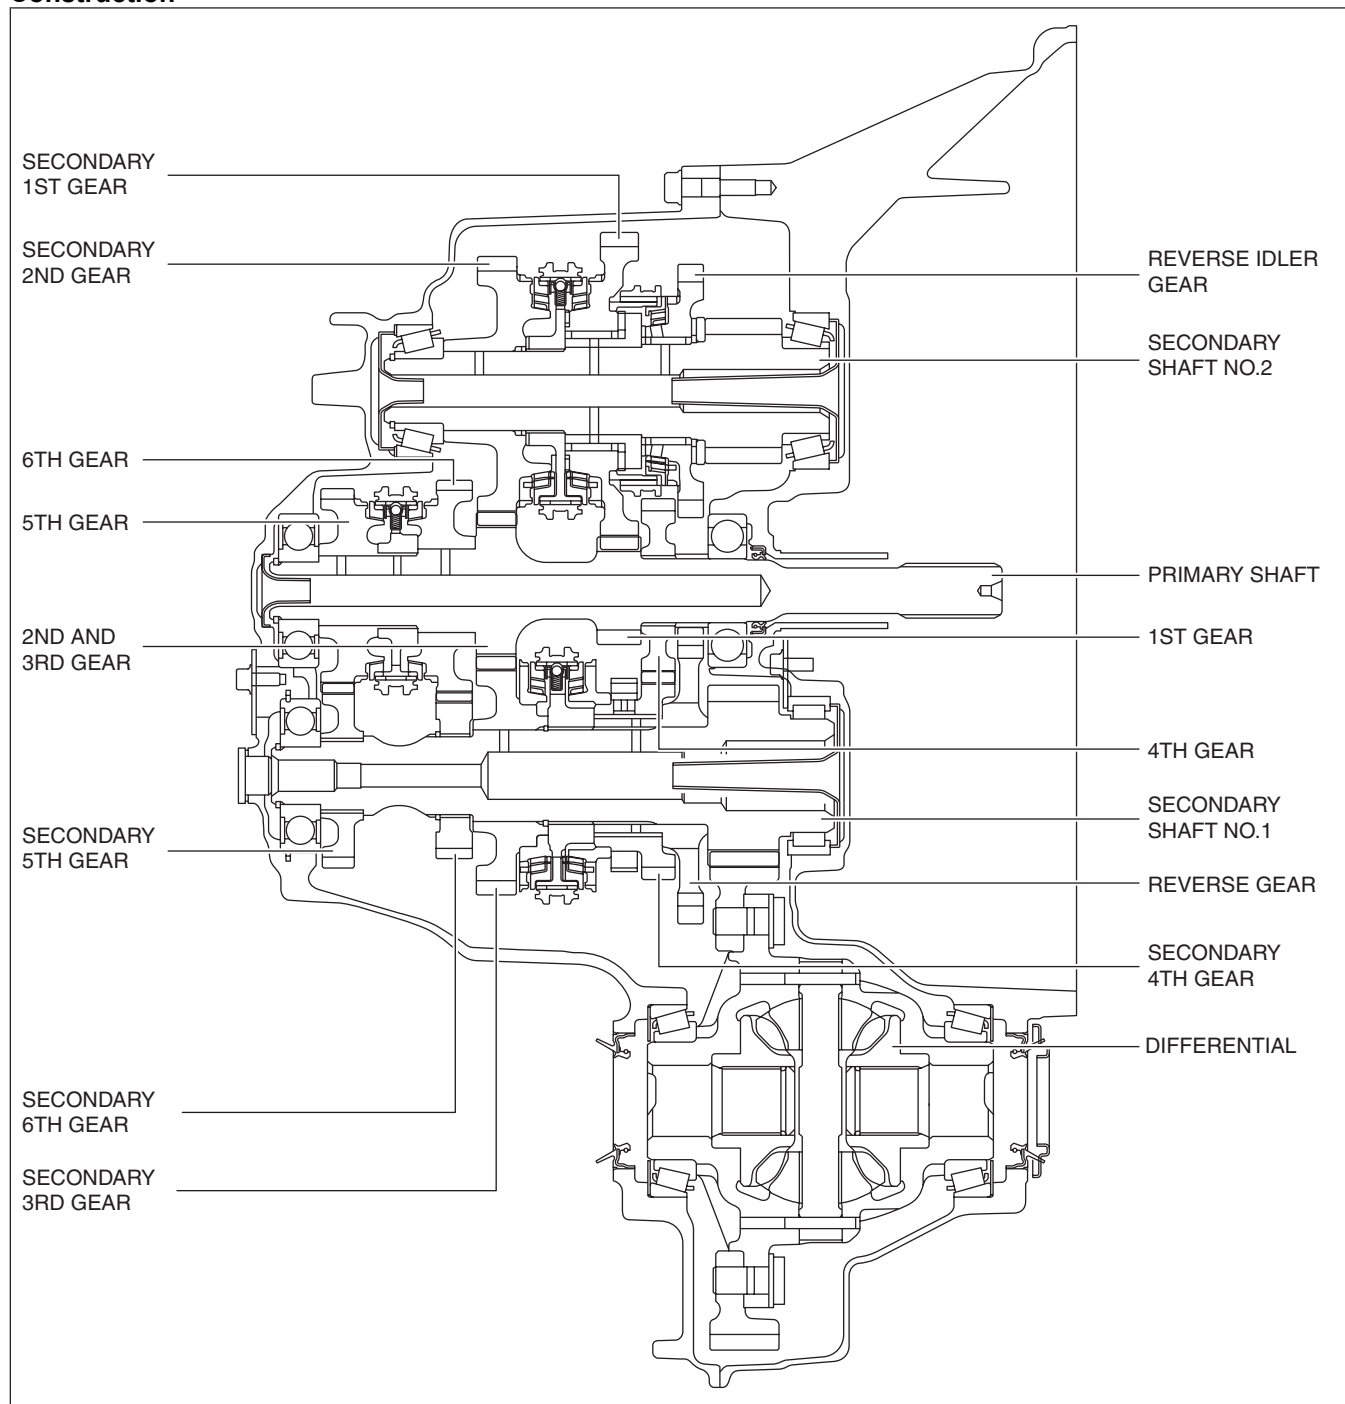

am6zzn00002618

## Operation

