


## LIFTGATE ADJUSTMENT

id091100521400

1. Measure the gap and height difference between the liftgate and the body.
2. Loosen the liftgate hinge installation bolts and adjust the liftgate.

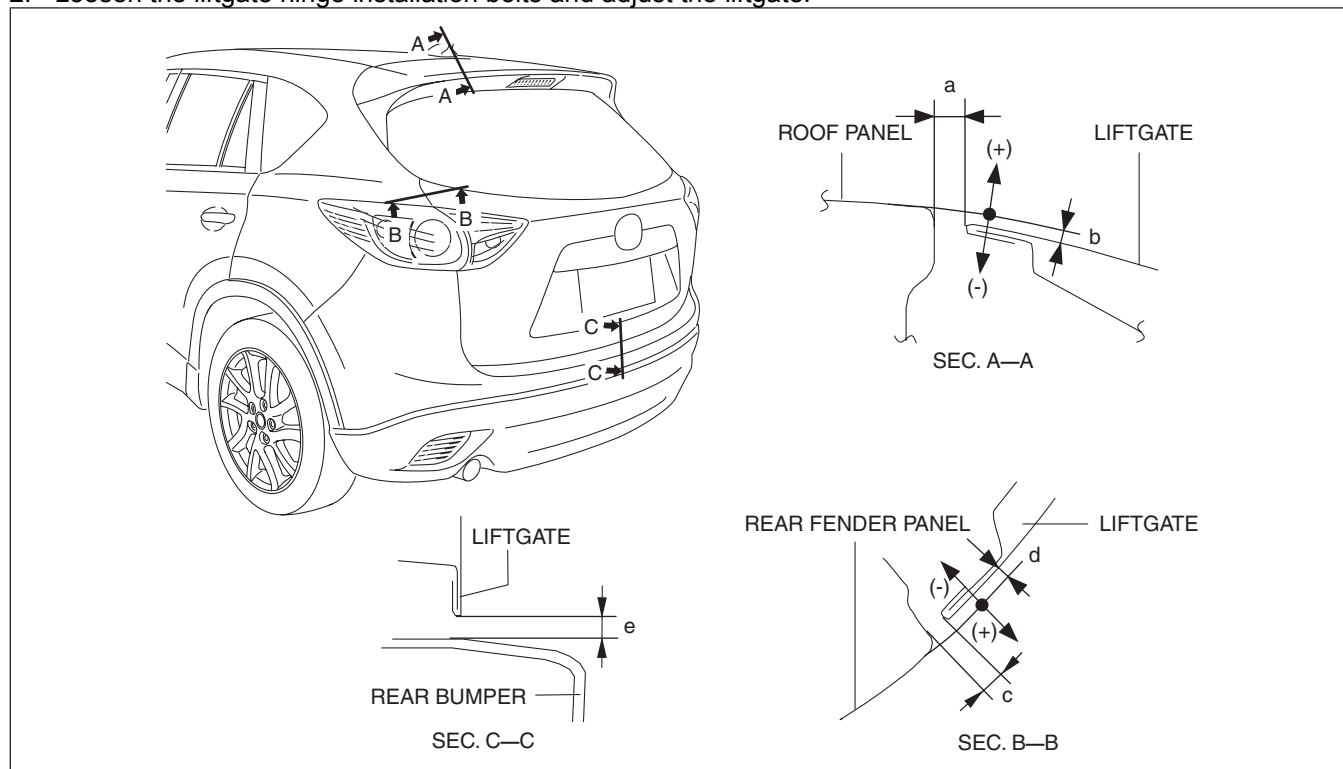

ac5wzw00003758

### Standard clearance

- a: 5.2—7.2 mm {0.21—0.28 in}
- b: -2.0—0 mm {-0.078—0.000 in}
- c: 3.8—6.2 mm {0.15—0.24 in}
- d: -1.6—0.8 mm {-0.06—0.03 in}
- e: 3.8—7.8 mm {0.15—0.30 in}

3. Tighten the liftgate hinge installation bolts. (See LIFTGATE REMOVAL/INSTALLATION.)
4. If the liftgate does not open/close smoothly, adjust it by loosening the liftgate lock striker installation screw. (See LIFTGATE LOCK STRIKER REMOVAL/INSTALLATION.)
5. Spray or pour water on the door and surrounding area using a hose or high pressure water pressure car wash and verify that there is no water leakage.