


## INSPECTION OF SST (DEPLOYMENT TOOL)

id081000801000

- Before using the **SST (49 H066 002)**, inspect its operation.

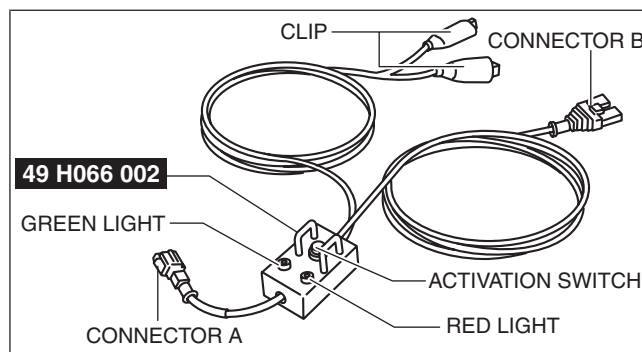

am3zzw00011088

### Inspection Procedure


- Follow the steps below to inspect the **SST (49 H066 002)**.
  - If not as indicated in the table, replace the **SST (49 H066 002)** because it has a malfunction.

#### Warning

- Do not use a malfunctioning SST (49 H066 002), otherwise it could cause the air bag module or pre-tensioner front buckle to accidentally operate (deploy).**

#### Caution

- Because the permissible voltage for the SST (49 H066 002) is 12 V, do not connect a 24 V power source because it will damage the SST. Always connect only a 12 V power source.**

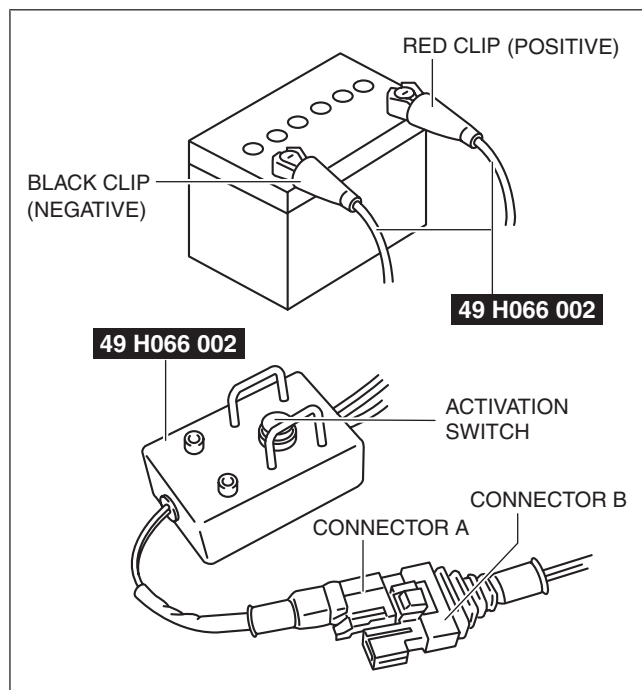

ac5wzw00003025

Step	Inspection procedure	Light condition	
		Green	Red
1	Connect the power supply red clip to the positive battery terminal, and the black clip to the negative battery terminal.	On	Off
2	Connect connectors A and B.	Off	On
3	Press the activation switch.	On	Off