

## AIR CLEANER [SKYACTIV-D 2.2]


id0113z7003500

### Purpose, Function

- Prevents engine internal damage caused by penetration of dust or foreign material.


### Construction

- The air cleaner is installed in front of the battery.

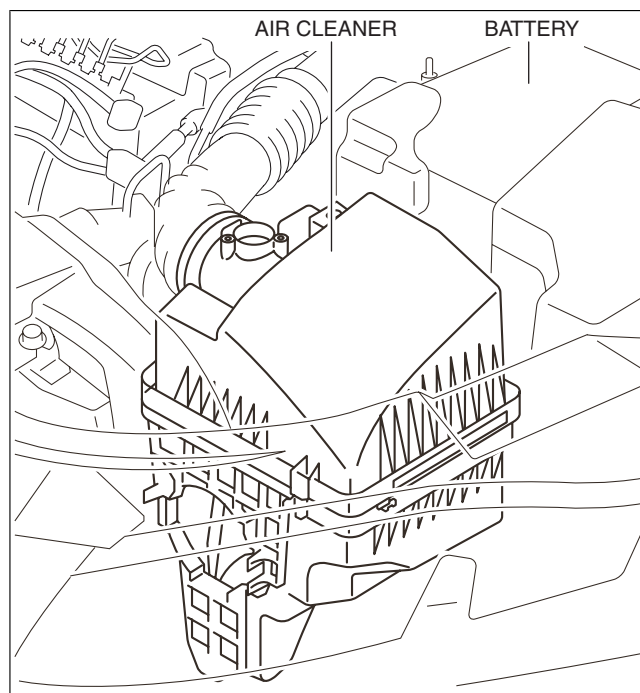


ac5wzn00002186

- The air cleaner consists of the air cleaner case, air cleaner cover, and air cleaner element.

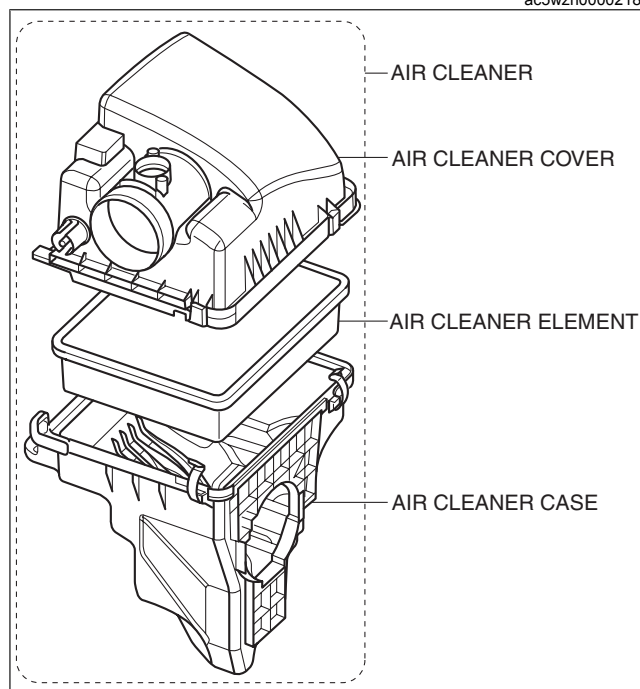

ac5wzn00002187

- Non-woven fabric (dry type) air cleaner element has been adopted to remove dust and foreign material in the intake air.

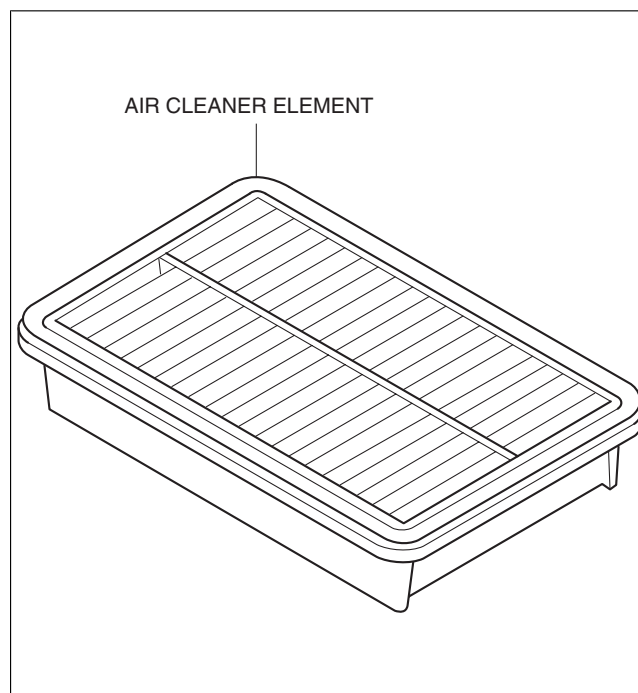

ac5wzn00002188