

## OIL JET VALVE [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0111h5002600

### Purpose, Function

- The oil jet valve injects engine oil on the back of the piston to cool the piston.


### Construction

- The oil jet valve is installed into the cylinder block.

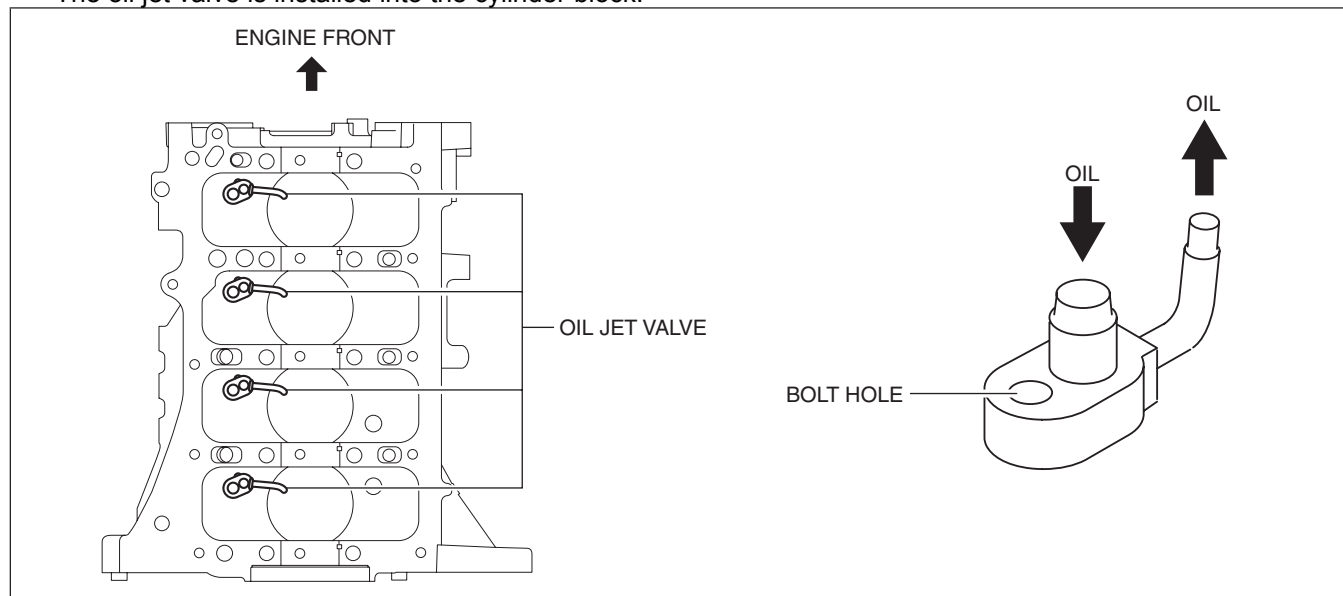

am3uun00001901


- The oil jet valve is built into the check ball and spring.

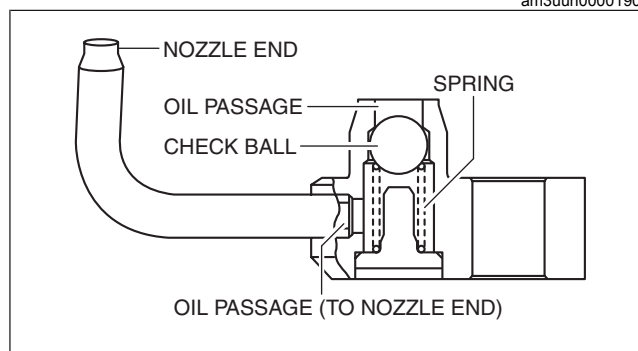

am3uun00001902


### Operation

- When the oil pressure applied to the check ball exceeds the spring force, the check ball and spring are pressed down.
- The oil passage is opened to the nozzle and engine oil is injected to the back side of the piston.
- When the oil pressure applied to the check ball is lower than the spring force, the spring presses up the check ball.

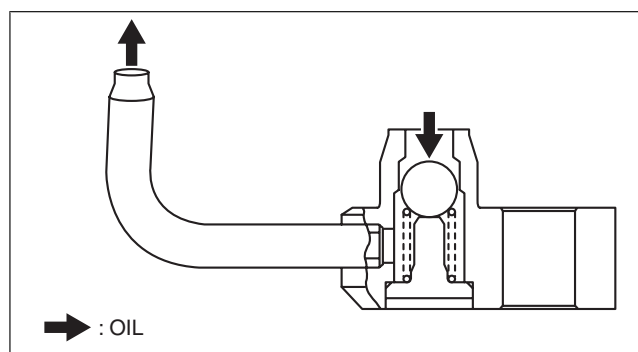

ac5uun00001087

- 
4. The oil passage to the nozzle is closed and the injection of engine oil stops.

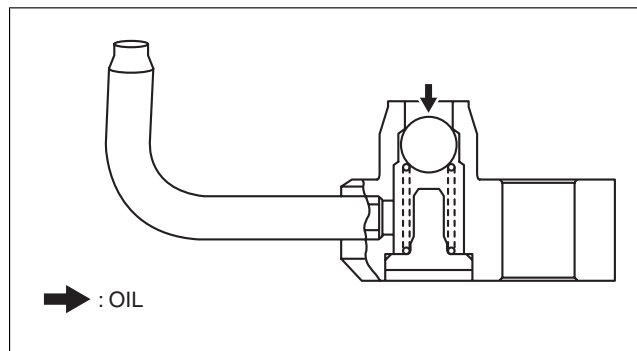

ac5uun00001088