


DOOR ADJUSTMENT

id091100521100

1. Measure the gap and height difference between the door and the body.
2. Loosen the door hinge installation bolts and adjust the door.

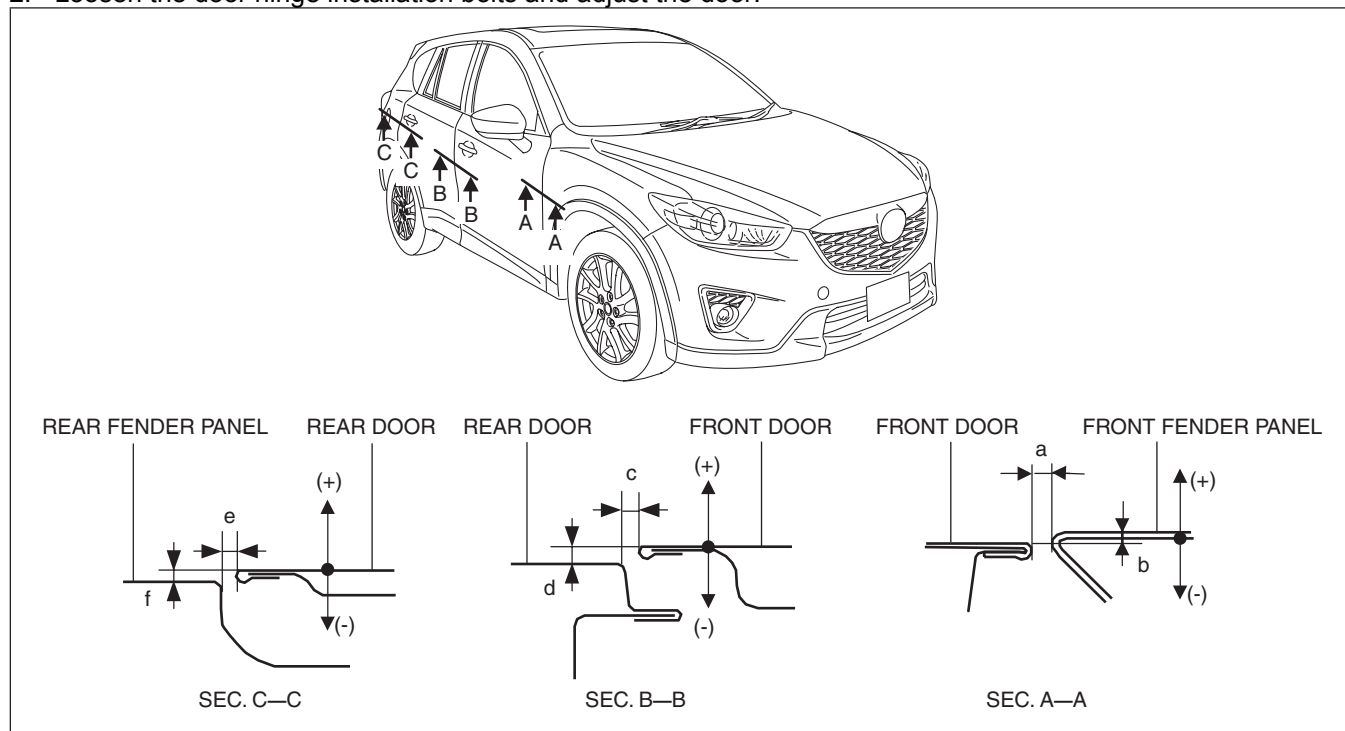

ac5uuw00000881

Standard clearance

- a: 2.8—3.8 mm {0.12—0.14 in}
- b: -1.0—1.0 mm {-0.039—0.039 in}
- c: 2.5—4.5 mm {0.10—0.17 in}
- d: -1.0—1.0 mm {-0.039—0.039 in}
- e: 2.5—4.5 mm {0.10—0.17 in}
- f: -1.0—1.0 mm {-0.039—0.039 in}

3. Tighten the door hinge installation bolts. (See FRONT DOOR REMOVAL/INSTALLATION.) (See REAR DOOR REMOVAL/INSTALLATION.)
4. If the door does not open/close smoothly, adjust it by loosening the door lock striker installation screw. (See DOOR LOCK STRIKER REMOVAL/INSTALLATION.)
5. Spray or pour water on the door and surrounding area using a hose or high pressure water pressure car wash and verify that there is no water leakage.