



REAR FOG LIGHT BULB REMOVAL/INSTALLATION

id091800851300


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the fastener.

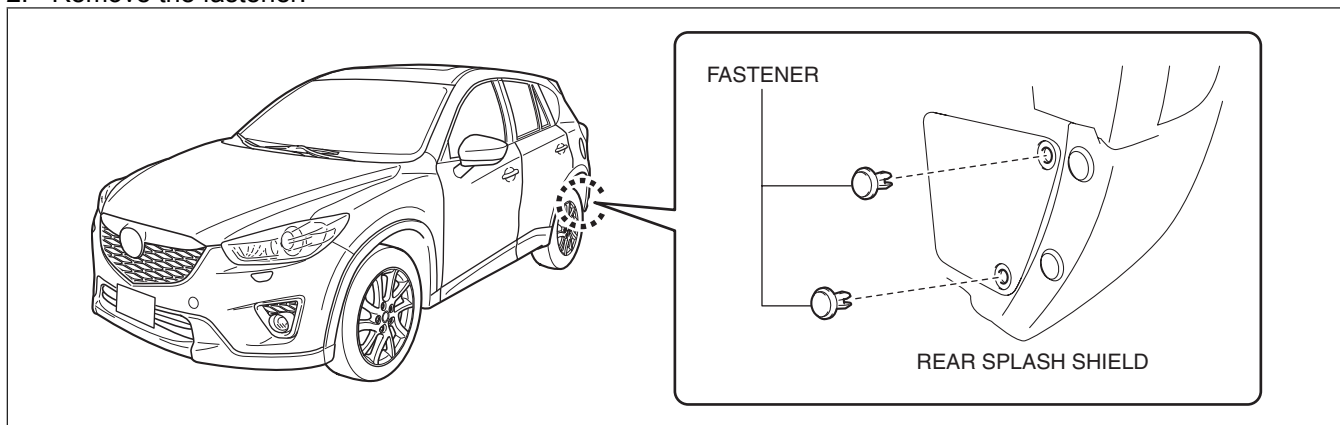


3. Remove the service hole cover.

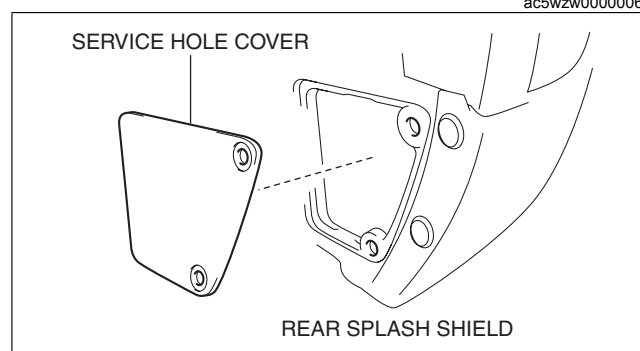

4. Rotate the socket in the direction of the arrow (1) shown in the figure and remove it from the rear fog light in the direction of the arrow (2) shown in the figure.

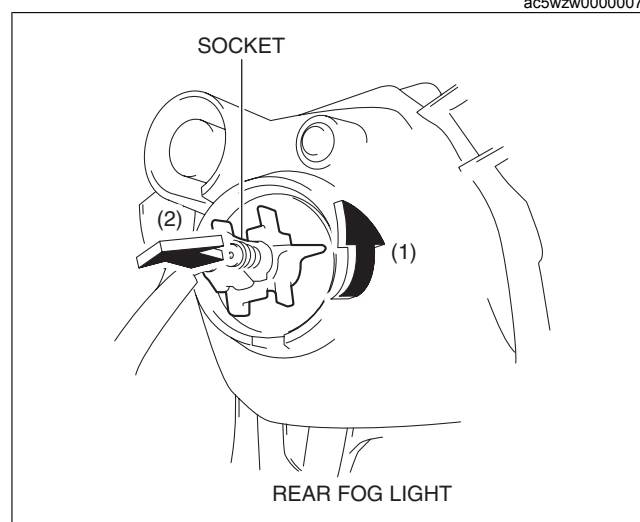

5. Remove the rear fog light bulb.
6. Install in the reverse order of removal.

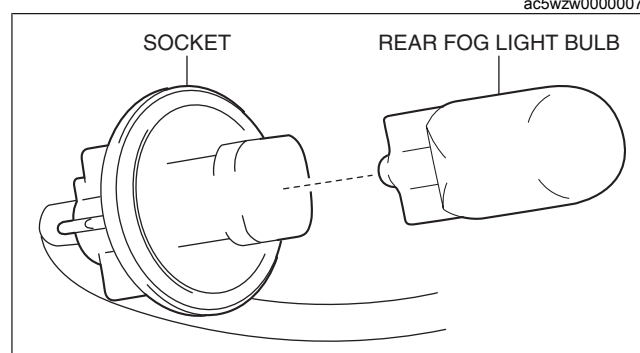

ac5wzw00000072