

FRONT ULTRASONIC SENSOR SHORT-CORD INSPECTION

id092200031800


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
3. Remove the front ultrasonic sensor short-cord. (See FRONT ULTRASONIC SENSOR SHORT-CORD REMOVAL/INSTALLATION.)
4. Verify that the continuity between the front ultrasonic sensor short-cord terminals is as indicated in the table.

○—○ : Continuity

Test condition	Terminal							
	Vehicle wiring harness (C06 (LH)/C07 (RH)) side connector				Front ultrasonic sensor side connector		Front corner ultrasonic sensor side connector	
	A	B	D	E	A	B	A	B
Under any condition	○							○
		○					○	
			○		○			
				○		○		

ac5wzw00003267

ILLUSTRATION INDICATES LEFT SIDE. (RH SIDE IDENTICAL)

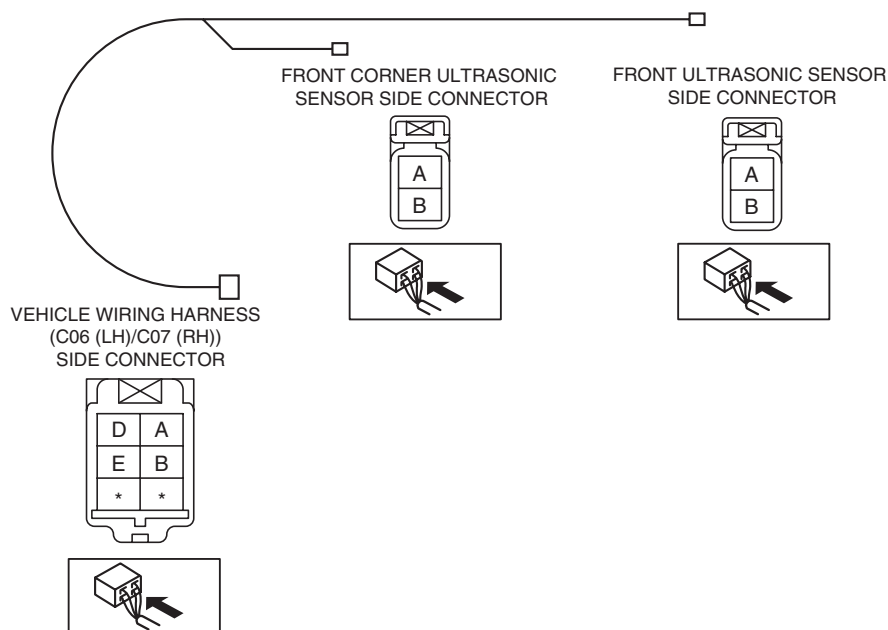

ac5jjw00001273

- If not as indicated in the table, replace the front ultrasonic sensor short-cord.