

EGR COOLER BYPASS VALVE [SKYACTIV-D 2.2]


id0116e1707800

Purpose, Function

- The amount of exhaust gas not passed through the EGR cooler, which is re-circulated to the intake manifold, is adjusted.


Construction

- The EGR cooler bypass valve is installed to the intake manifold.

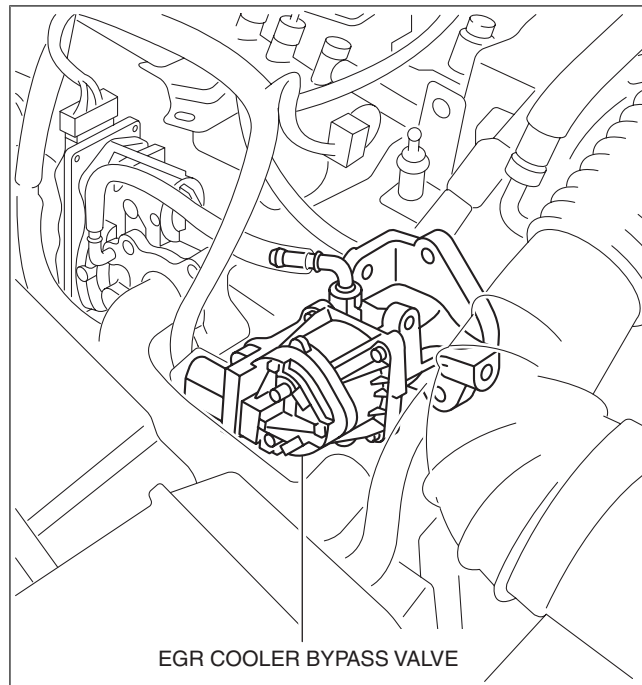

ac5wzn00002261


- Consists of the valve, spring, rod, filter, plug, and motor component.
- The EGR cooler bypass valve has an integrated EGR cooler bypass valve position sensor. (See EGR COOLER BYPASS VALVE POSITION SENSOR [SKYACTIV-D 2.2].)

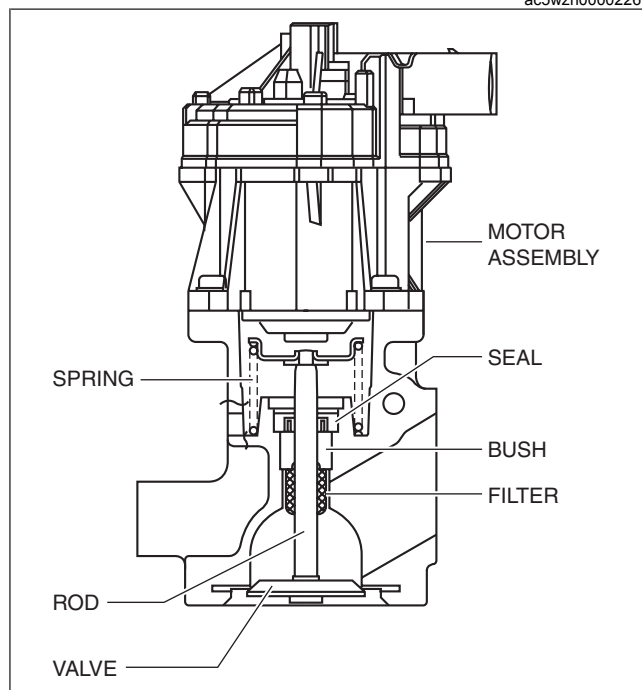

ac5wzn00002262

Operation

- The PCM drives the DC motor of the valve by the pulse-width modulation signal.
- Control of exhaust gas temperature is enabled by cooperative control of the EGR valve.

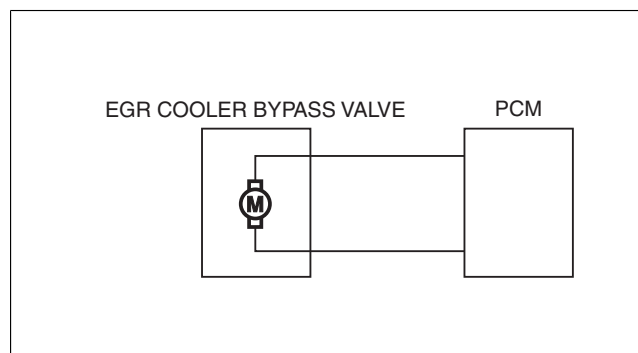

ac5wzn00002263