


REDUCTION PLANETARY GEAR DISASSEMBLY

id051700661300

Structural View

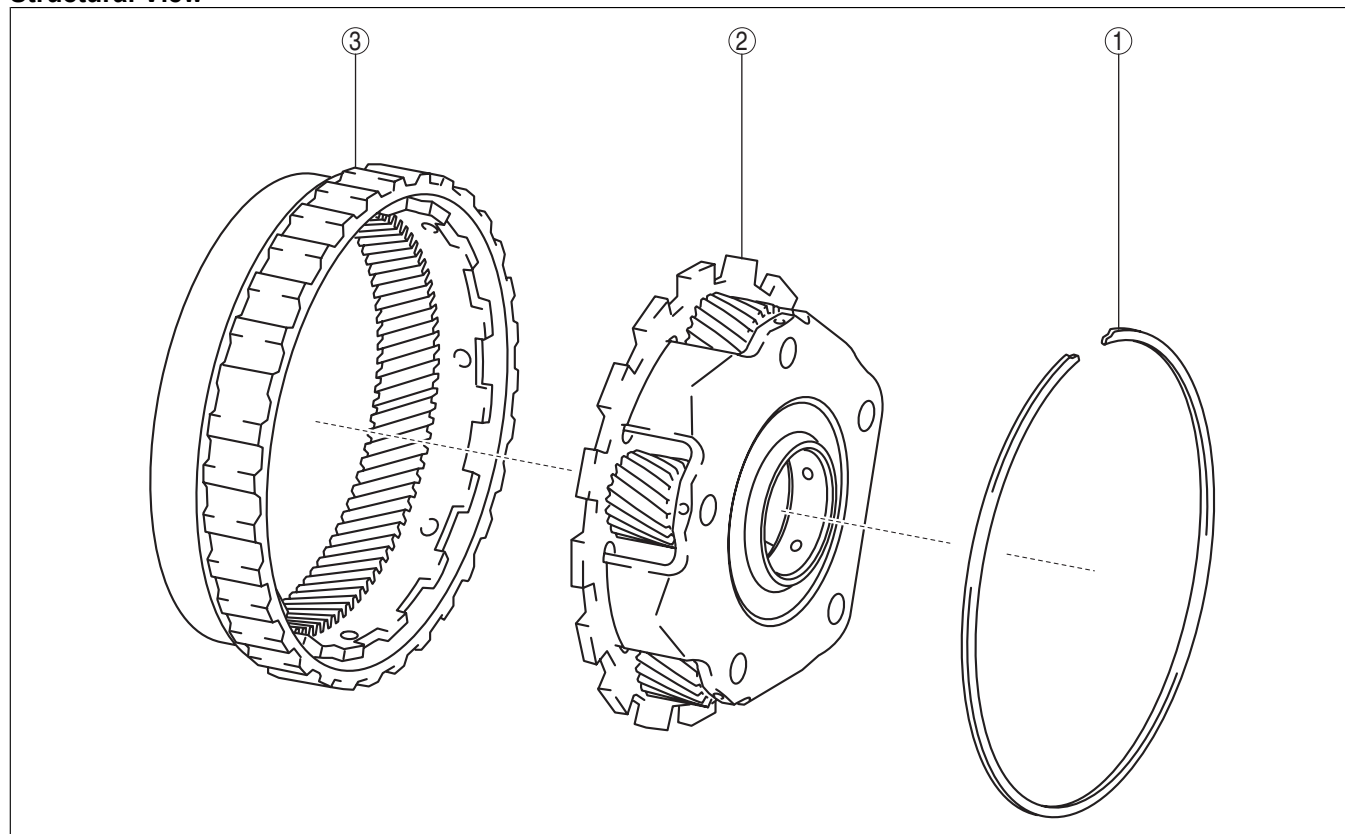

bgw3ja00000238

1	Snap ring
2	Reduction planetary carrier

3	Rear internal gear
---	--------------------

Disassembly Procedure


1. Perform the following inspection:

Caution

- If there is no malfunction based on the results of the inspection, it is not necessary to disassemble the reduction planetary gear.


- Visual inspection of parts (See VISUAL INSPECTION OF PARTS)
- Reduction planetary gear inspection (See REDUCTION PLANETARY GEAR INSPECTION)
- If there is a malfunction, disassemble the reduction planetary gear and replace the malfunctioning part with a new part.

2. Remove the snap ring.

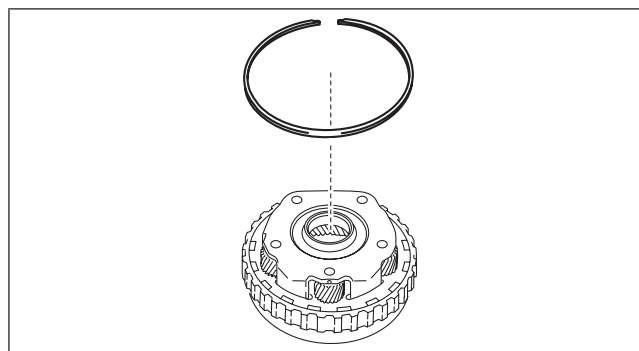

bgw3ja00000239

-
3. Remove the reduction planetary carrier.
 4. Clean the disassembled parts. (See AUTOMATIC TRANSAXLE CLEANING.)

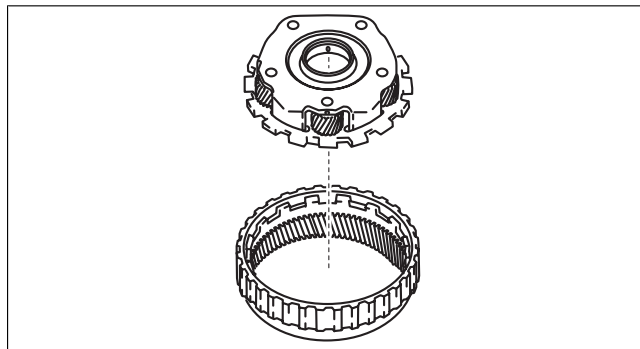

bgw3ja00000240