

## REAR SEAT CUSHION REMOVAL/INSTALLATION


id091300912600

### Caution

- When removing or putting in the rear seat cushion, contact with the surrounding areas of the vehicle could cause scratches and damage. When removing or putting in the rear seat cushion, always use two or more persons to perform the work and be careful not to scratch or damage the rear seat cushion and the surrounding area of the vehicle.
- When performing the procedure with a rear seat cushion removed from the vehicle, perform the procedure on a clean cloth so as not to damage or soil the seat.


### 6:4 Split Type

1. Detach tabs A in the direction of the arrow (1) shown in the figure while lifting cover A in the direction of the arrow (2), detach hook B, and then remove cover A.

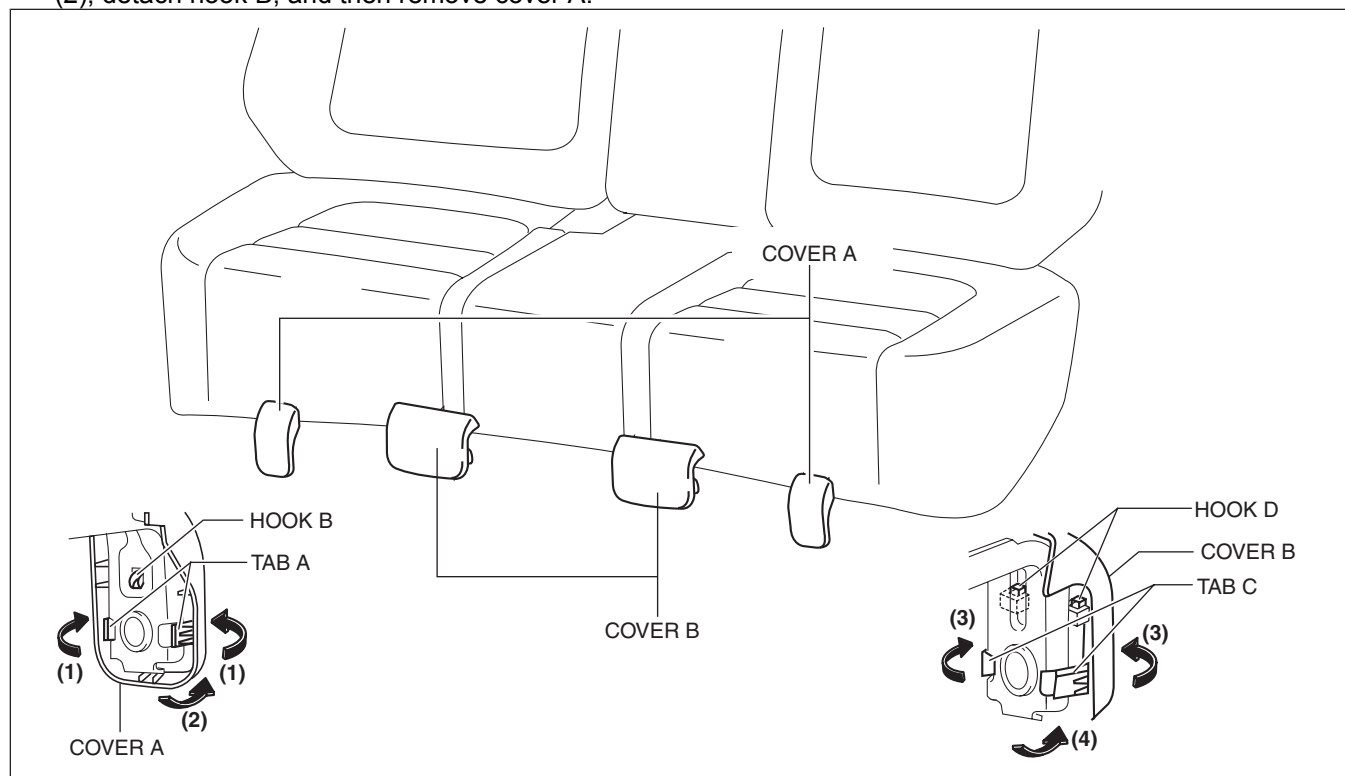


ac5uuw00001949

2. Detach tabs C in the direction of the arrow (3) shown in the figure while lifting cover B in the direction of the arrow (4), detach hook D, and then remove cover B.
3. Remove bolts A.

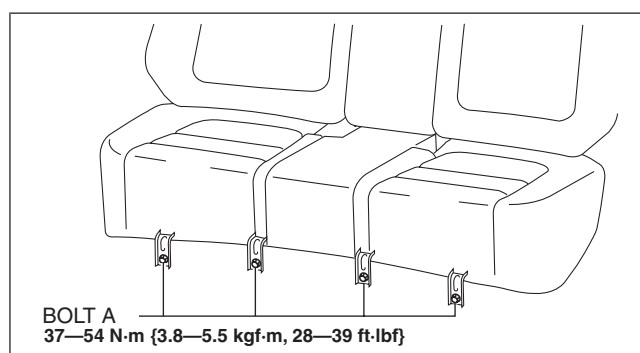

ac5uuw00001950

4. Lift up the rear seat cushion in the direction of the arrow (5) shown in the figure and set the pin E aside from the front hinge.

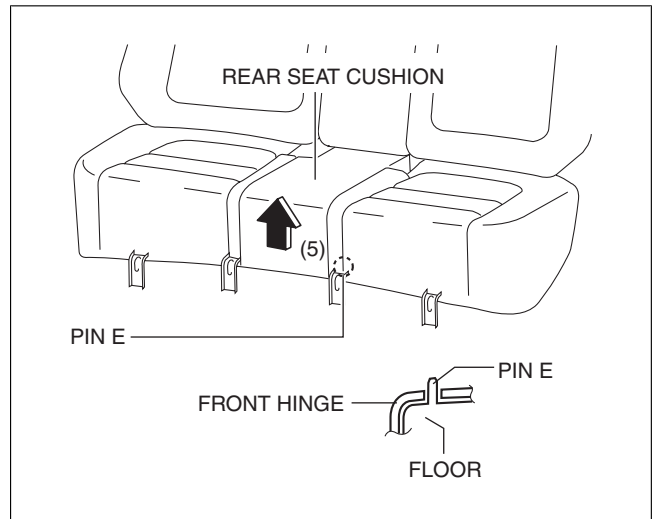


ac5wzw00003209

5. Move the rear seat cushion in the direction of the arrow (6), (7) shown in the figure and set the hook F aside.
6. Remove the rear seat cushion.
7. Install in the reverse order of removal.

#### Warning


- If the hook and wire are not locked, the seat may move during a collision and the occupant may be injured. After installing the rear seat cushion, verify that the hook and wire are locked.

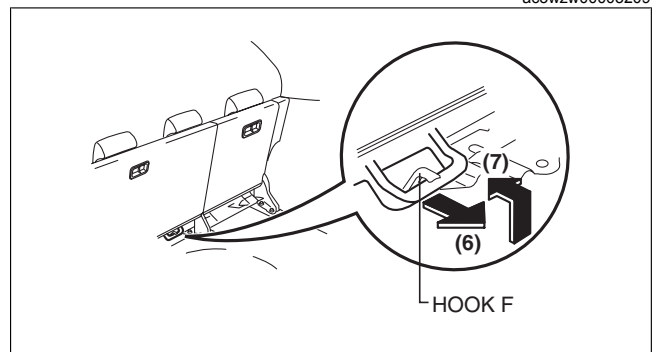

ac5uuw00001952

#### 4:2:4 Split Type

1. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)
2. Remove the rear seat. (See REAR SEAT REMOVAL/INSTALLATION.)
3. Remove bolts A.

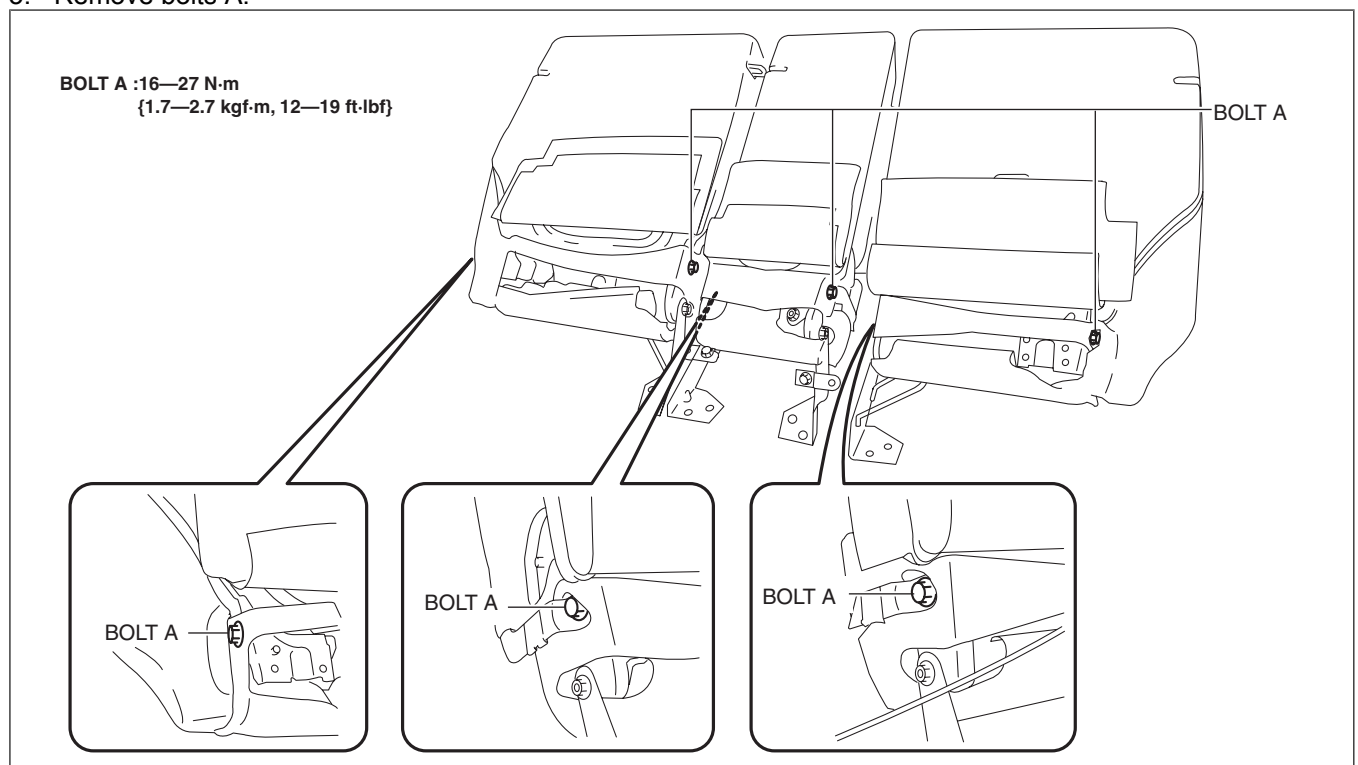

ac5wzw00003119

4. Remove the rear seat cushion.
5. Install in the reverse order of removal.