

MANUAL TRANSAXLE OIL INSPECTION [D66M-R, D66MX-R]

id0515md159600

1. Park the vehicle on level ground.
2. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
3. Remove the oil level plug and gasket.
4. Verify that the manual transaxle oil is near the brim of the plug port.
 - When the oil level is lower than the lower limit, add manual transaxle oil.

Manual transaxle oil grade

API service GL-4

Manual transaxle oil viscosity


SAE 75W-80

5. Install a new gasket and the oil level plug.

Tightening torque

39—59 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

6. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)

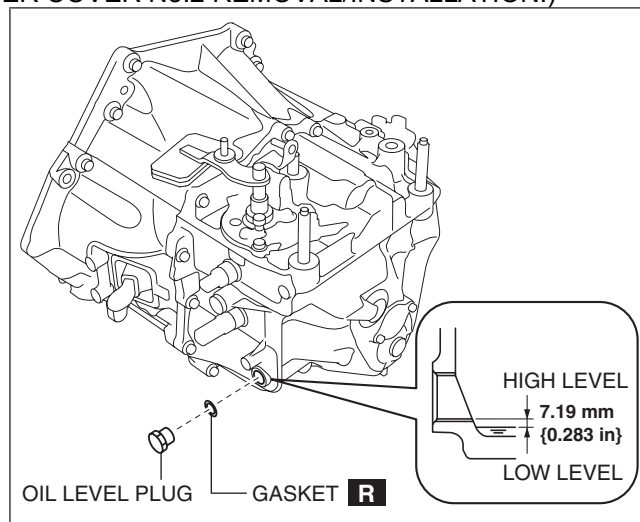

ac5wzw00003433