


## ROOF CARRIER BRACKET REMOVAL/INSTALLATION

id091600801700

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Sunroof seaming welt (with sunroof system) (See SUNROOF UNIT REMOVAL/INSTALLATION.)
  - (2) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
  - (3) Map light (See MAP LIGHT REMOVAL/INSTALLATION.)
  - (4) Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
  - (5) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
  - (6) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
  - (7) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
  - (8) Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
  - (9) Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
  - (10) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
  - (11) Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
  - (12) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
  - (13) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
  - (14) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
  - (15) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
  - (16) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
  - (17) Headliner (See HEADLINER REMOVAL/INSTALLATION.)
3. Remove nuts.

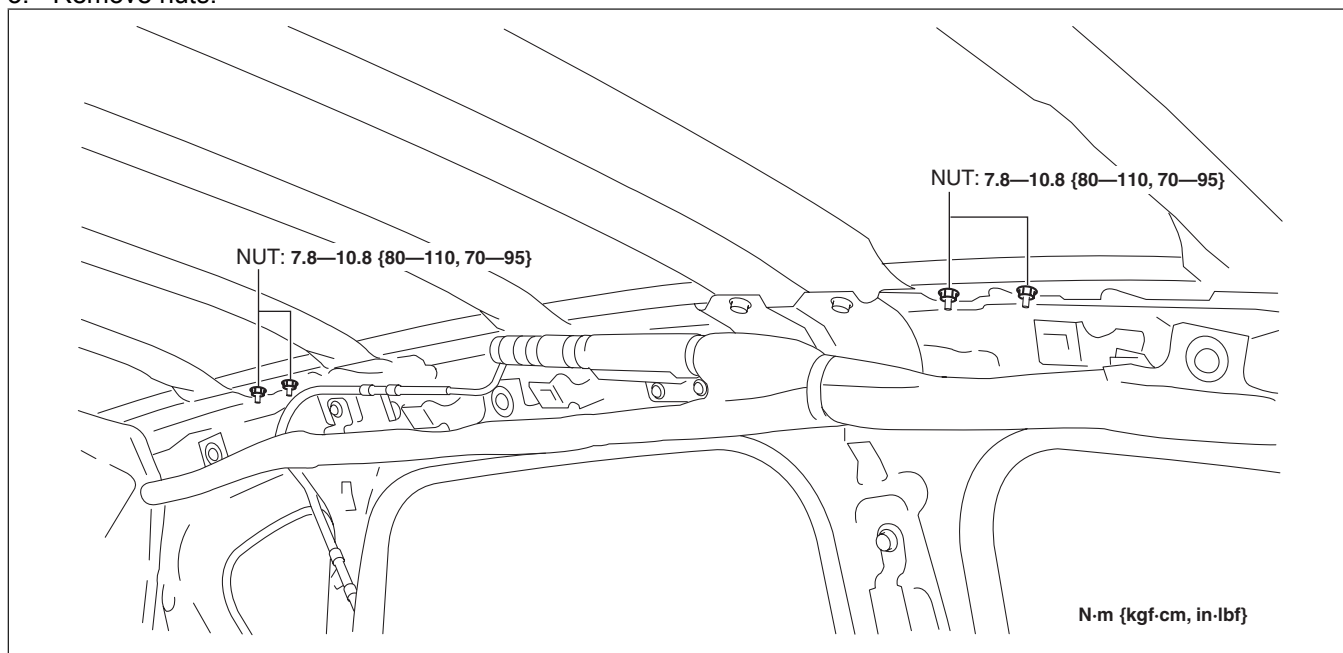

ac5wzw00003028

4. Remove the roof carrier brackets.
5. Install in the reverse order of removal.

### Note

- Install the roof carrier bracket so that the arrow on it faces inward.

