


MANUAL TRANSAXLE [C66M-R, C66MX-R]

id0515ma283800

Purpose, Function


- The manual transaxle converts the drive force (speed, torque, rotation direction) input from the engine according to the shift lever operation inside the vehicle.

Construction

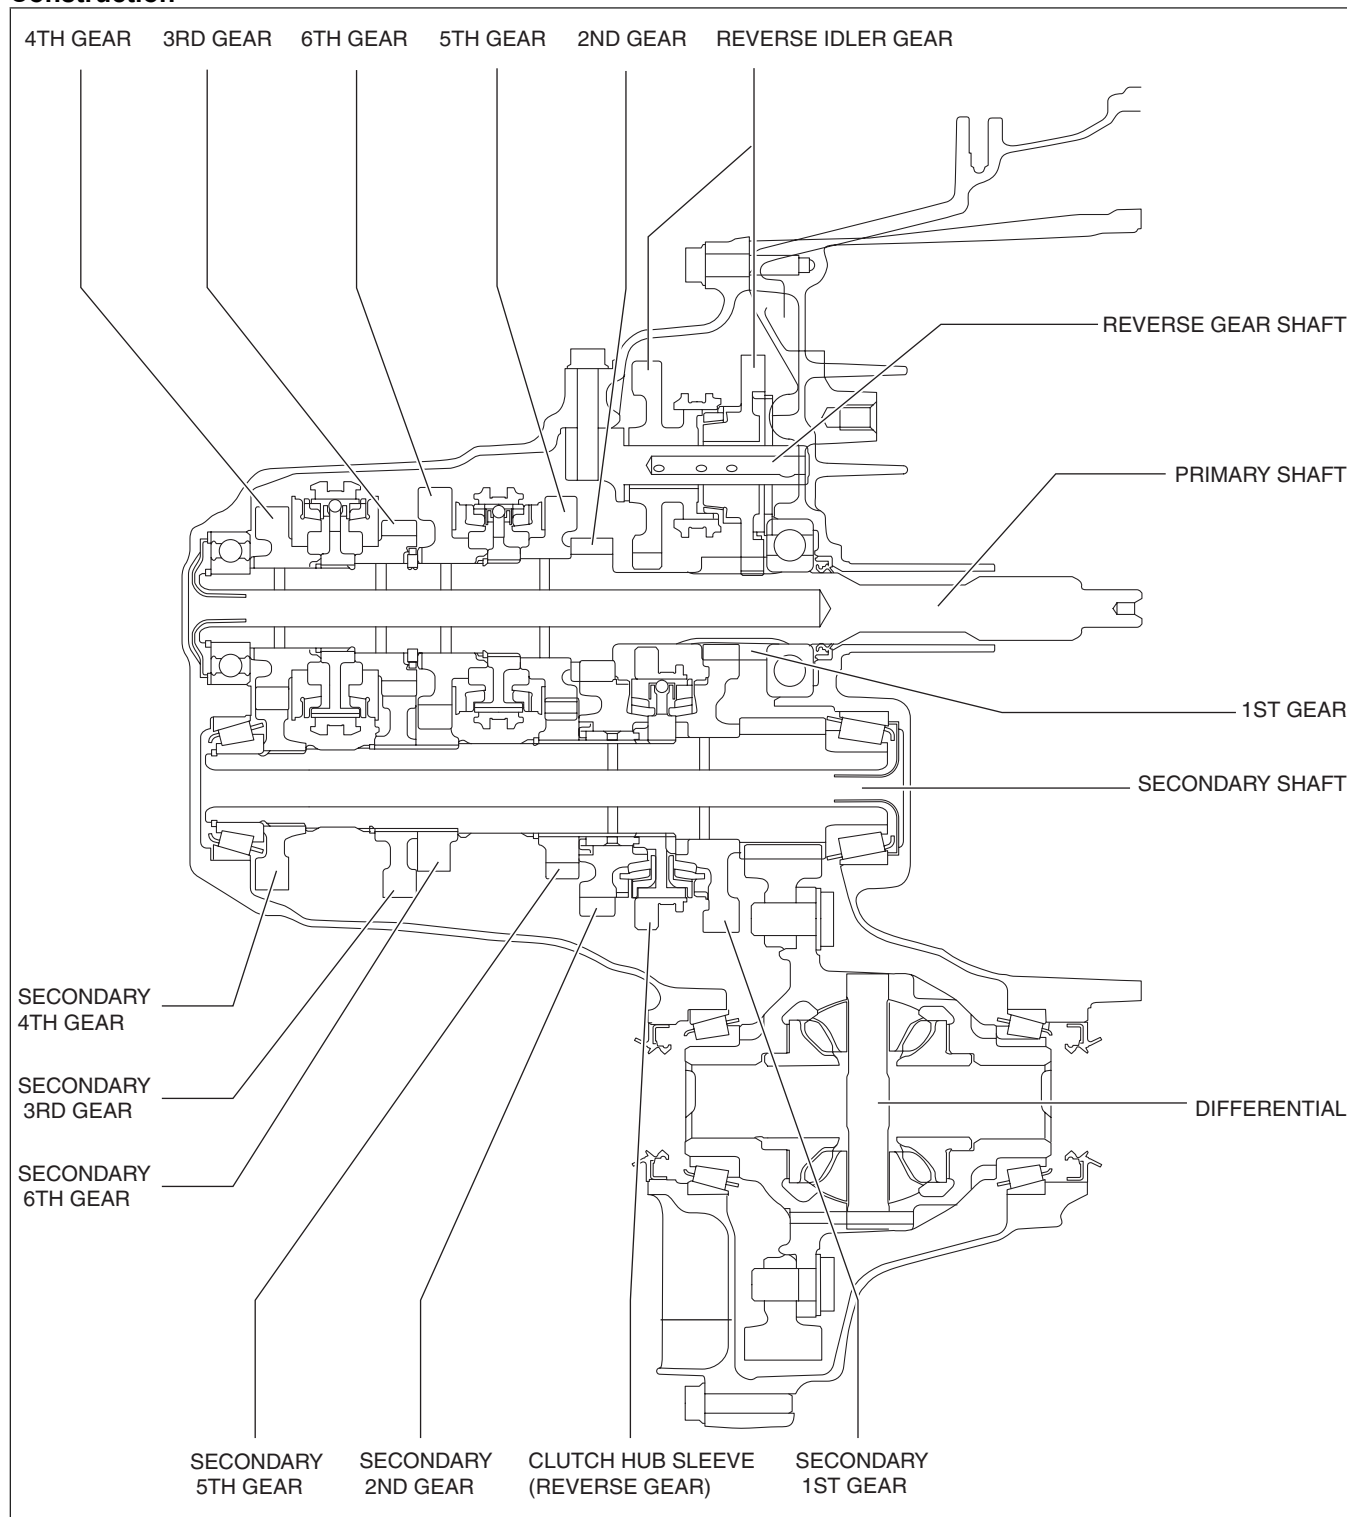

am3uun00001754

Operation

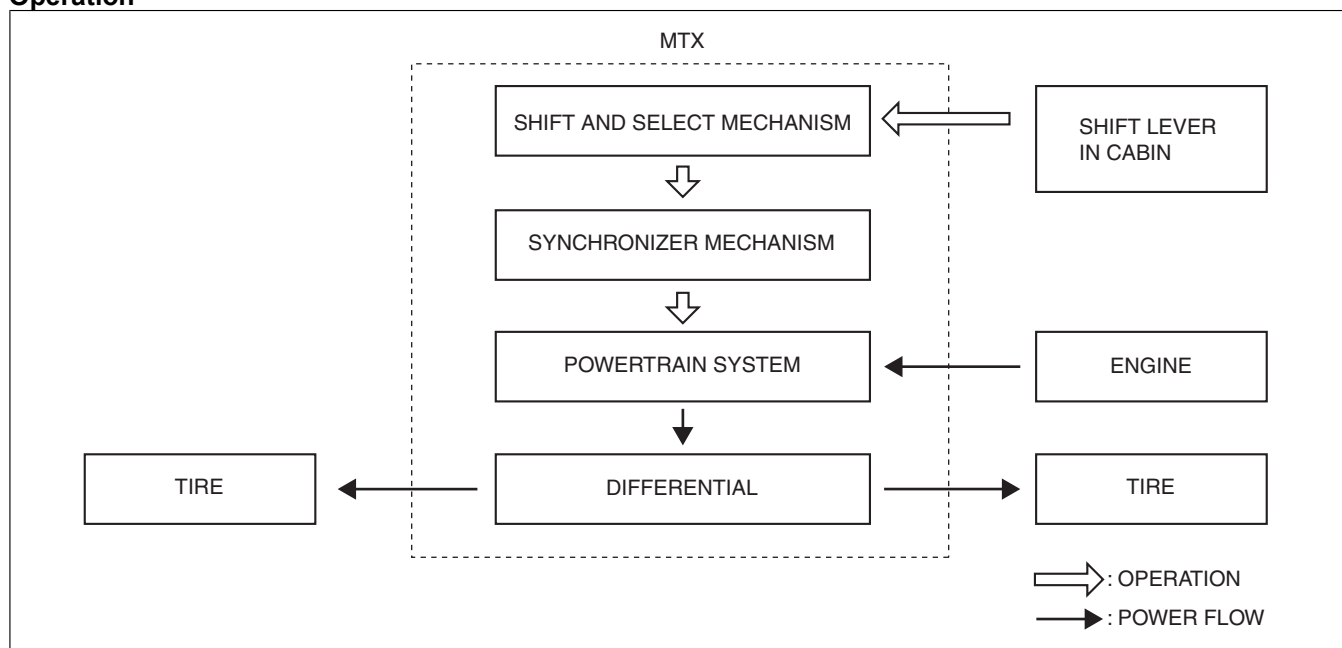

am3uun00001755