


FRONT FOG LIGHT REMOVAL/INSTALLATION


id091800802100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the screws and bolt.

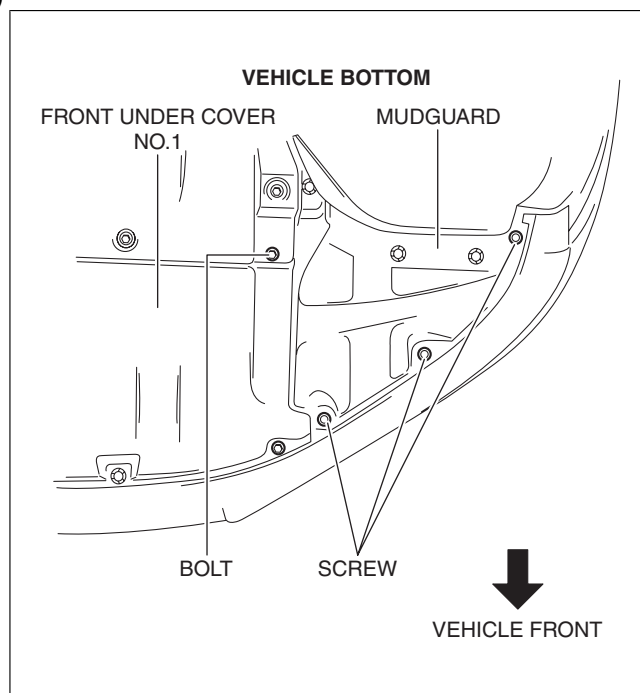


ac5wzw00001190

3. Pull up the front under cover No.1 and remove the mudguard screw shown in the figure.

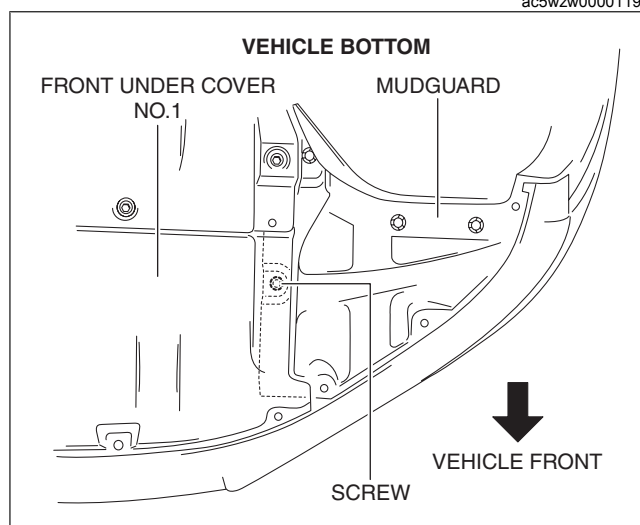


ac5wzw00001191

4. Disconnect the connector.

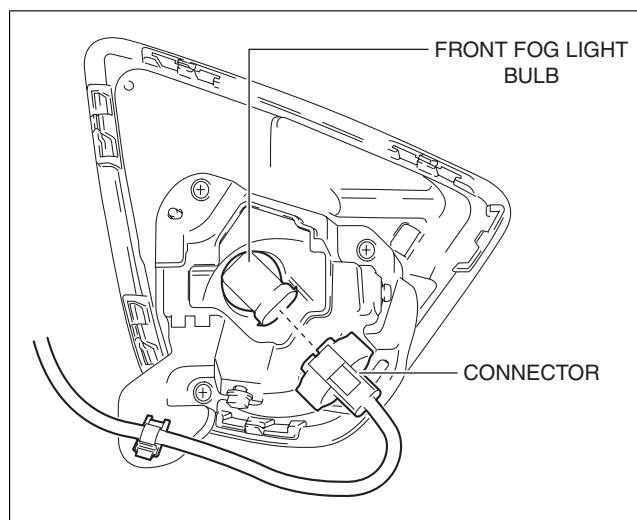


ac5wzw00000433

5. While pressing the clip tab in the direction of the arrow (1) shown in the figure, press the clip in the direction of the arrow (2) shown in the figure to detach the clip tab and bracket (vehicles without parking sensor system on LH side).

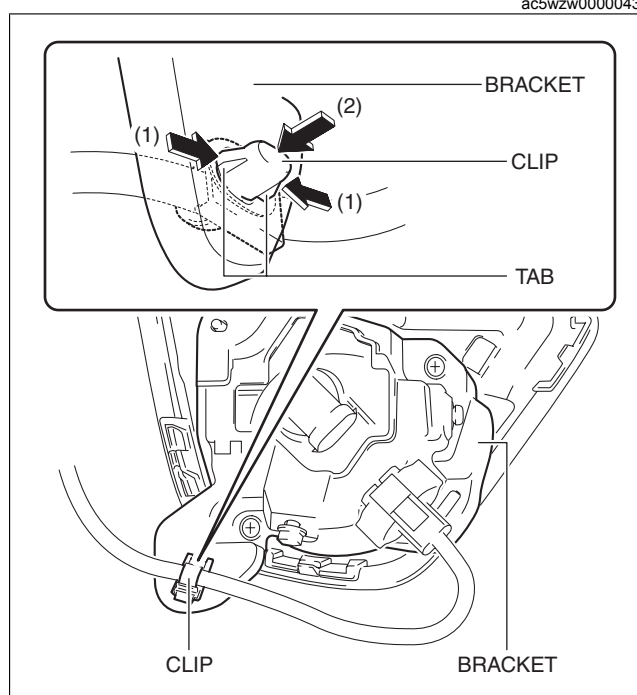


ac5wzw00000817

6. Remove the clip.

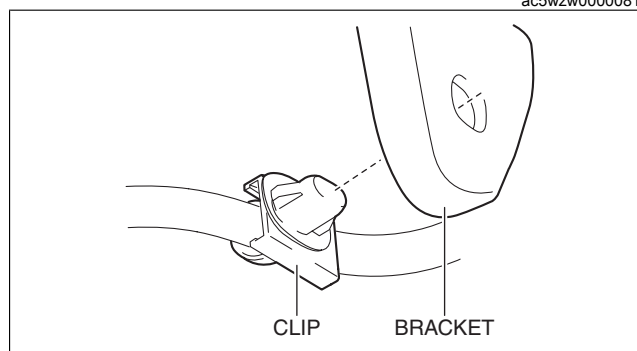


ac5wzw00000434

7. Remove the screws.

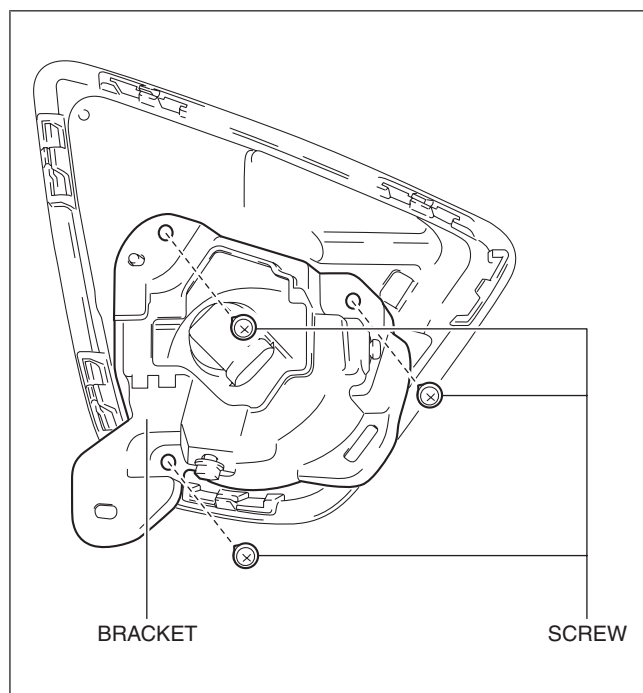


8. Remove the front fog light and bracket.

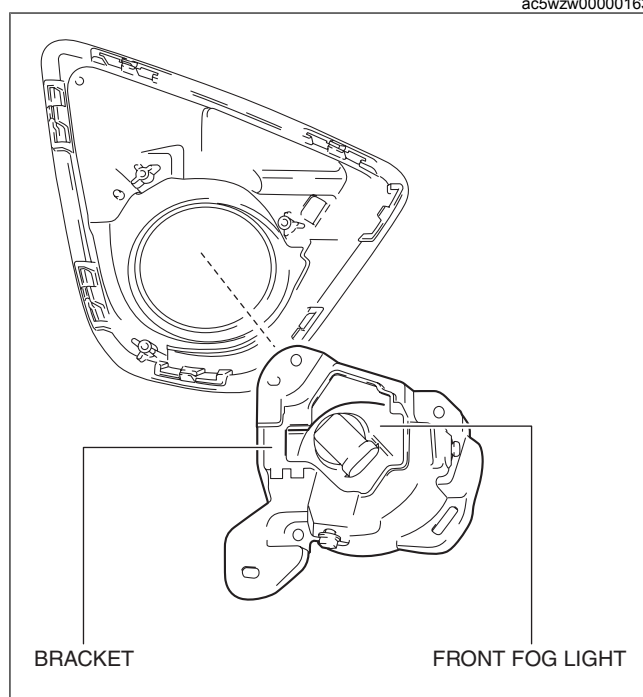

ac5wzw00000163

ac5wzw00000435

9. Remove the bolt and screw.

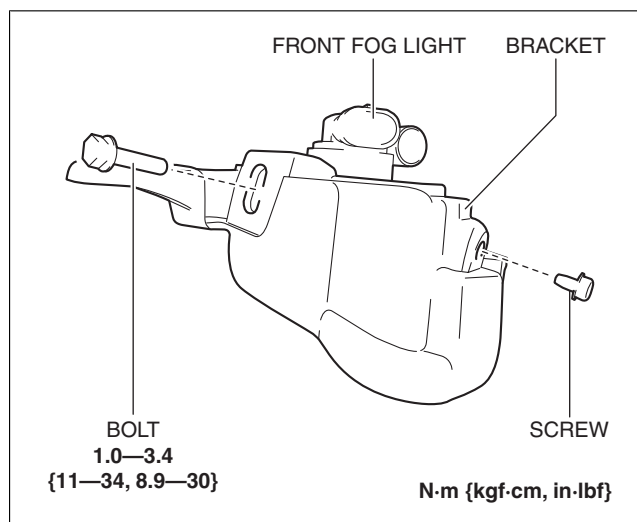

ac5wzw00001192


10. Remove the front fog light.

Caution

- A halogen bulb generates extremely high heat when it is illuminated. If the surface of the bulb is soiled, excessive heat will build up and the life of the bulb will be shortened. When replacing the bulb, hold the metal flange, not the glass.

11. Install in the reverse order of removal.

12. Adjust the front fog light aiming. (See FRONT FOG LIGHT AIMING.)

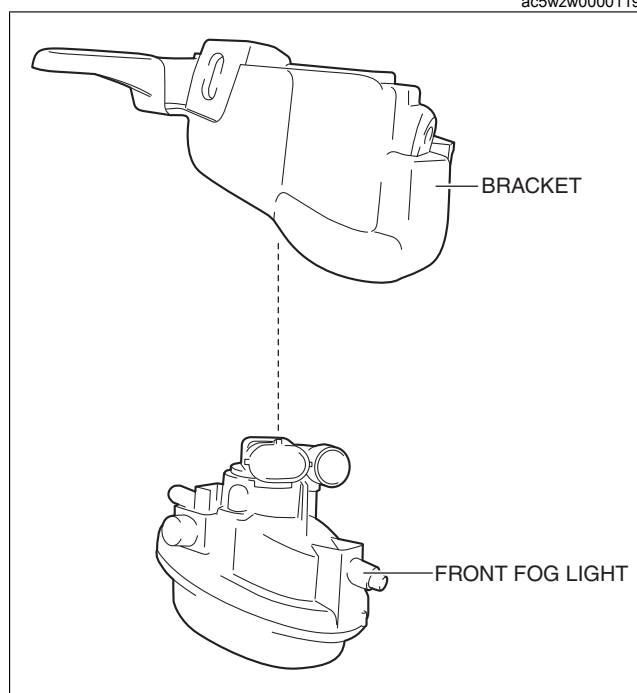

ac5wzw00000437