

BONNET LATCH SWITCH INSPECTION

id091400510600


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
3. Disconnect the bonnet latch switch connector. (See BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
4. Verify that the continuity is as indicated in the table.

Note

- Inspect the continuity when the bonnet is open and closed.

○—○:CONTINUITY		
BONNET LATCH SWITCH (BONNET CONDITION)	TERMINAL	
	A	B
ON (CLOSE)	○—○	○—○
OFF (OPEN)		

ac5wzw00000387

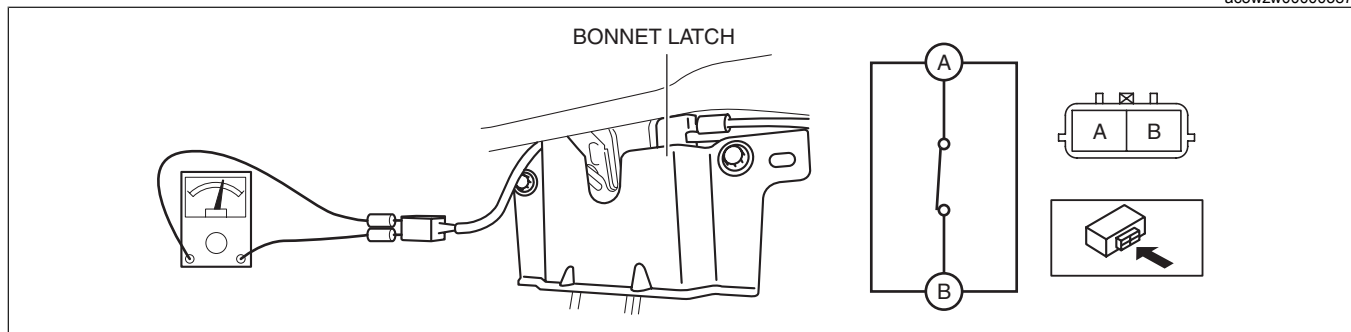

ac5wzw00000308

- If the operation as indicated in the table cannot be verified, replace the bonnet latch.