

REAR SEAT CUSHION TRIM REMOVAL/INSTALLATION


id091300912700

Caution

- When removing or putting in the rear seat cushion, contact with the surrounding areas of the vehicle could cause scratches and damage. When removing or putting in the rear seat cushion, always use two or more persons to perform the work and be careful not to scratch or damage the rear seat cushion and the surrounding area of the vehicle.
- When performing the procedure with a rear seat cushion removed from the vehicle, perform the procedure on a clean cloth so as not to damage or soil the seat.


6:4 Split Type

1. Remove the rear seat cushion. (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
2. Slide hooks A in the order of (1), (2) shown in the figure to detach it from the rear seat cushion pad.

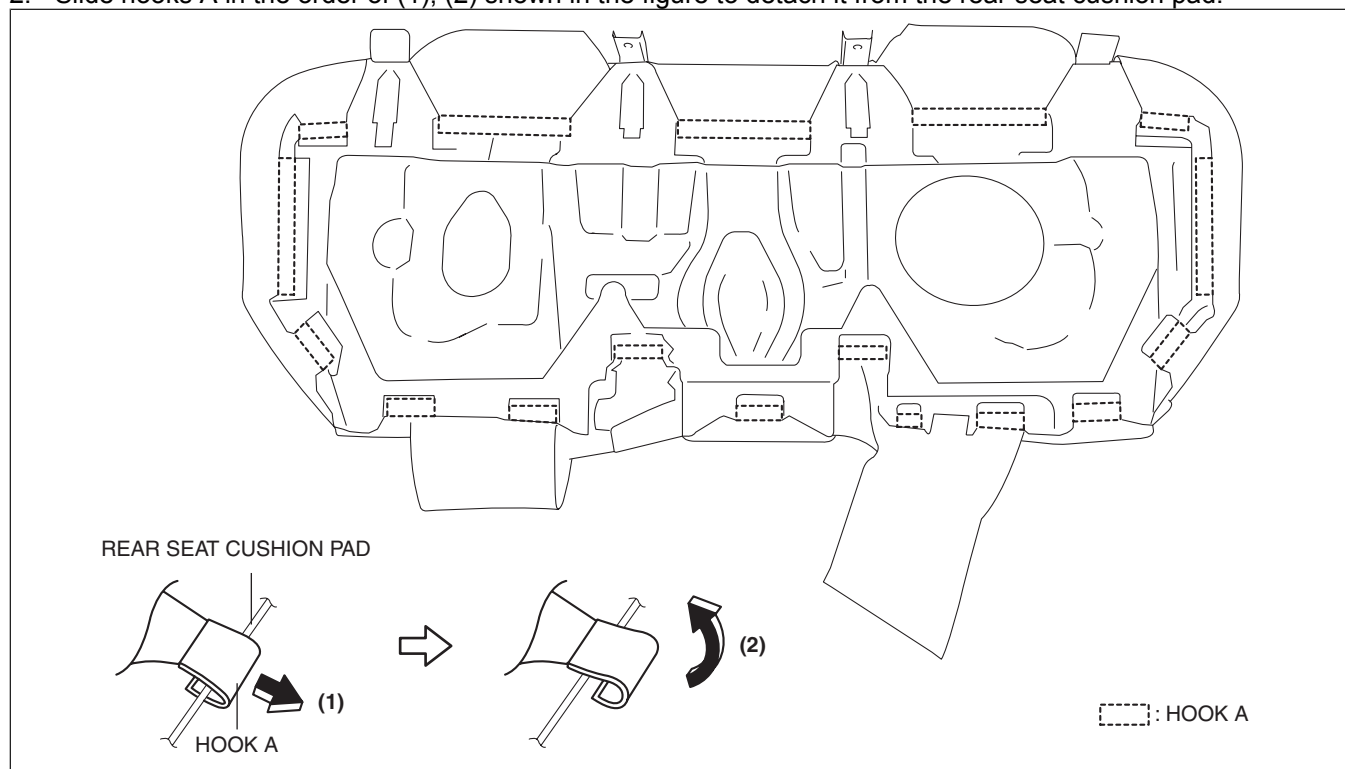

3. Partially peel back the rear seat cushion trim from the rear seat cushion pad, remove C rings in the order of (3), (4), (5), (6), (7), (8), (9), (10) shown in the figure,

ac5uuw00001954

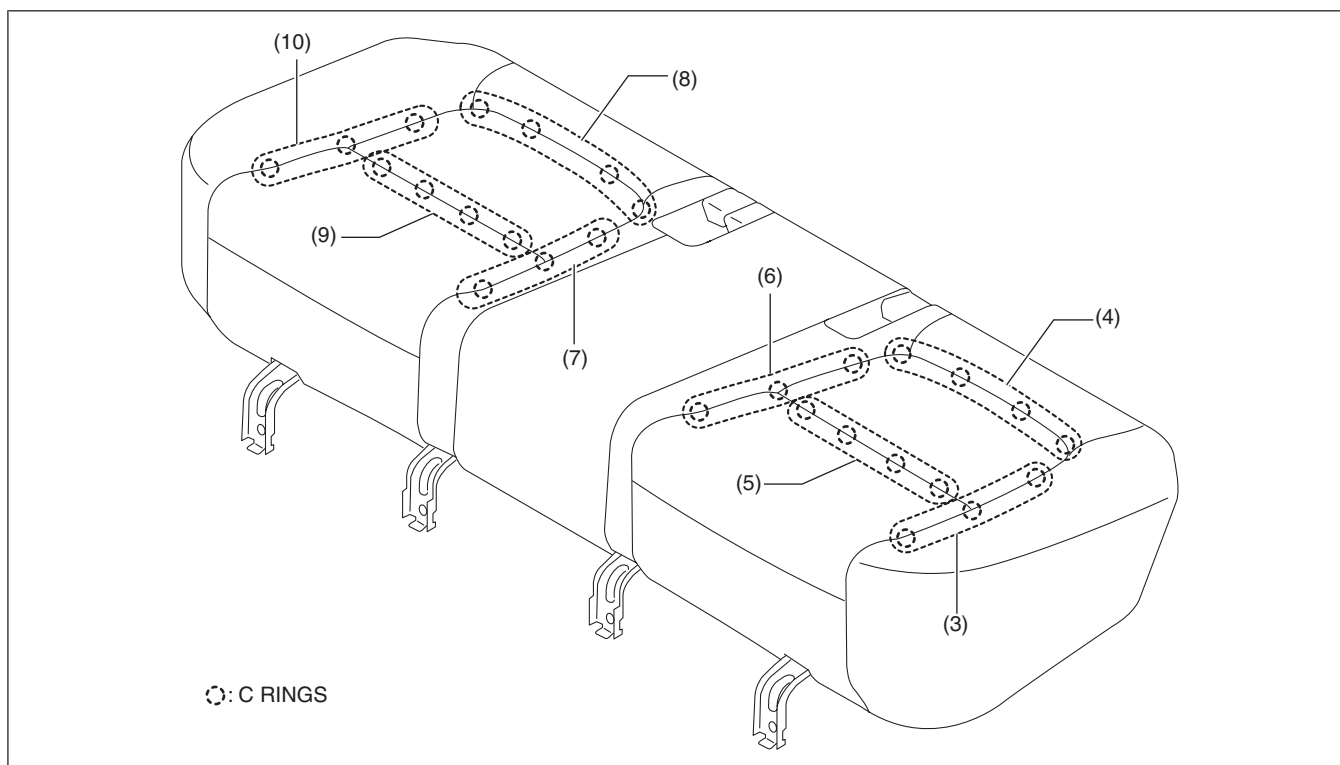

ac5uuw00001955


Caution

- If a damaged C rings are reused, it may not be possible to install the rear seat cushion trim and rear seat cushion pad correctly. When removing and installing C rings, be careful not to damage them.
- If a C rings are damaged, replace it with a new one.

4. Install in the reverse order of removal.


4:2:4 Split Type

1. Remove the following parts:
 - (1) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
 - (2) Rear seat (See REAR SEAT REMOVAL/INSTALLATION.)
 - (3) Rear seat cushion (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
2. Slide hooks A in the order of (1), (2) shown in the figure to detach it from the rear seat cushion pad.

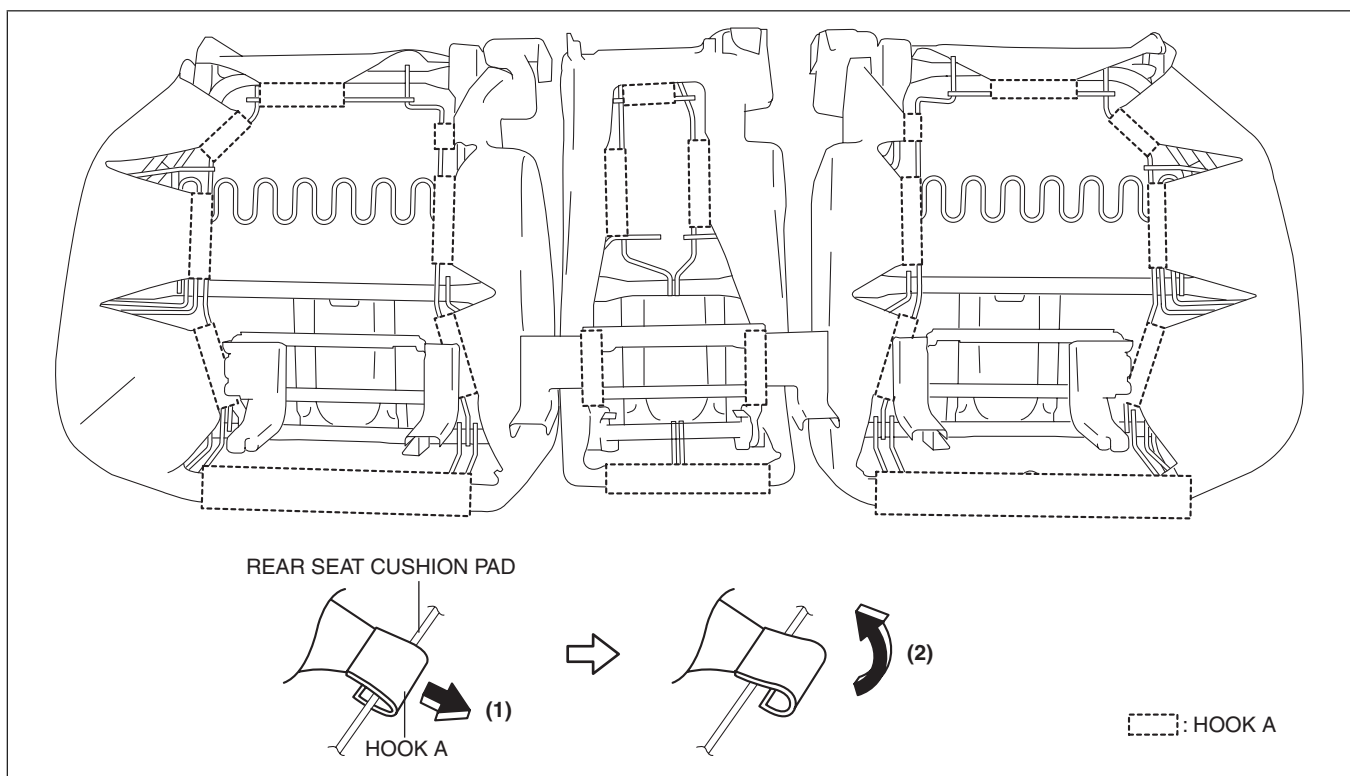

ac5uuw00001956

3. Partially peel back the rear seat cushion trim from the rear seat cushion pad, remove C rings in the order of (3), (4), (5), (6), (7) shown in the figure,

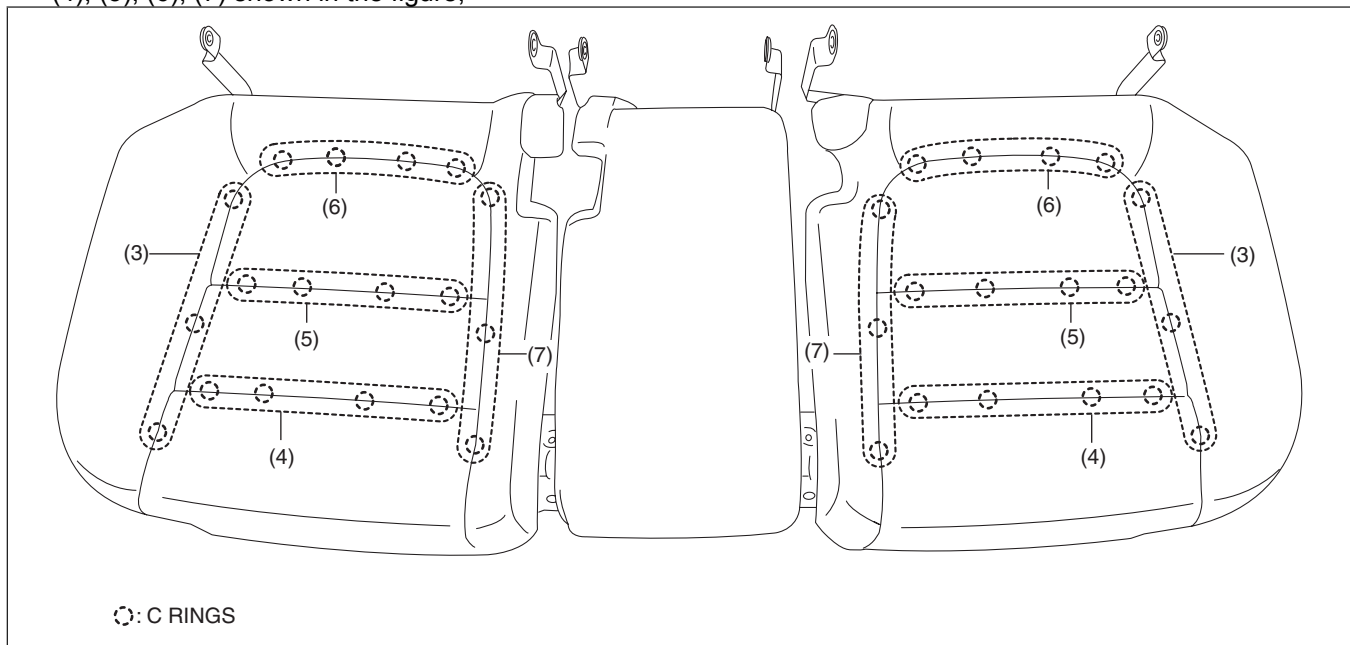

ac5uuw00001957

Caution

- If a damaged C rings are reused, it may not be possible to install the rear seat cushion trim and rear seat cushion pad correctly. When removing and installing C rings, be careful not to damage them.
- If a C rings are damaged, replace it with a new one.

4. Install in the reverse order of removal.