

NON-RETURN VALVE [SKYACTIV-D 2.2]

id0114z7188800


Purpose, Function

- Assures safety by preventing fuel from returning to the fuel filler opening.

Construction

- The non-return valve cannot be removed as it is installed inside the fuel tank.


2WD

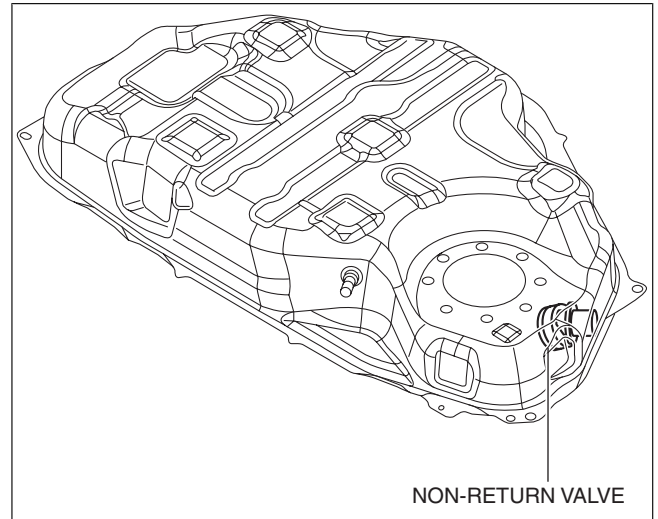

ac5wzn00001961

4WD


- A single valve type has been adopted for the non-return valve.

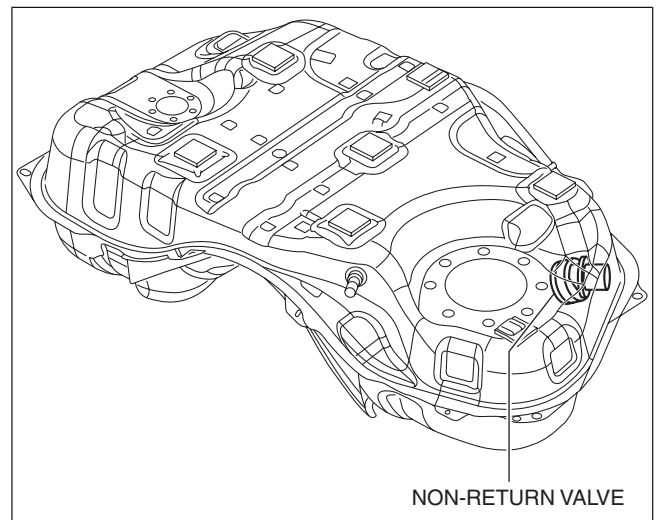

ac5wzn00001962

Operation

- Normally, the valve is closed as shown by the dotted line in the figure. When refueling, it opens as shown by the solid line due to the force caused by the flow of fuel. When refueling is finished, the valve returns to the normal valve position by spring force.

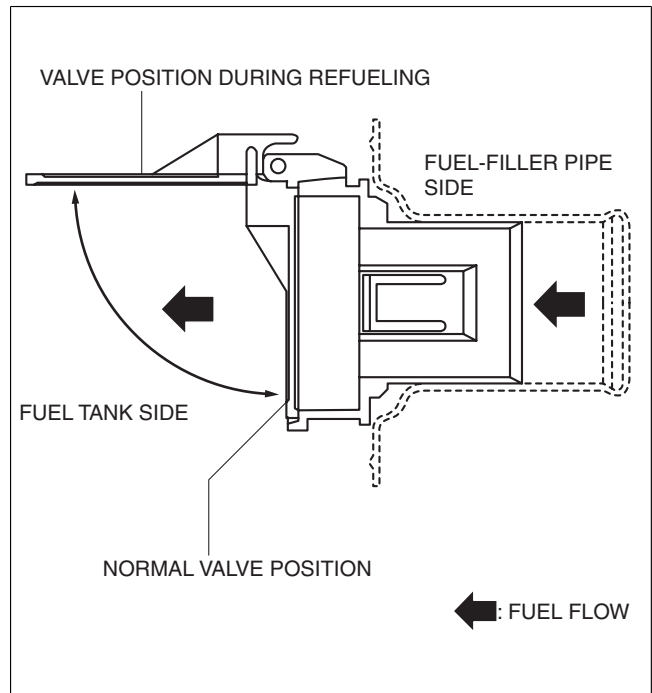

ac5wzn00001963