


D-PILLAR SPEAKER REMOVAL/INSTALLATION


id092000811000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
 - (2) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
 - (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (4) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
 - (5) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connector.
4. Remove the screws.
5. Remove the D-pillar speaker.

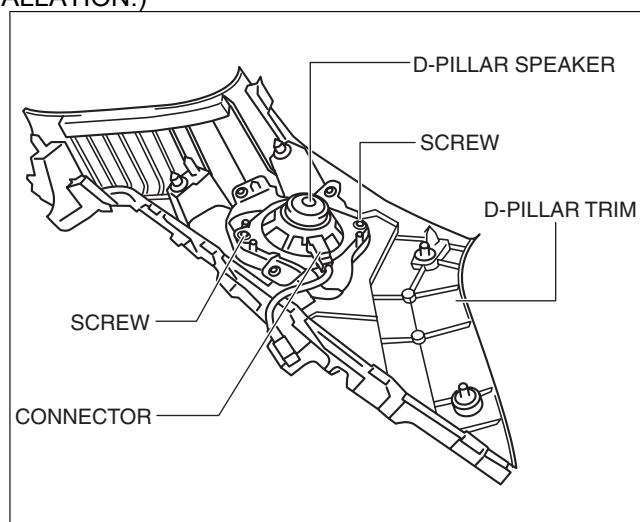

ac5jjw00000164

6. While pressing the tabs of the clip in the direction of the arrow (1) shown in the figure, press it in the direction of the arrow (2) to detach the short-cord clip from the D-pillar trim.
7. Remove the short cord.
8. Install in the reverse order of removal.

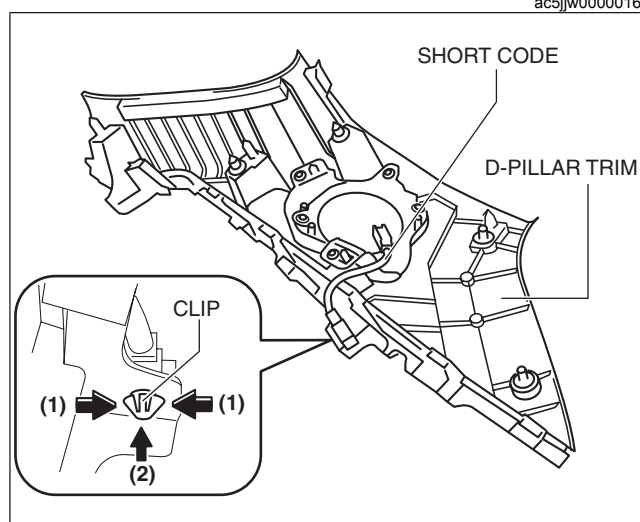

ac5wzw00005158