



REAR LATERAL LINK REMOVAL/INSTALLATION

id021400801200

1. Disconnect the rear stabilizer control link lower side nut. (See REAR STABILIZER REMOVAL/INSTALLATION [2WD].) (See REAR STABILIZER REMOVAL/INSTALLATION [4WD].)
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.
4. Inspect the wheel alignment and adjust it if necessary. (See REAR WHEEL ALIGNMENT.)

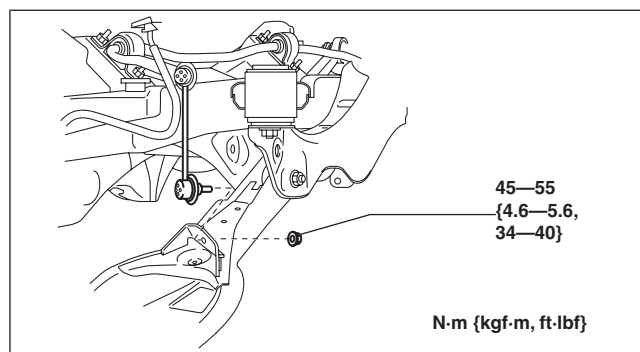

ac5uuw00000154

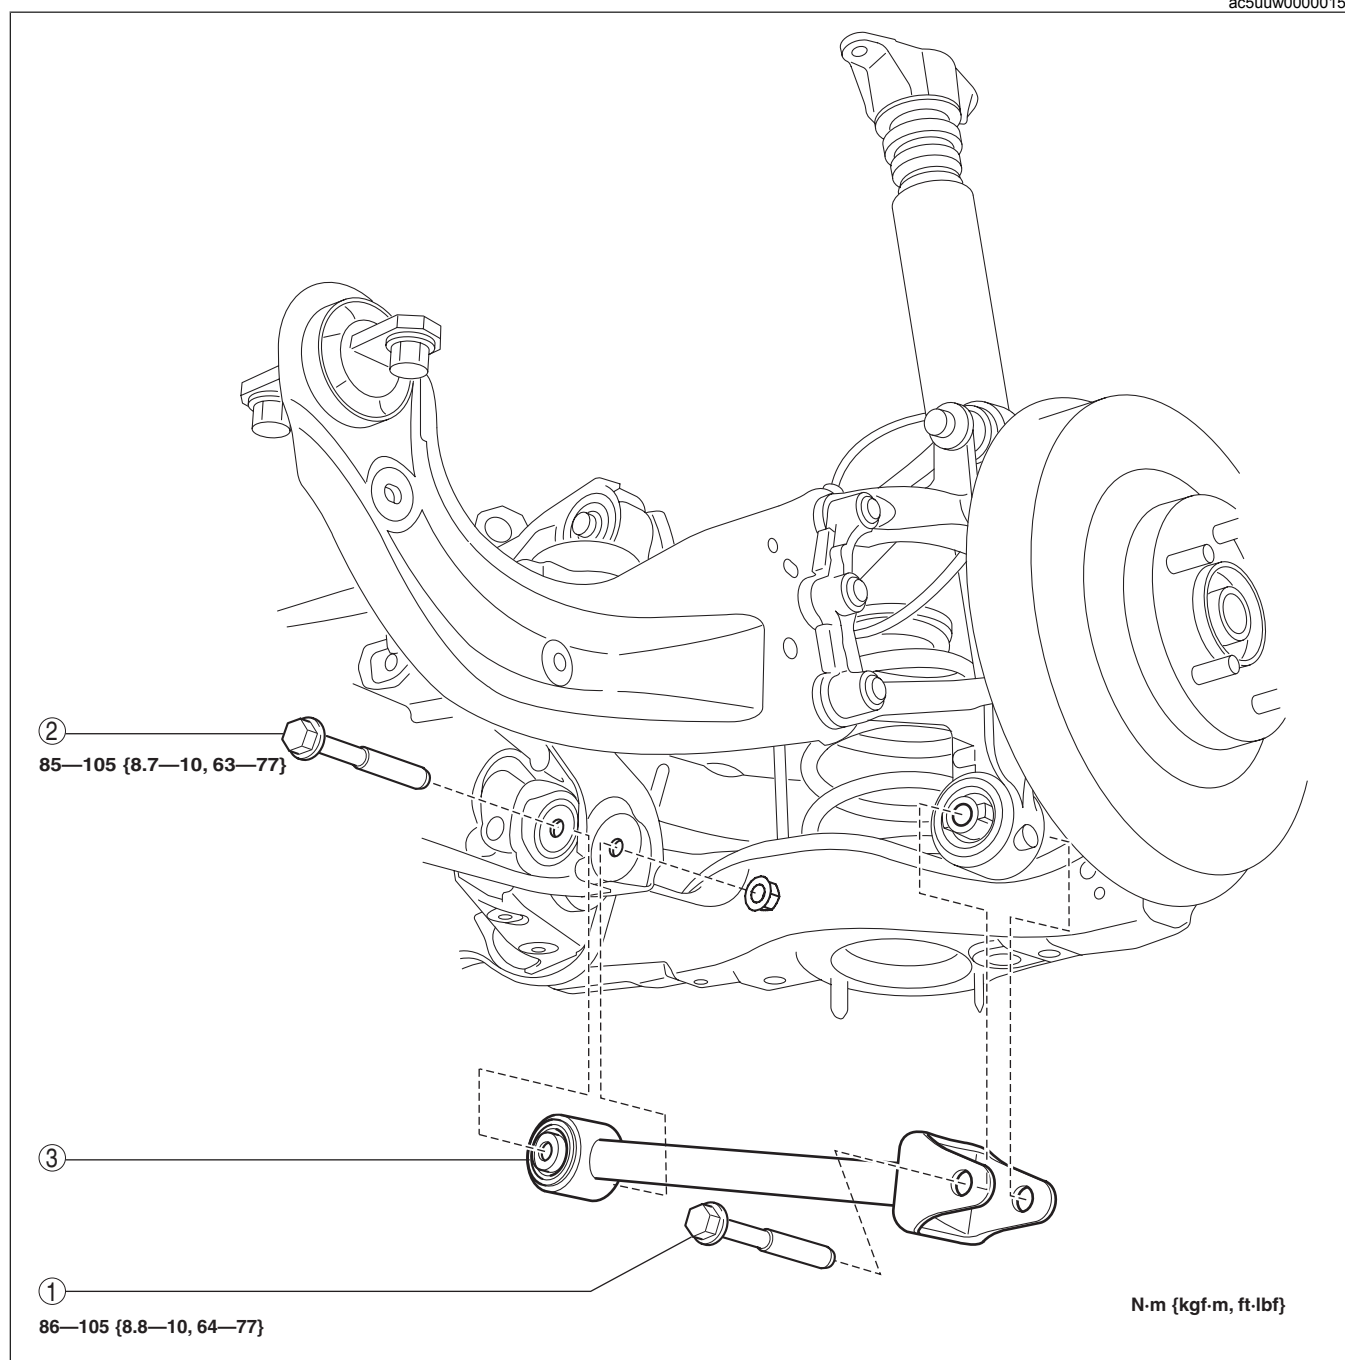


ac5wzw00002737

1	Rear lateral link outer bolt
2	Rear lateral link inner bolt

3	Rear lateral link (See Rear Lateral Link Removal Note.) (See Rear Lateral Link Installation Note.)
---	--

Rear Lateral Link Removal Note


1. Jack up the vehicle to the unloaded condition, and support the rear trailing link component using a jack.
2. Remove the rear lateral link.

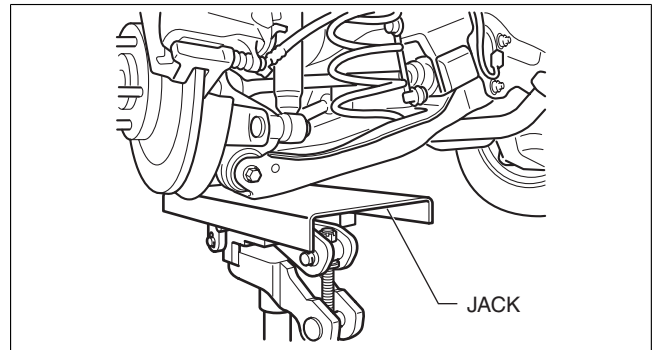

ac5wzw00004601

Rear Lateral Link Installation Note

1. Jack up the vehicle to the unloaded condition, and support the rear trailing link component using a jack.
2. Install the rear lateral link.

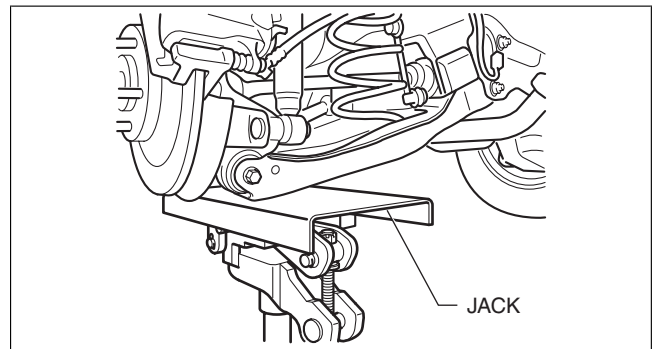

ac5wzw00004601