


KNOCK SENSOR (KS) REMOVAL/INSTALLATION [SKYACTIV-G 2.0]

id0140f4802900


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0 (WITHOUT i-stop)].)
2. Remove the plug hole plate. (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 2.0].)
3. Remove the intake manifold. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0].)
4. Disconnect the KS connector.
5. Remove the KS. (See KS Installation Note.)
6. Install in the reverse order of removal.

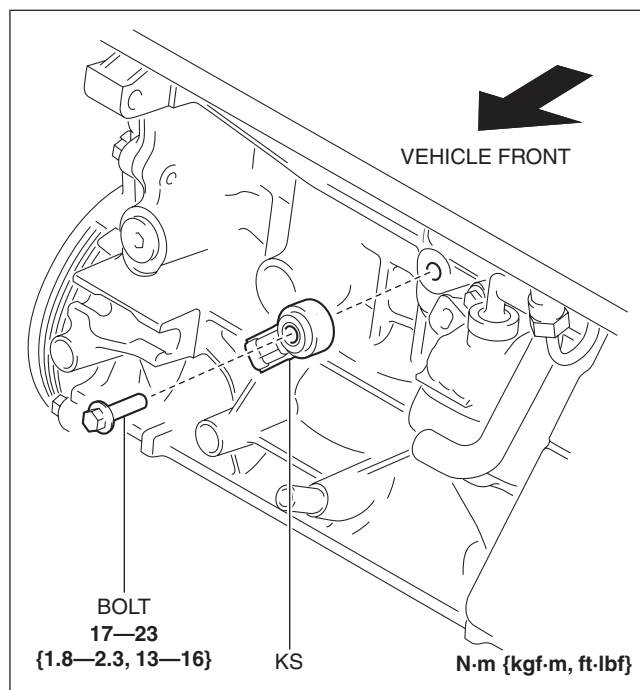

ac5wzw00003981

KS Installation Note

- Verify that there is no foreign matter caught between the KS unit and cylinder block.
- The direction of the KS connector is within the 90-degree angle range shown in the figure.

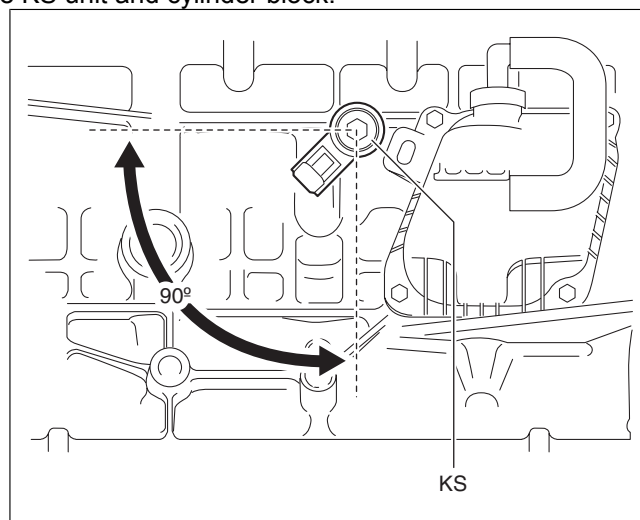

am3uuw00007245