



HVAC BASIC SYSTEM LOCATION INDEX

id071100801700

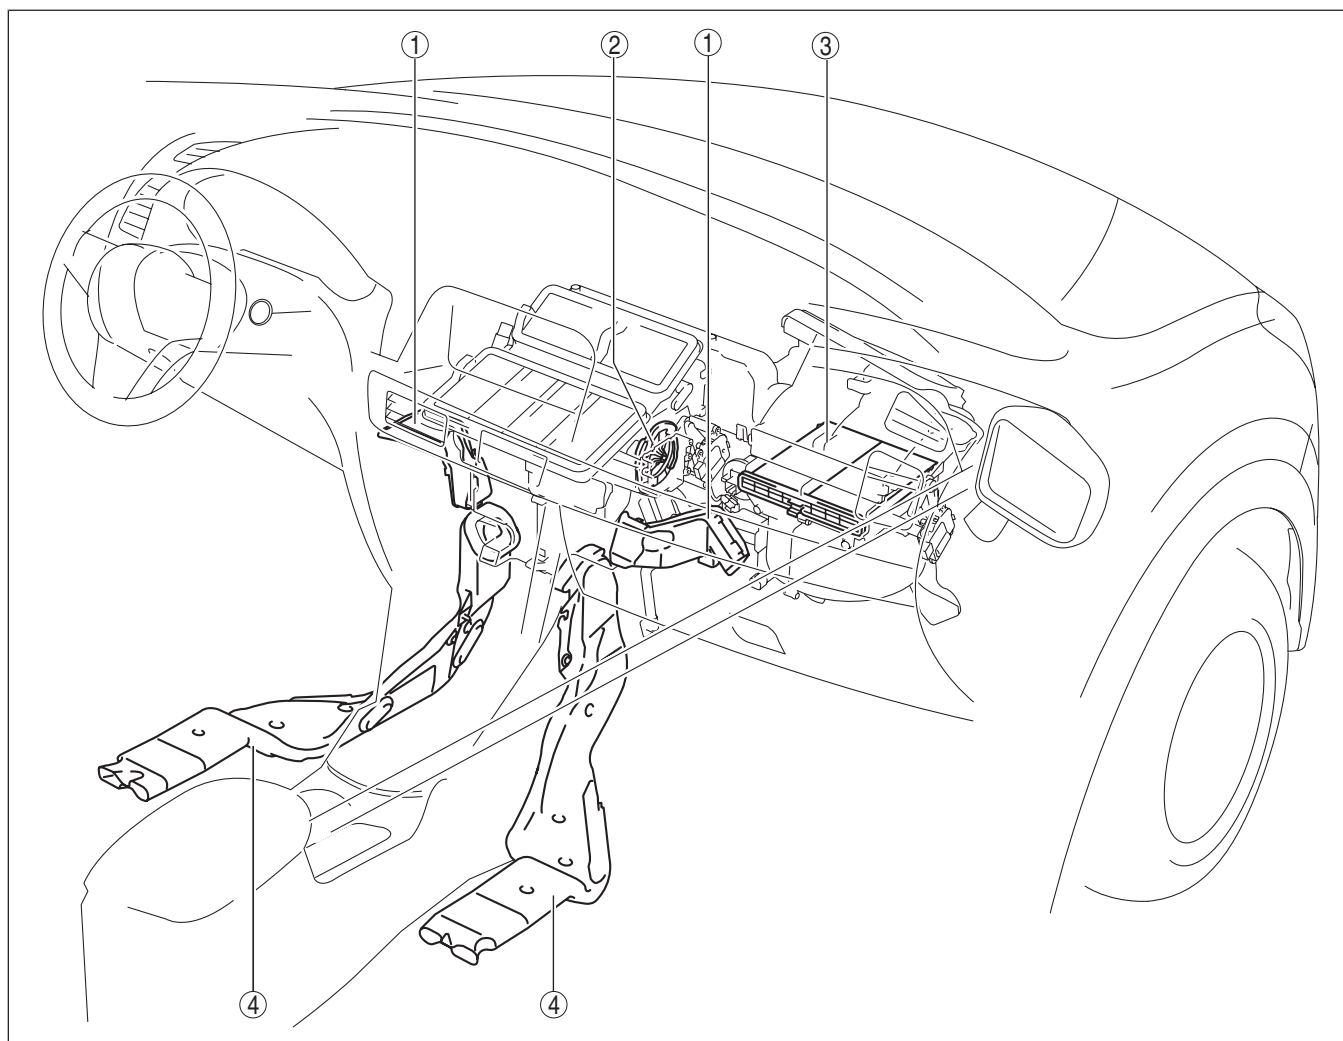


ac5wzw00001812

SKYACTIV-G 2.0, SKYACTIV-G 2.5

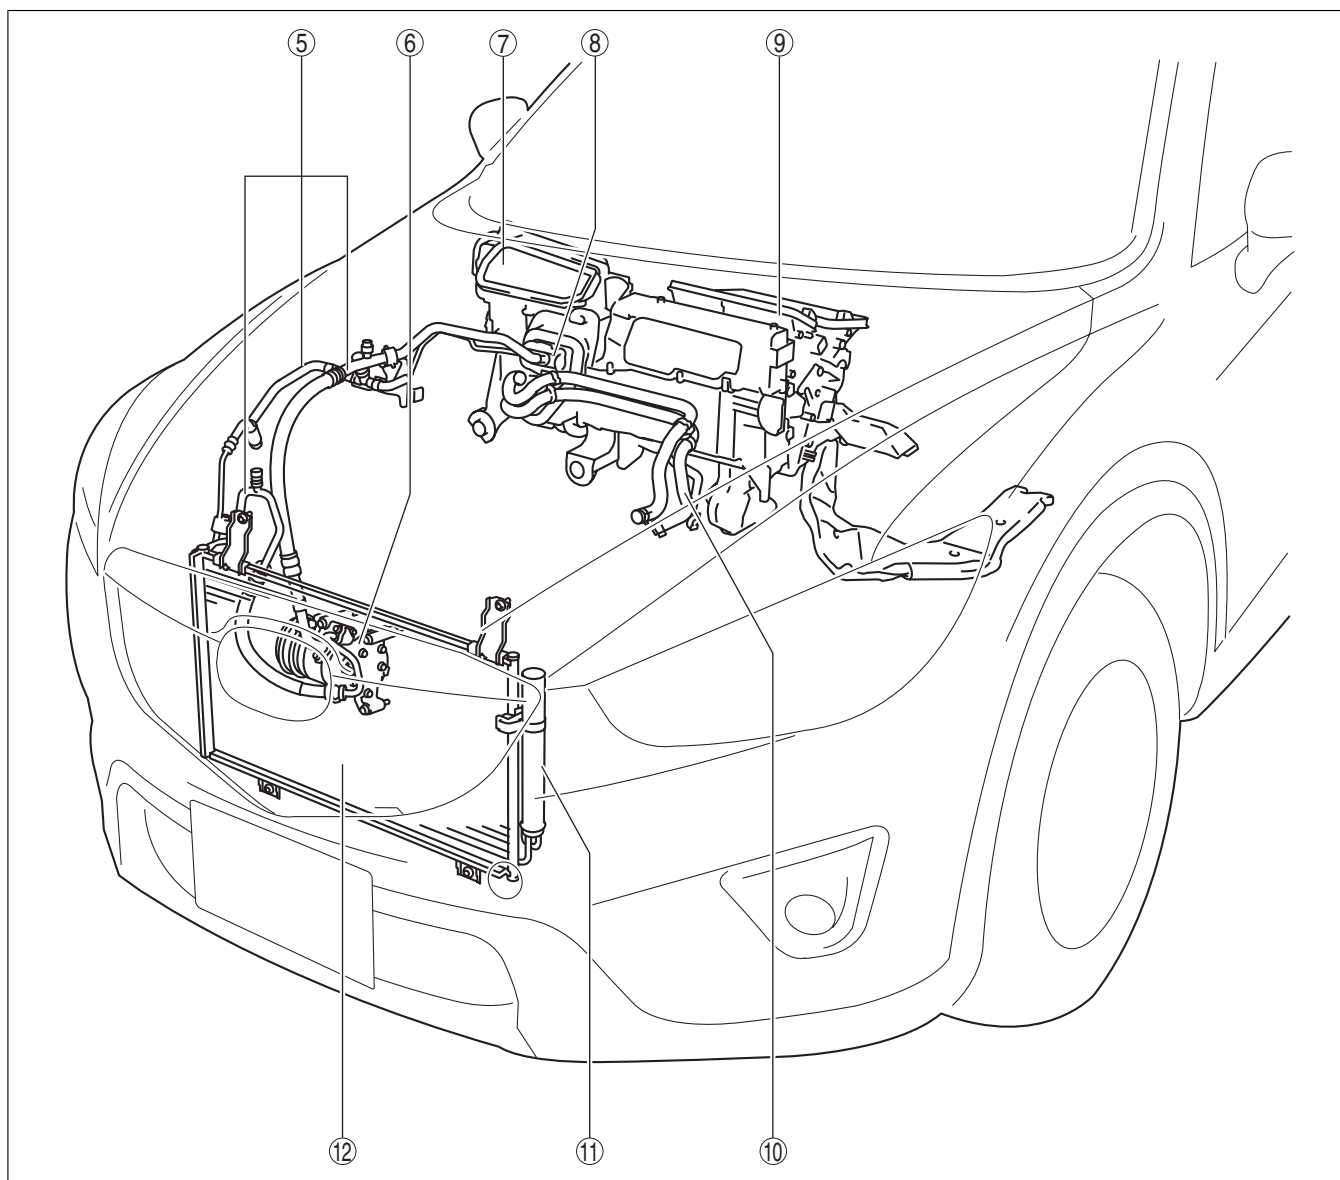

ac5wzw00001813

SKYACTIV-D 2.2

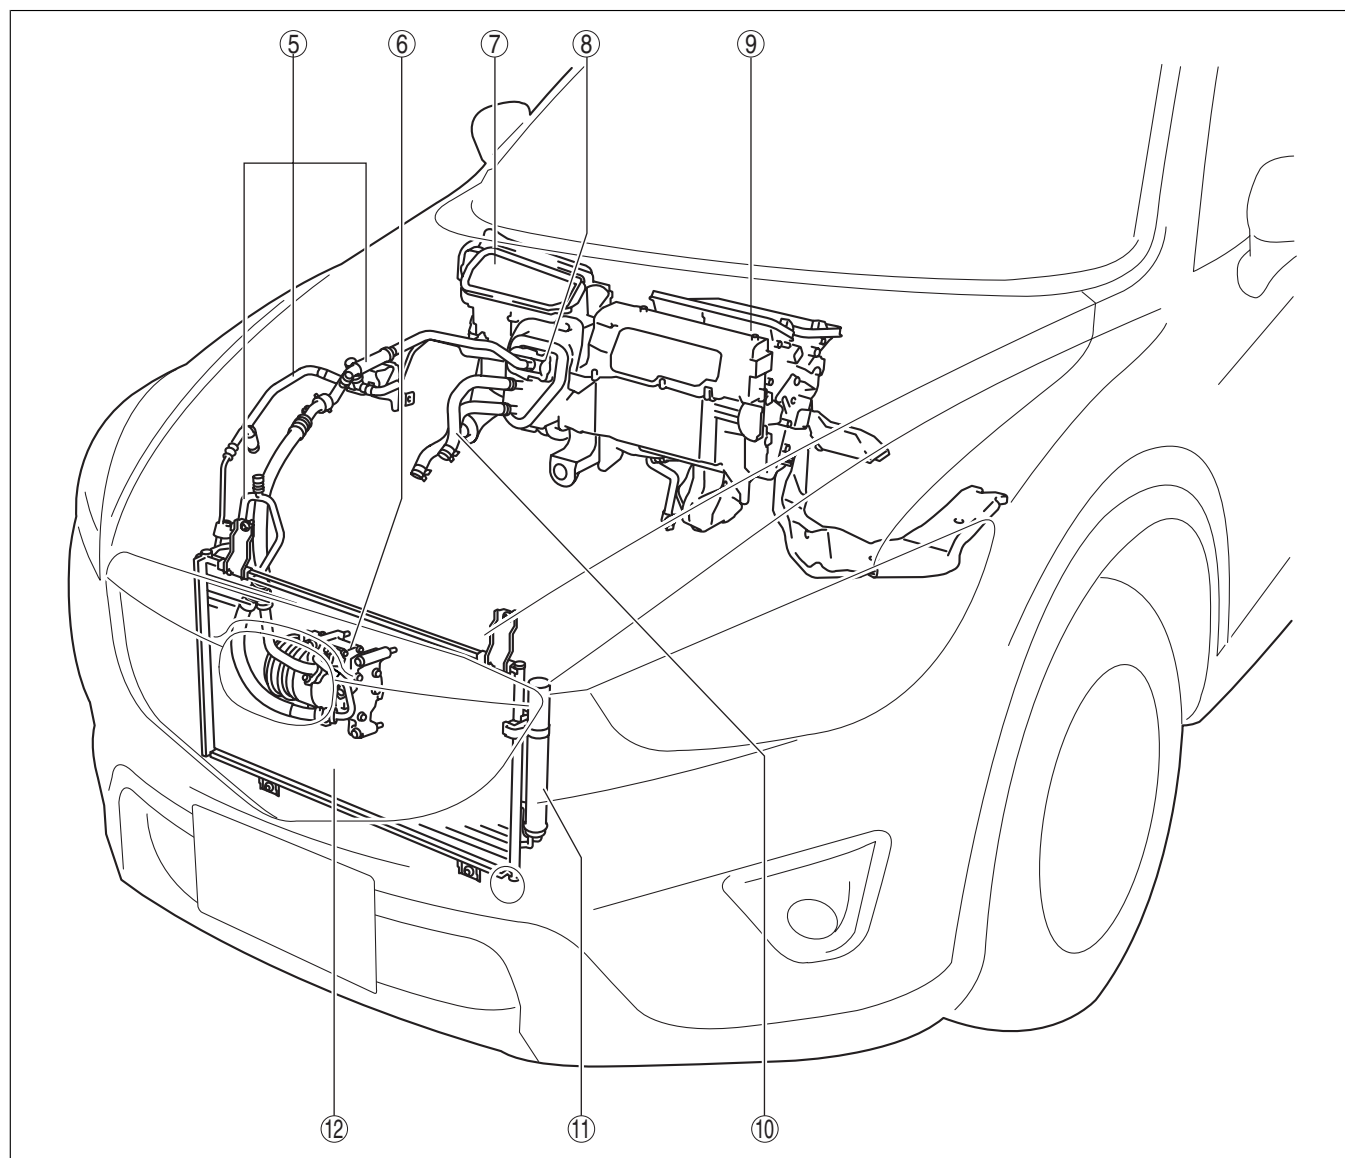

ac5wzw00001814

1	Front heat duct (See FRONT HEAT DUCT REMOVAL/ INSTALLATION.)
2	Airflow mode main link (See AIRFLOW MODE MAIN LINK REMOVAL/ INSTALLATION.)
3	Air filter (See AIR FILTER REMOVAL/INSTALLATION.) (See AIR FILTER INSPECTION.)
4	Rear heat duct (See REAR HEAT DUCT REMOVAL/ INSTALLATION.)
5	Refrigerant line (See REFRIGERANT LINE REMOVAL/ INSTALLATION.)
6	A/C compressor (See A/C COMPRESSOR REMOVAL/ INSTALLATION.)

7	A/C unit (See A/C UNIT REMOVAL/INSTALLATION.) (See A/C UNIT DISASSEMBLY/ASSEMBLY.) (See EXPANSION VALVE REMOVAL/ INSTALLATION.) (See EVAPORATOR INSPECTION.) (See HEATER CORE INSPECTION.)
8	Expansion valve (See EXPANSION VALVE REMOVAL/ INSTALLATION.)
9	Blower unit (See BLOWER UNIT REMOVAL/INSTALLATION.) (See BLOWER UNIT DISASSEMBLY/ASSEMBLY.)
10	Heater hose (See HEATER HOSE REMOVAL/INSTALLATION.)
11	Receiver/drier (See RECEIVER/DRIER REMOVAL/ INSTALLATION.)
12	Condenser (See CONDENSER REMOVAL/INSTALLATION.) (See CONDENSER INSPECTION.)