


CARGO COMPARTMENT LIGHT INSPECTION

id091800801800

1. Remove the cargo compartment light. (See CARGO COMPARTMENT LIGHT REMOVAL/INSTALLATION.)
2. Verify that the continuity between the cargo compartment light terminals is as indicated in the table.

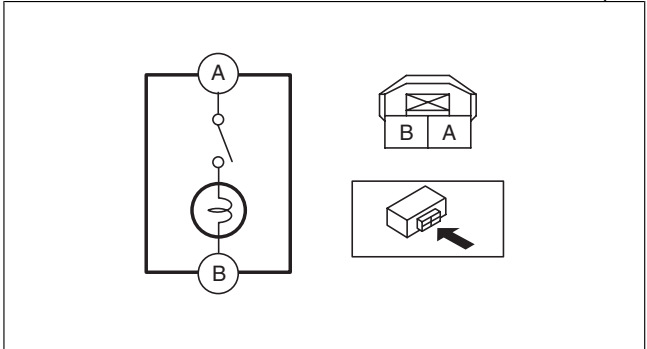

ac5wzw00005903

- If not as indicated in the table, replace the cargo compartment light. (See CARGO COMPARTMENT LIGHT REMOVAL/INSTALLATION.)

○ — (light bulb symbol) — ○ : Bulb

Switch position	Terminal	
	A	B
On	○ — (light bulb symbol) — ○	
Off		

ac5wzw00000427