


COOLANT RESERVE TANK REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0112h6801000

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.


1	Wiring harness
2	Hose
3	Coolant reserve tank (See Coolant Reserve Tank Removal Note.)

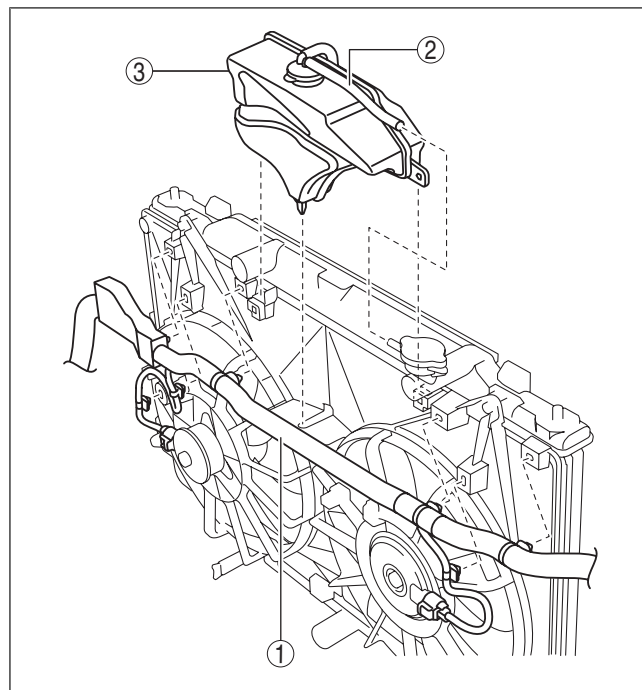

ac5uuw00000570

Coolant Reserve Tank Removal Note

1. Remove the coolant reserve tank from the radiator cowl tabs shown in the figure by lifting them with a flathead screwdriver.

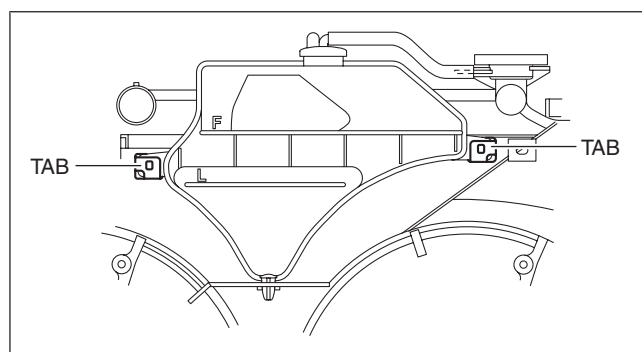

ac5uuw00000571