

FUEL INJECTOR RELAY [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0114z9135000

Purpose, Function

- Supplies power to the PCM for the fuel injector and spill valve control solenoid valve operation.

Construction


- The fuel injector relay is installed in the relay and fuse block.

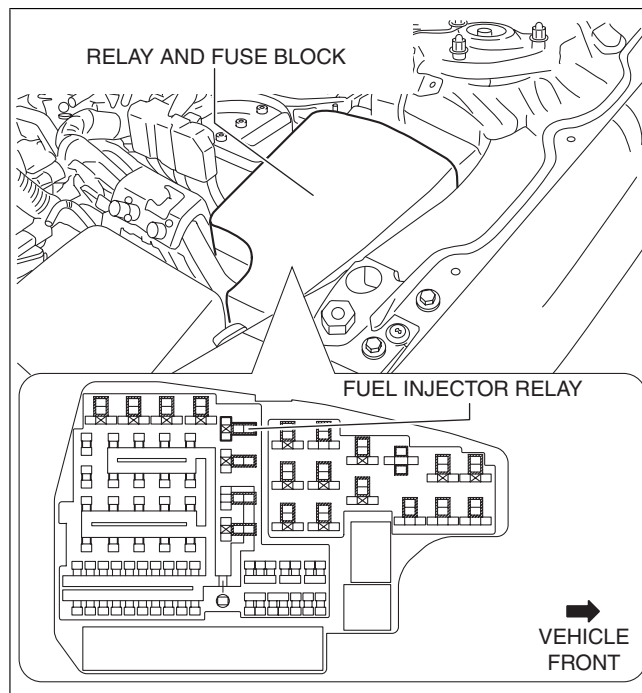

ac5wzn00002234

Operation

- When the ignition is switched ON, the battery voltage is supplied to the coil and the contact point is on, thus the battery voltage is supplied to the PCM.

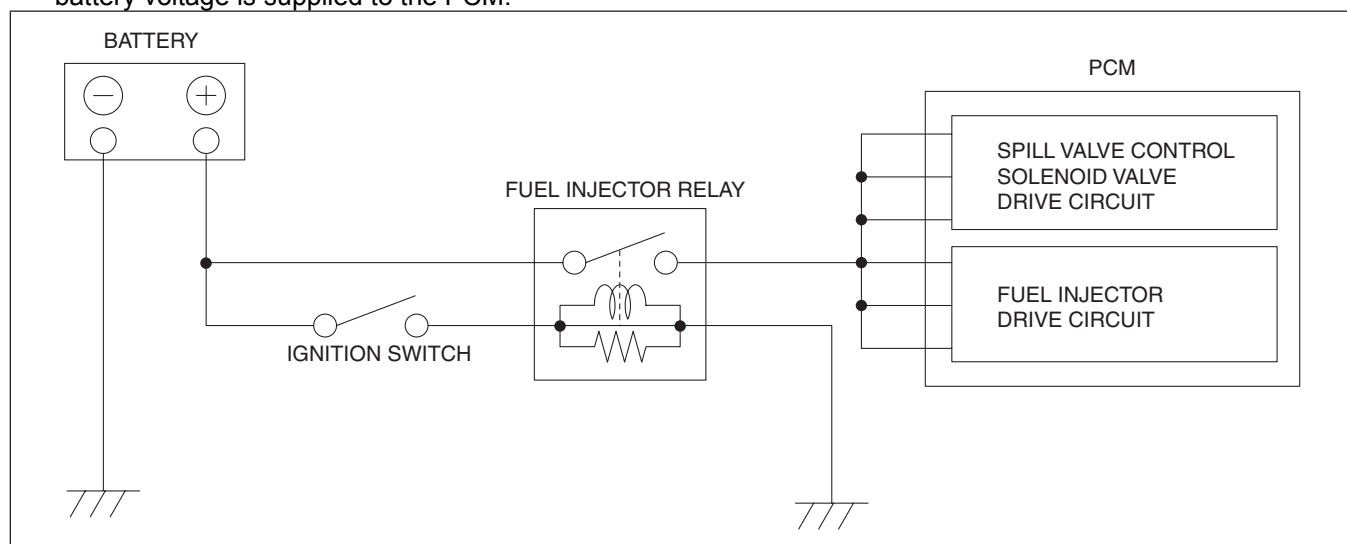

ac5wzn00002235

Fail-safe

- Function not equipped.