


BONNET DISASSEMBLY/ASSEMBLY

id091000899800

1. Disassemble in the order indicated in the table.

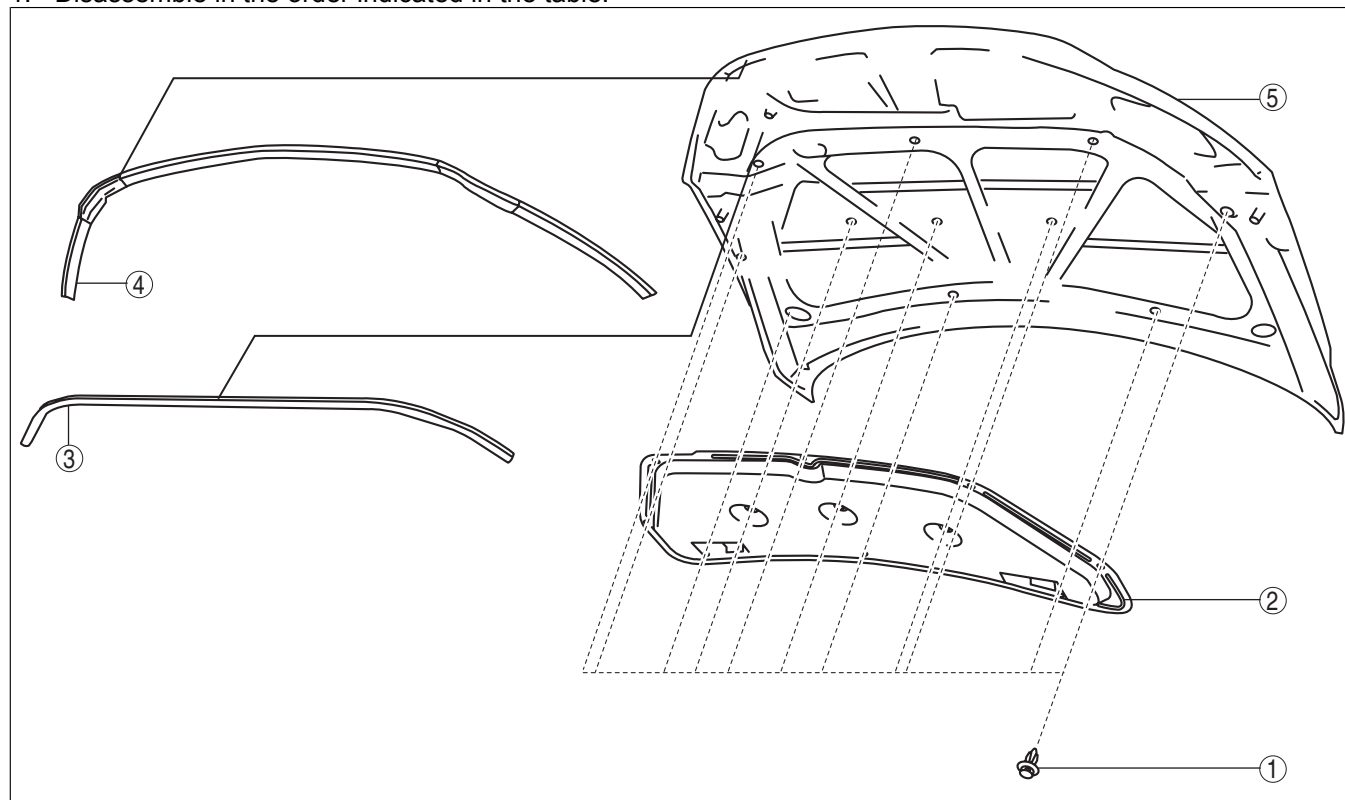

ac5wzw00002890

1	Fastener
2	Bonnet insulator
3	Shroud seaming welt
4	Weather strip parting seal
5	Bonnet component

2. Assemble in the reverse order of disassembly.