


## BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [D66M-R, D66MX-R]

id0515md159900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the air cleaner component (air cleaner, air hose). (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Remove in the order indicated in the table.

1	Connector
2	Back-up light switch
3	Gasket

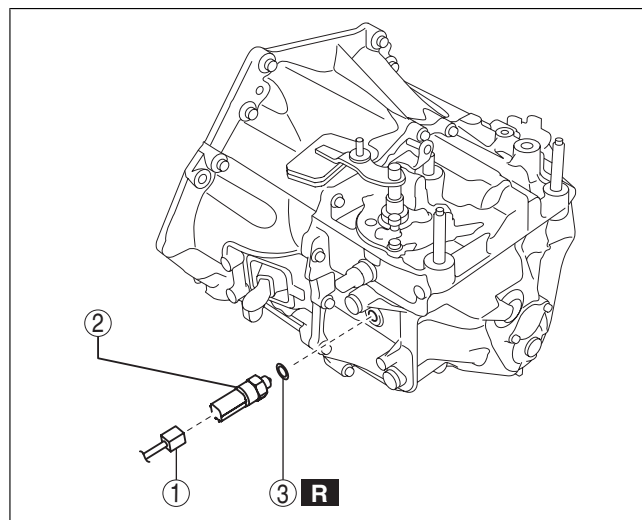


ac5wzw00006171

4. Install in the order indicated in the table.

1	Gasket
2	Back-up light switch
3	Connector

5. Install the air cleaner component (air cleaner, air hose). (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
6. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)

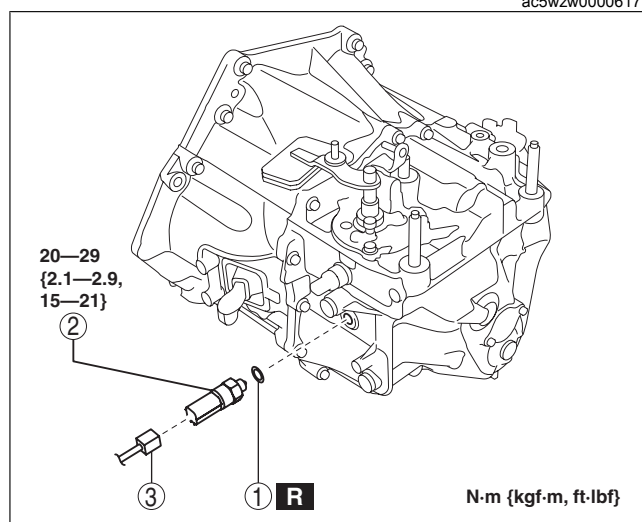

N·m {kgf·m, ft·lbf}

ac5wzw00006172