

NEUTRAL SWITCH INSPECTION [SKYACTIV-G 2.0]

id0140f4800800


Neutral switch No.1

Continuity Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0 (WITHOUT i-stop)].)
2. Remove the neutral switch. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
3. Inspect for continuity between neutral switch No.1 terminal A and B.
 - If not as specified, replace the neutral switch No. 1. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)

Specification

Measured condition	Continuity
Rod pushed	Continuity detected
Rod not pushed	No continuity

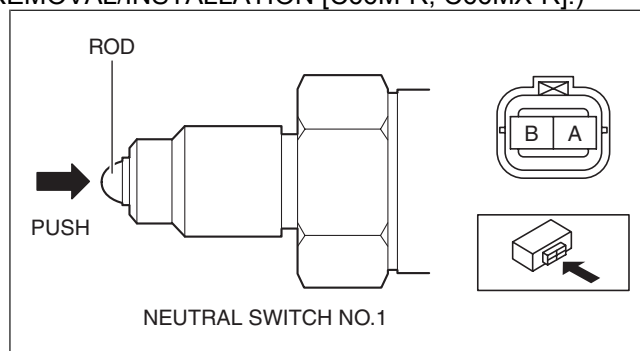

ac5wzw00000273


Neutral switch No.2

Continuity Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0].)
2. Remove the neutral switch No.2. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
3. Inspect for continuity between neutral switch No.2 terminal B and C.
 - If not as specified, replace the neutral switch No. 2. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].)

Specification

Measured condition	Continuity
Rod pushed	Continuity detected
Rod not pushed	No continuity

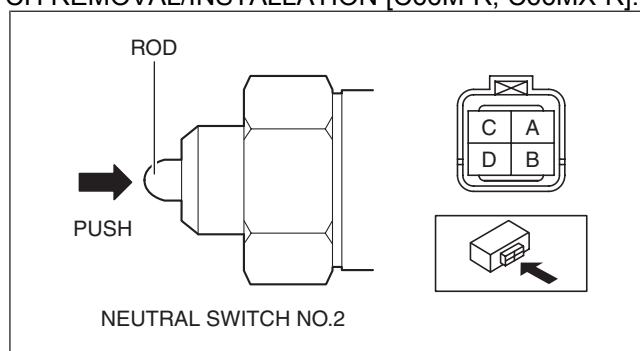

ac5wzw00000357