


## SELECTOR LEVER INSPECTION

id051800297000

1. Switch the ignition ON (engine off or on).
2. Perform the following procedures to inspect the selector lever.
  - If there is any malfunction, adjust the selector cable. (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)

(1) Verify that the selector lever can be operated as shown in the figure.


**L.H.D.**

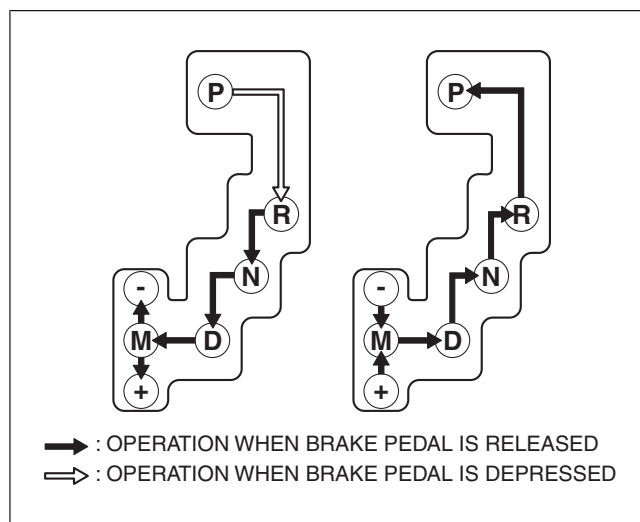

ac5wzw00003057

**R.H.D.**

- (2) Verify that the selector lever can be operated smoothly and moderately.

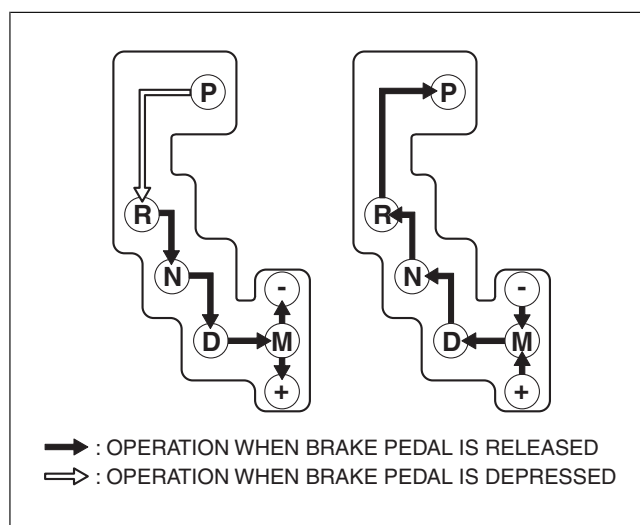

ac5wzw00000794