



Engine Compartment Side

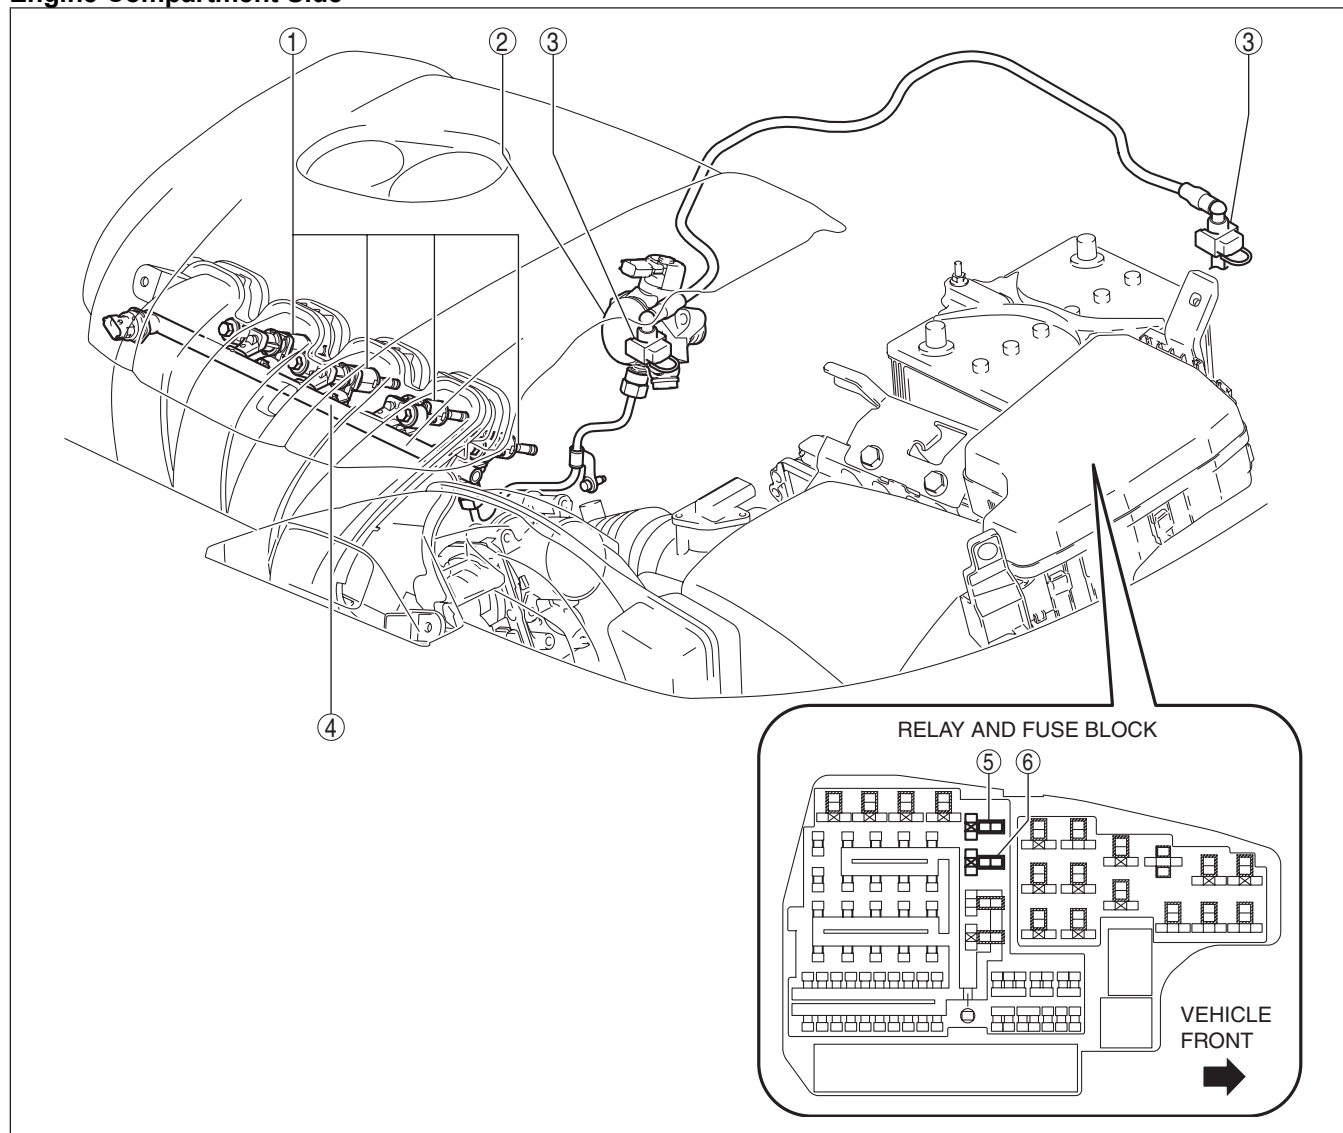

1	Fuel injector (See FUEL INJECTOR REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See FUEL INJECTOR INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2	High pressure fuel pump (See HIGH PRESSURE FUEL PUMP REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See HIGH PRESSURE FUEL PUMP INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
3	Quick release connector (See QUICK RELEASE CONNECTOR REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

4	Fuel distributor (See FUEL INJECTOR REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
5	Fuel injector relay (See RELAY INSPECTION.)
6	Fuel pump relay (See RELAY INSPECTION.)


Fuel Tank Side

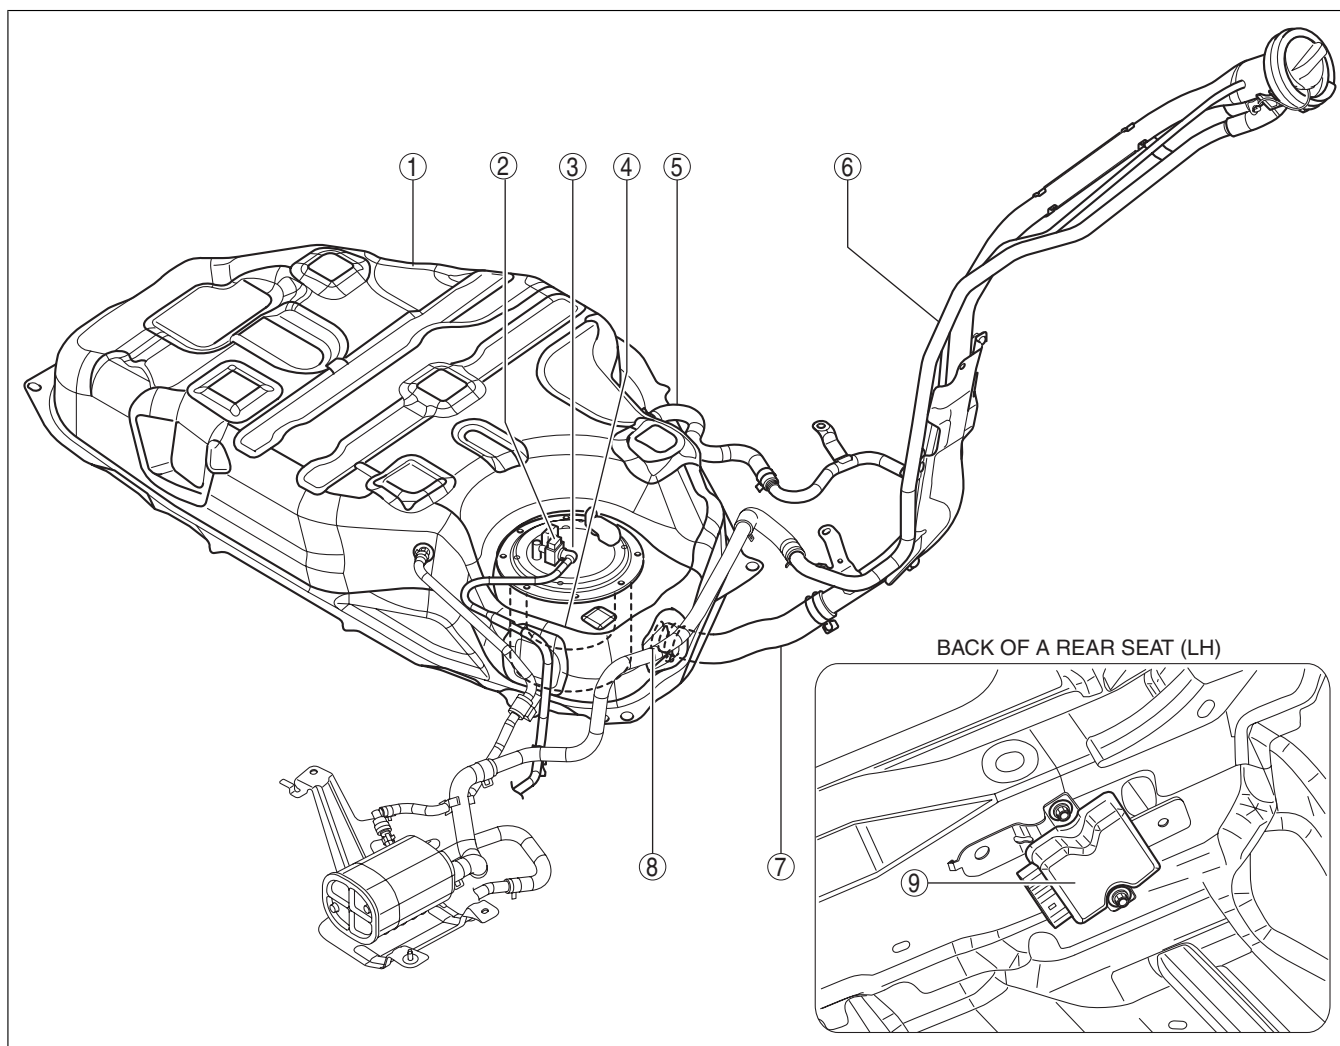

ac5wzw00001373

1	Fuel tank (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See FUEL TANK INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2	Quick release connector (See QUICK RELEASE CONNECTOR REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
3	Fuel pump unit (See FUEL PUMP UNIT REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See FUEL PUMP UNIT DISASSEMBLY/ASSEMBLY [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See FUEL PUMP UNIT INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
4	Fuel filter (high-pressure) (See FUEL FILTER (HIGH-PRESSURE) REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
5	Breather hose (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

6	Fuel-filler pipe (See FUEL-FILLER PIPE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
7	Joint hose (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
8	Non-return valve (See NON-RETURN VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
9	Fuel pump control module (See FUEL PUMP CONTROL MODULE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See FUEL PUMP CONTROL MODULE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

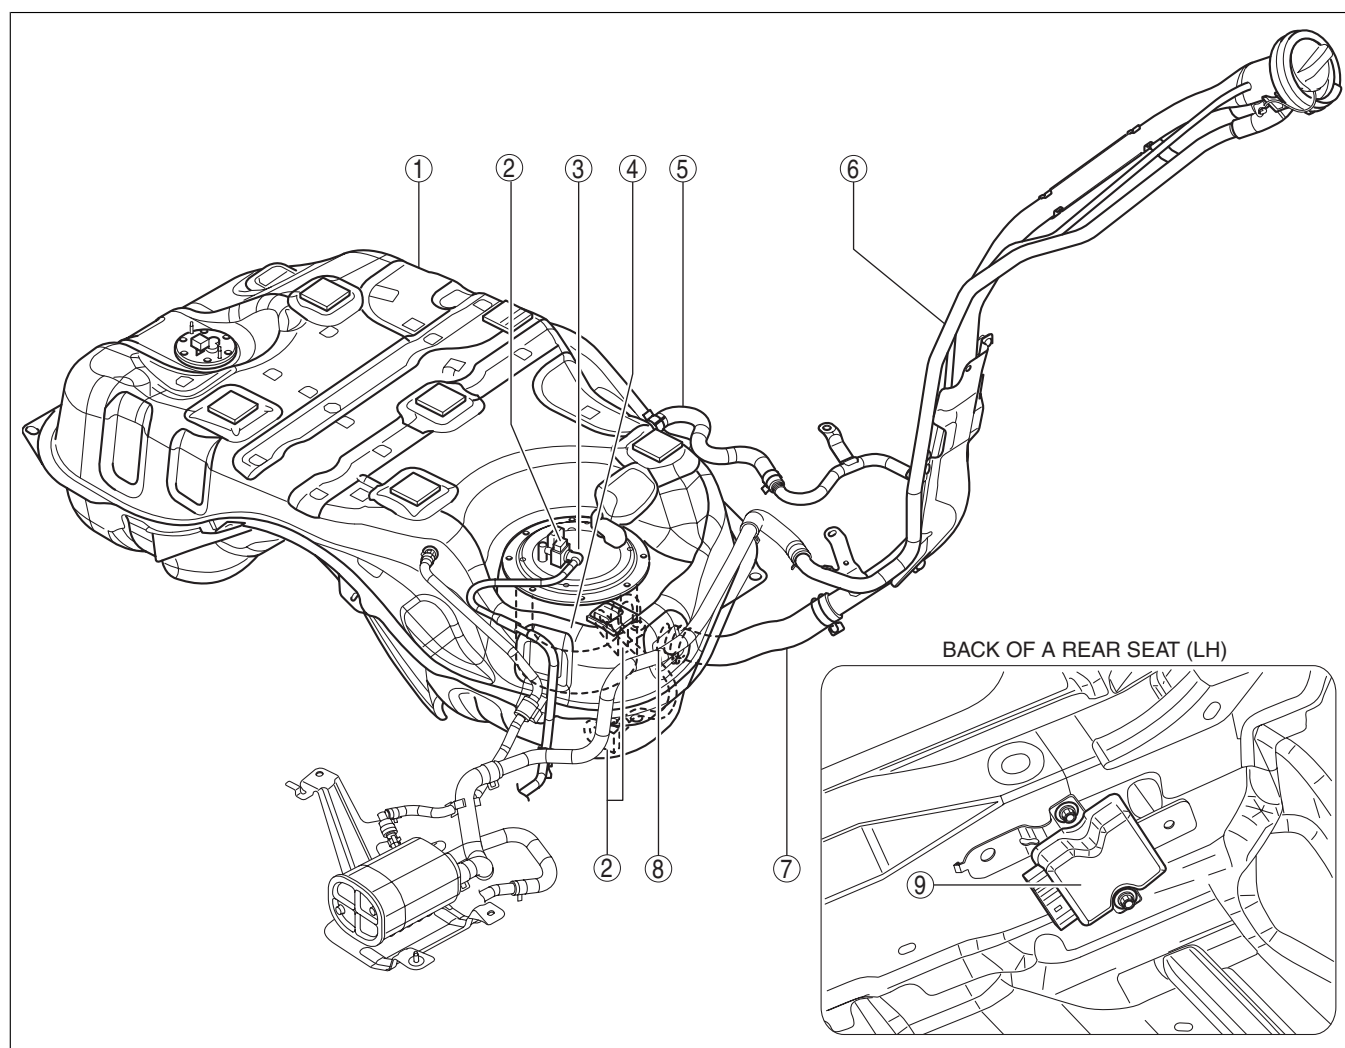

ac5wzw00001374

1	Fuel tank (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See FUEL TANK INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2	Quick release connector (See QUICK RELEASE CONNECTOR REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
3	Fuel pump unit (See FUEL PUMP UNIT REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See FUEL PUMP UNIT DISASSEMBLY/ASSEMBLY [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See FUEL PUMP UNIT INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
4	Fuel filter (high-pressure) (See FUEL FILTER (HIGH-PRESSURE) REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
5	Breather hose (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

6	Fuel-filler pipe (See FUEL-FILLER PIPE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
7	Joint hose (See FUEL TANK REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
8	Non-return valve (See NON-RETURN VALVE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
9	Fuel pump control module (See FUEL PUMP CONTROL MODULE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See FUEL PUMP CONTROL MODULE INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)