


## SEAL PLATE REMOVAL/INSTALLATION

id091000889000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the seal board upper. (See SEAL BOARD UPPER REMOVAL/INSTALLATION.)
3. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
4. Remove bolts A.

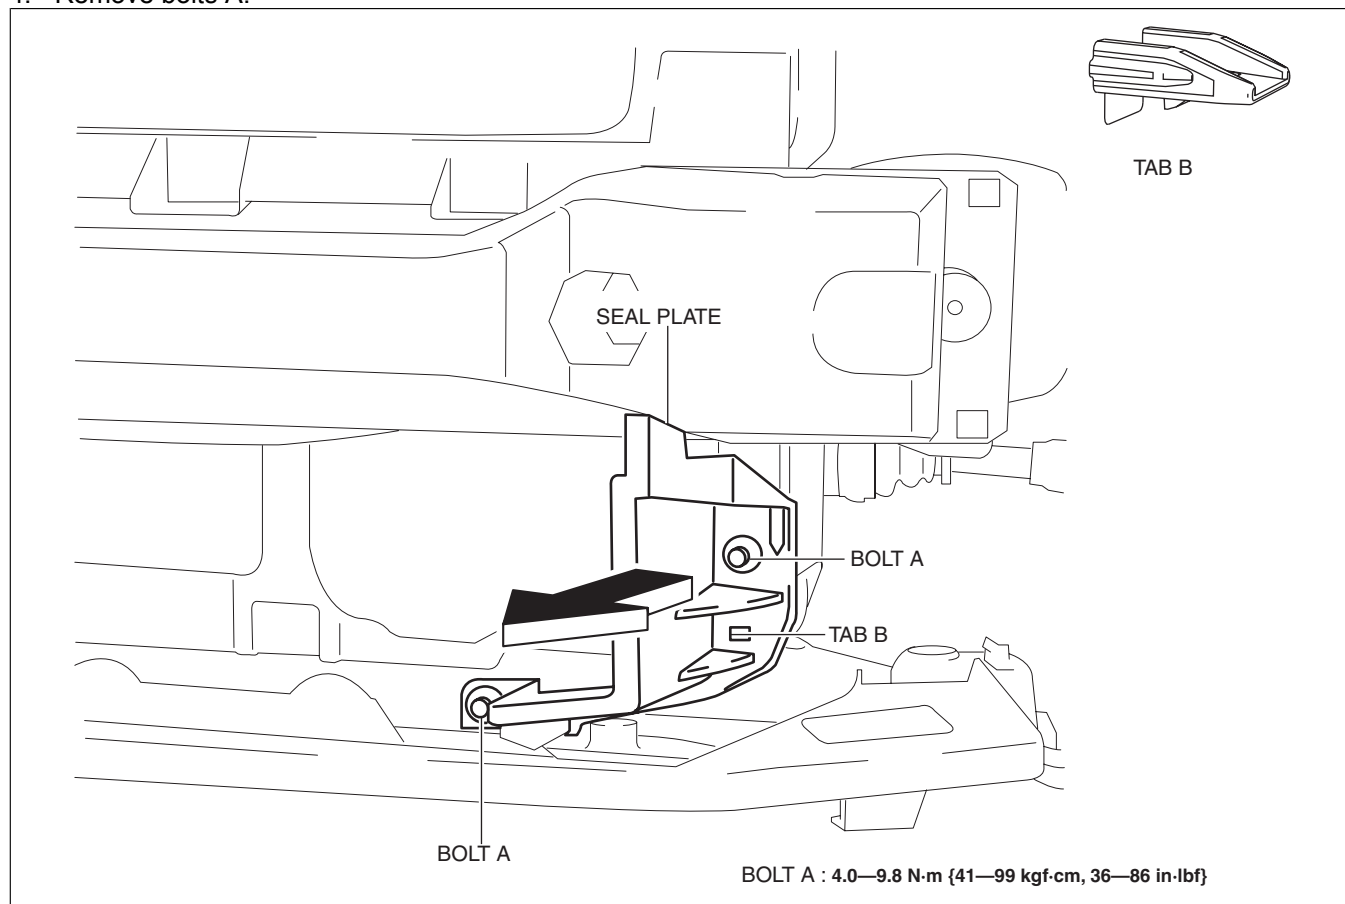

ac5wzw00003100

5. Remove the seal plate in the direction of the arrow shown in the figure while detaching tab B.
6. Install in the reverse order of removal.
7. Adjust the headlight aiming. (See HEADLIGHT AIMING.)
8. Adjust the front fog light aiming. (with front fog lights) (See FRONT FOG LIGHT AIMING.)