

DOOR AJAR WARNING DISPLAY

id092200026300

Purpose


- The door-ajar warning light notifies the driver that any door or the liftgate is open.

Function

- When the instrument cluster receives any of the following signals sent from the rear body control module (RBCM) via the CAN signal, the door-ajar warning light illuminates.
 - Door latch switch ON signal (door open)
 - Liftgate latch switch ON signal (liftgate open)

Construction


- The door-ajar warning is displayed in the TFT LCD of the instrument cluster.

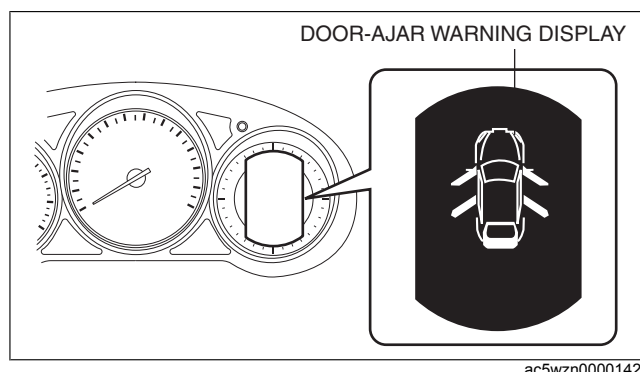

ac5wzn00001429

Operation

1. The instrument cluster receives (1) the door latch switch ON signal or liftgate latch switch ON signal from the rear body control module (RBCM).
2. When any received signal indicates that door is open, the instrument cluster displays (2) the door-ajar warning in the TFT LCD.

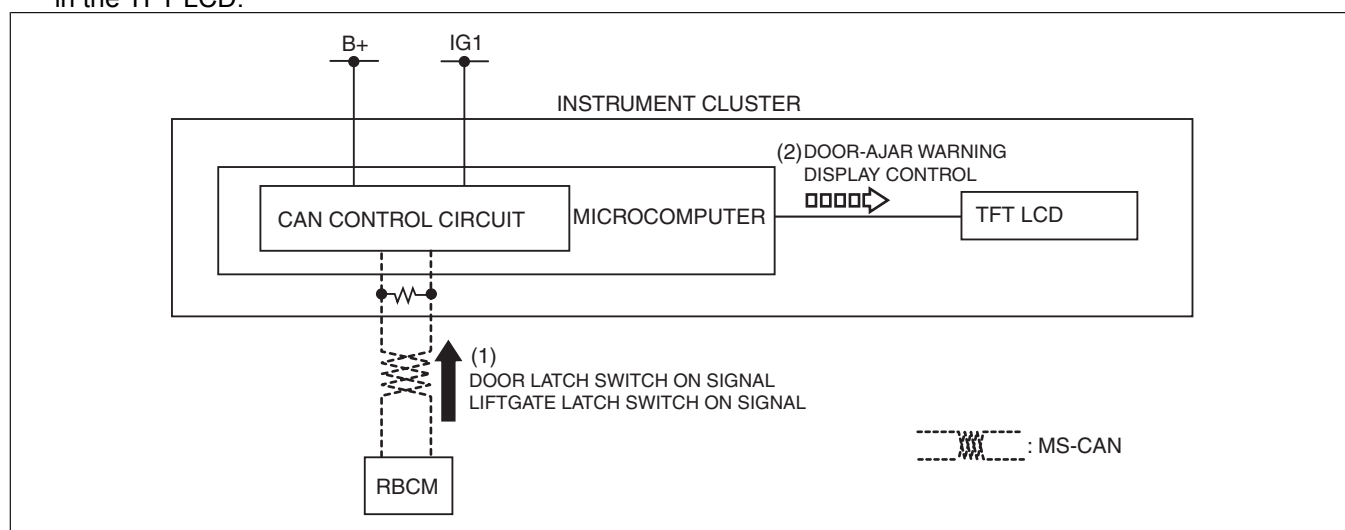

ac5wzn00001430

Fail-safe

- Function not equipped.