


# FRONT FOG LIGHT SWITCH INSPECTION


id091800803200

1. Remove the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)
2. Verify that the continuity between the light switch terminals is as indicated in the table.


## VEHICLES WITH LIGHT SWITCH ON LEFT SIDE

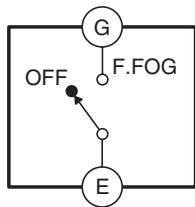


K J I H G F E D C B A



## VEHICLES WITH LIGHT SWITCH ON RIGHT SIDE

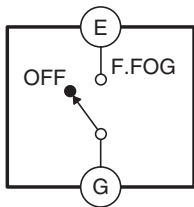

K J I H G F E D C B A



ac5wzw00000036

- If not as indicated in the table, replace the light switch. (See LIGHT SWITCH REMOVAL/INSTALLATION.)

○—○ : Continuity

Switch position	Terminal	
	E	G
F.FOG	○—○	
OFF		

ac5wzw000000448