

TIRE PRESSURE MONITORING SYSTEM WARNING LIGHT


id021200202000

Purpose, Function

- The tire pressure monitoring system warning light notifies the driver that it was determined that a tire pressure has decreased below the specified value based on the initialization.
- The tire pressure monitoring system warning light notifies the driver that a malfunction has occurred in the tire pressure monitoring system.

Construction, Operation

- The tire pressure monitoring system warning light is built into the instrument cluster.

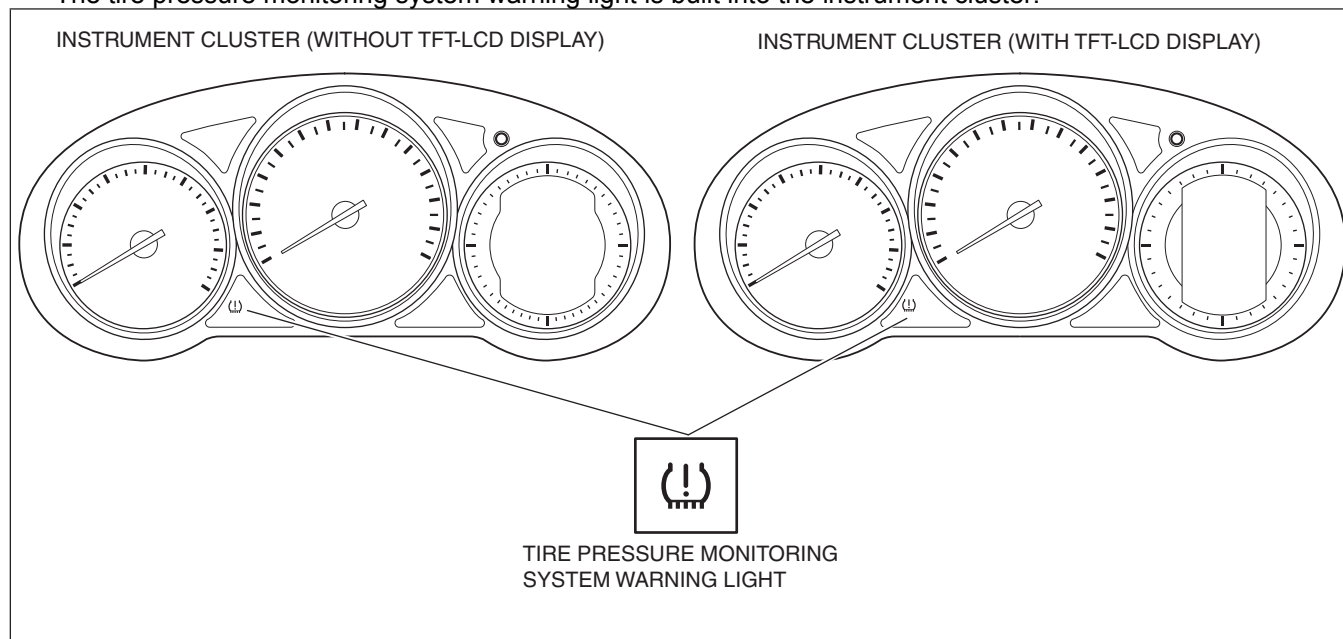

ac5wzn00001828

- The tire pressure monitoring system warning light illuminates/flashs based on the DSC HU/CM command.
- The tire pressure monitoring system warning light illuminates if a tire pressure decreases below the specified value based on the initialization.
- The tire pressure monitoring system warning light flashs for 1 min if a malfunction is detected in the tire pressure monitoring system, and then it illuminates.
- If the tire pressure monitoring system warning light has illuminated, it will turn off by performing the initialization. If the initialization is not performed, the light will illuminate again when the ignition is switched from off to ON.