


ANTENNA FEEDER NO.2 REMOVAL/INSTALLATION

id092000812300

Removal


1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Sunroof seaming welt (with sunroof system) (See SUNROOF UNIT REMOVAL/INSTALLATION.)
 - (2) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (3) Front map light (See MAP LIGHT REMOVAL/INSTALLATION.)
 - (4) Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
 - (5) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (6) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (7) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
 - (8) Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
 - (9) Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
 - (10) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
 - (11) Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
 - (12) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
 - (13) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
 - (14) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
 - (15) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (16) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (17) Headliner (See HEADLINER REMOVAL/INSTALLATION.)
3. Peel off the tape shown in the figure and remove antenna feeder No.2.

Without sunroof

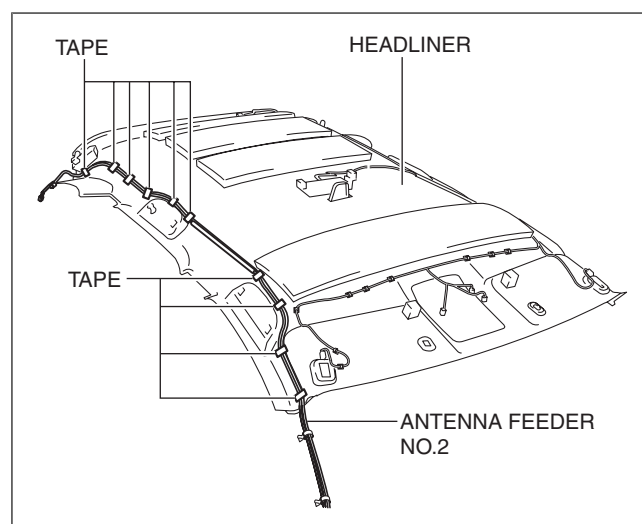

ac5jjw00000854

With sunroof

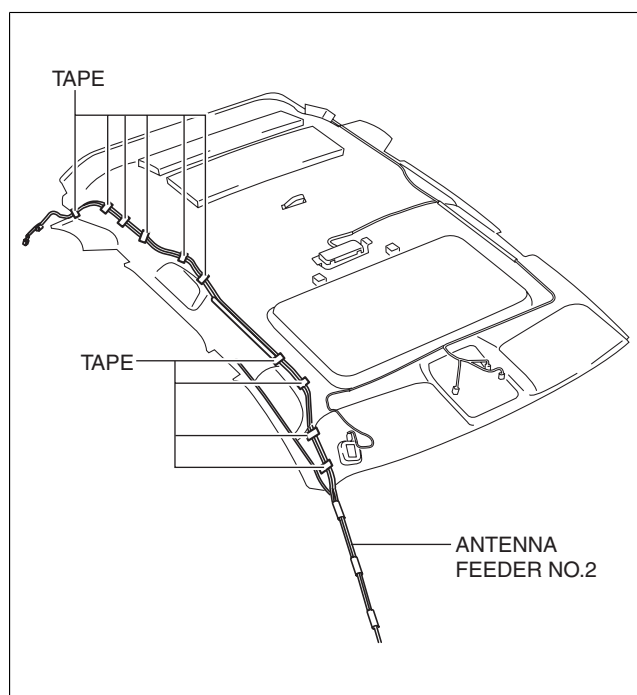


ac5jjw00000855

Installation


1. Affix tape shown in the figure and install antenna feeder No.2.

Without sunroof

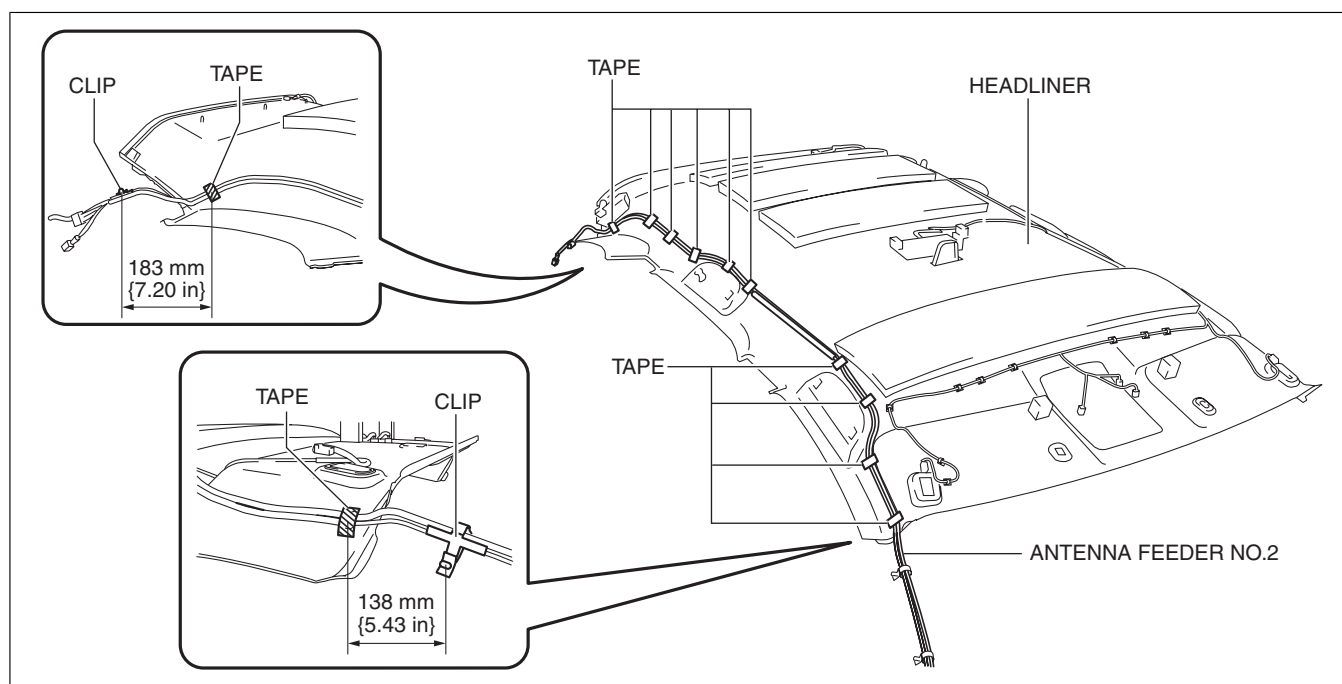

ac5jjw00000174

With sunroof

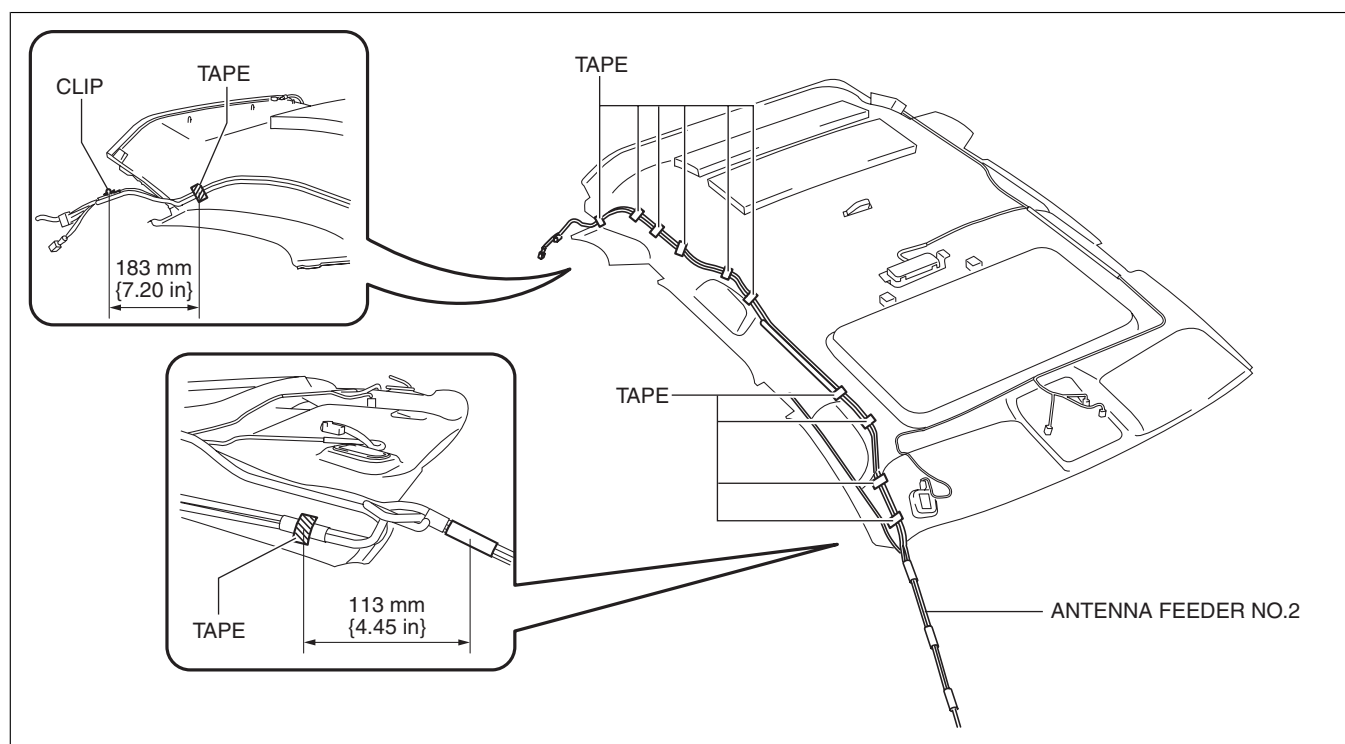

ac5jjw00000470

2. Install the following parts:
 - (1) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (2) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (3) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
 - (4) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
 - (5) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
 - (6) Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
 - (7) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
 - (8) Upper anchor installation bolt on the seat belt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
 - (9) Adjust anchor cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
 - (10) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
 - (11) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (12) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (13) Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
 - (14) Front map light (See MAP LIGHT REMOVAL/INSTALLATION.)
 - (15) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (16) Sunroof seaming welt (with sunroof system) (See SUNROOF UNIT REMOVAL/INSTALLATION.)
3. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)