


GLASS ANTENNA INSPECTION

id092000806200

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Partially peel back the seaming welt.
3. Remove the liftgate upper trim. (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
4. Disconnect antenna feeder connector. (See ANTENNA FEEDER NO.3 REMOVAL/INSTALLATION.)
5. Visually inspect the glass antenna for damage.
6. Verify that the continuity between the glass antenna terminals is as indicated in the table.

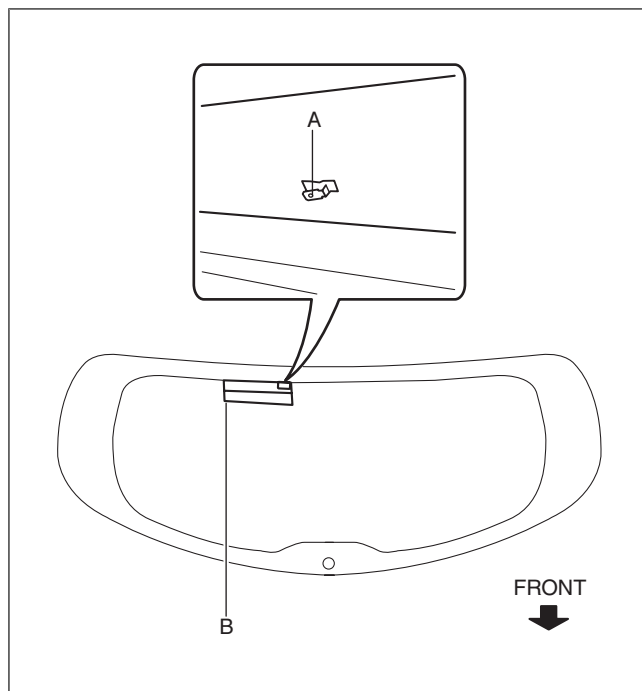

- If not as indicated in the table, repair the glass antenna. (See FILAMENT INSPECTION.)

○—○ : Continuity

| Test condition | Terminal | |
|---------------------|----------|-----|
| | A | B |
| Under any condition | ○—○ | ○—○ |

am3zzw00009853