

## OUTPUT GEAR [FW6A-EL, FW6AX-EL]


id0517h2352100

### Purpose/Function

- The output gear transmits the drive force transmitted from the primary gear and secondary gear to the differential.

### Construction

- The output gear is engaged with the secondary gear and rotates as a single unit.

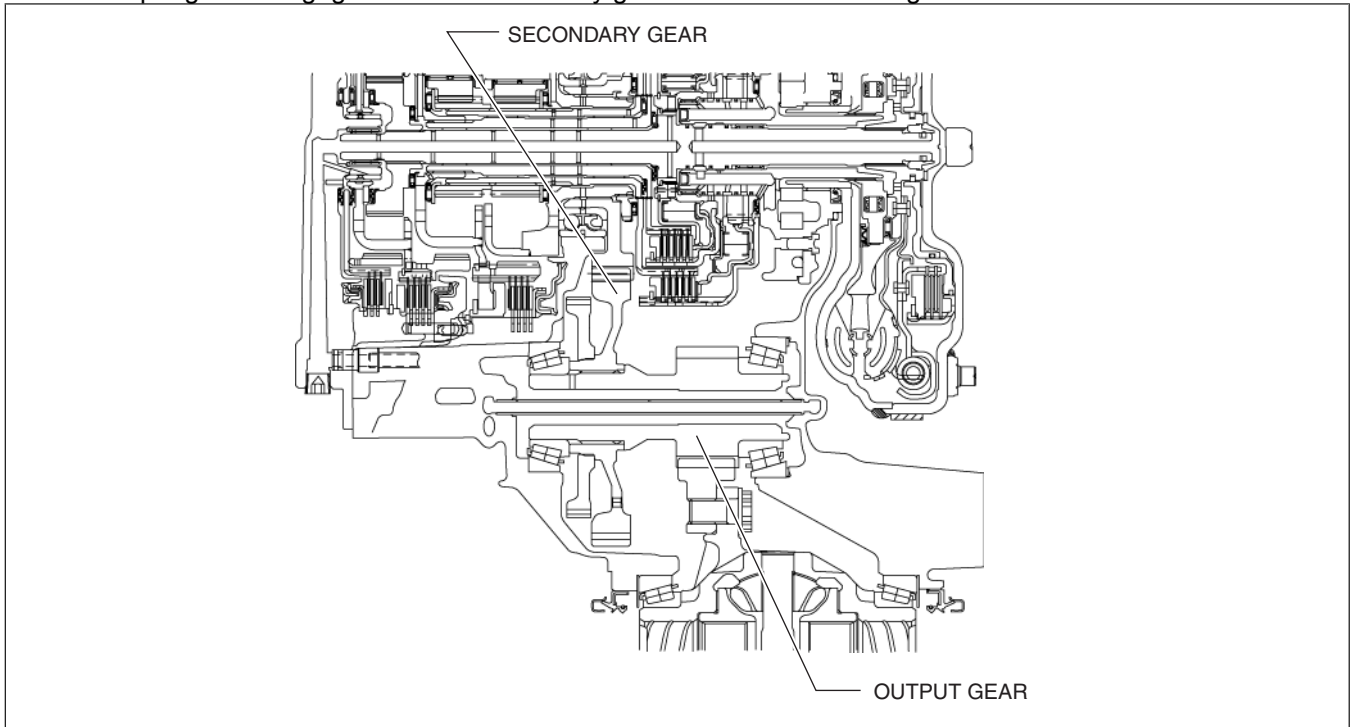

am3uun00002453