


## BODY PANELS LOCATION INDEX

id091000802600

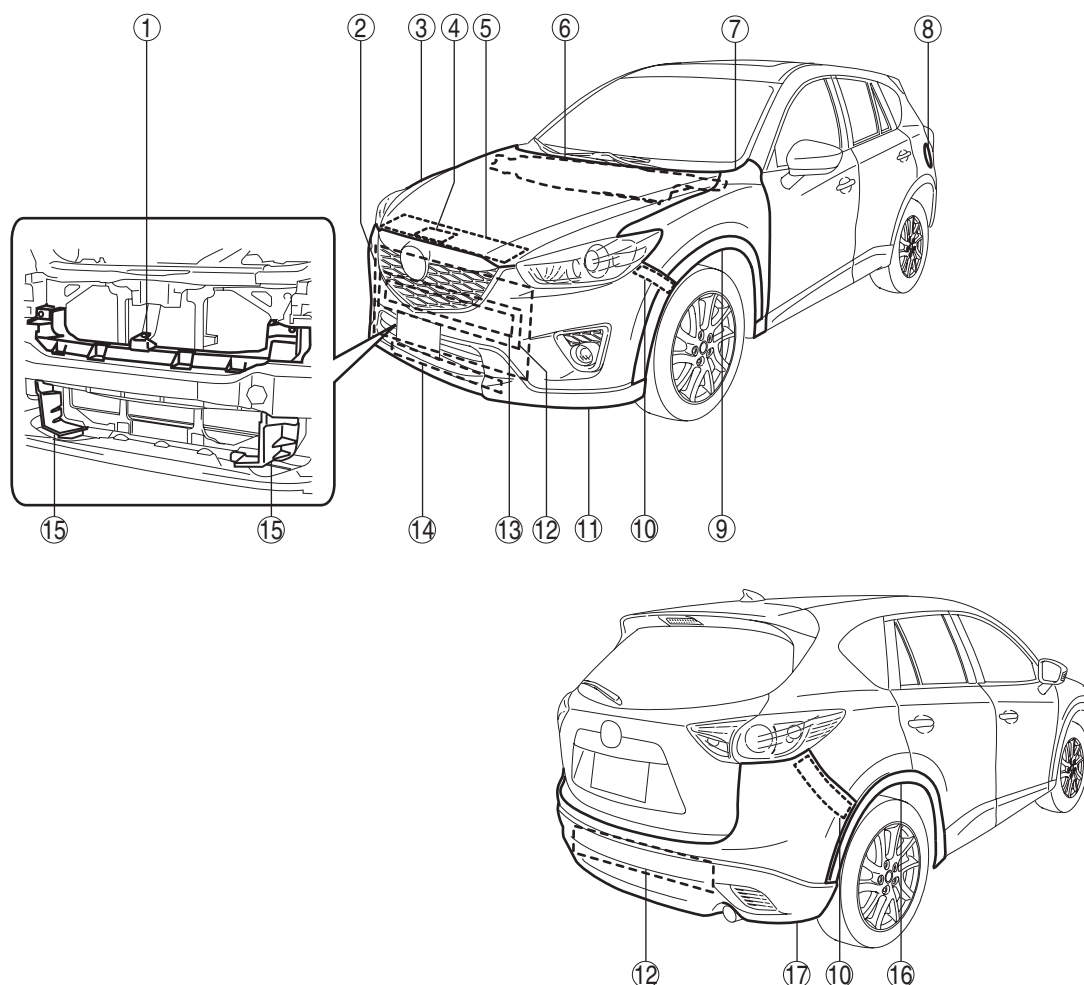

ac5uuw00002031

1	Set plate (See SET PLATE REMOVAL/INSTALLATION.)
2	Shroud panel (See SHROUD PANEL REMOVAL/INSTALLATION.)
3	Bonnet (See BONNET REMOVAL/INSTALLATION.) (See BONNET DISASSEMBLY/ASSEMBLY.) (See BONNET ADJUSTMENT.)
4	Seal board upper (See SEAL BOARD UPPER REMOVAL/INSTALLATION.)
5	Shroud upper member (See SHROUD UPPER MEMBER REMOVAL/INSTALLATION.)
6	Cowl panel (See COWL PANEL REMOVAL/INSTALLATION.)
7	Front fender panel (See FRONT FENDER PANEL REMOVAL/INSTALLATION.)
8	Fuel-filler lid (See FUEL-FILLER LID REMOVAL/INSTALLATION.) (See FUEL-FILLER LID ADJUSTMENT.)

9	Front over fender (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
10	Bumper slider (See BUMPER SLIDER REMOVAL/INSTALLATION.)
11	Front bumper (See FRONT BUMPER REMOVAL/INSTALLATION.) (See FRONT BUMPER DISASSEMBLY/ASSEMBLY.)
12	Bumper reinforcement (See FRONT BUMPER REINFORCEMENT REMOVAL/INSTALLATION.) (See REAR BUMPER REINFORCEMENT REMOVAL/INSTALLATION.)
13	Energy-absorbing form (See ENERGY-ABSORBING FORM REMOVAL/INSTALLATION.)
14	Bumper stiffener lower (See BUMPER STIFFENER LOWER REMOVAL/INSTALLATION.)
15	Seal plate (See SEAL PLATE REMOVAL/INSTALLATION.)

---

16	Rear over fender (See REAR OVER FENDER REMOVAL/ INSTALLATION.)
----	--

17	Rear bumper (See REAR BUMPER REMOVAL/INSTALLATION.) (See REAR BUMPER DISASSEMBLY/ ASSEMBLY.)
----	---