


THEFT-DETERRENT HORN REMOVAL/INSTALLATION

id091400517500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
 - (2) Rear scuff plate (RH) (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (3) Trunk side trim (RH) (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
3. Disconnect the connector.
4. Remove the bolt.
5. Remove the theft-deterrent horn.
6. Install in the reverse order of removal.

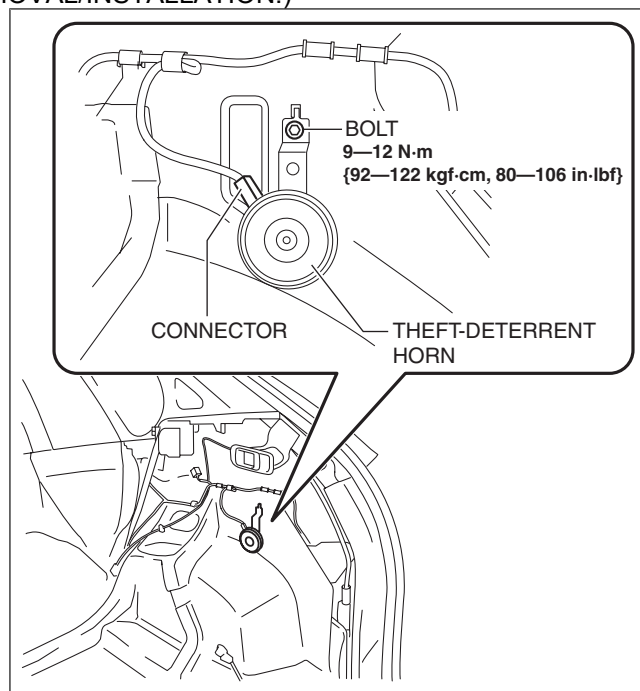

ac5jjw00001281